

Dell OpenManage™ Server Administrator Version 1.7

# Command Line Interface User's Guide



# Notes and Notices



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



**NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

---

**Information in this document is subject to change without notice.**

**© 2001-2003 Dell Inc. All rights reserved.**

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, *PowerEdge*, and *Dell OpenManage* are trademarks of Dell Inc.; *Microsoft*, *Windows*, *MS-DOS*, and *Windows NT* are registered trademarks of Microsoft Corporation; *Red Hat* is a registered trademark of Red Hat, Inc.; *Novell* and *NetWare* are registered trademarks of Novell, Inc.; *Intel* and *Pentium* are registered trademarks and *Itanium*, *Intel386*, and *Xeon* are trademarks of Intel Corporation; *VESA* is a registered trademark of Video Electronic Standards Association; *UNIX* is a registered trademark of The Open Group in the United States and other countries; *OS/2* is a registered trademark of International Business Machines Corporation. Portions of the diagnostics information were reprinted with permission from PC-Doctor, Inc.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

**Dec 2003**

# Contents

1	Introduction	
	<b>Using CLI Commands from Windows Command Prompts</b>	<b>11</b>
	<b>Primary CLI Commands</b>	<b>11</b>
	<b>CLI Error Checking and Error Messages</b>	<b>13</b>
	Using the Correct Command Line	13
	Success Messages	13
	Failure Messages	13
	<b>Scripting and Comparing With the CLI</b>	<b>14</b>
	<b>Command Syntax Overview</b>	<b>15</b>
2	omhelp: Getting Help With CLI Commands	
	<b>Example Help Commands</b>	<b>17</b>
3	omdiag: Using the Diagnostic Service	
	<b>omdiag about</b>	<b>23</b>
	<b>omdiag about details=true</b>	<b>24</b>
	<b>omdiag chassis</b>	<b>24</b>
	omdiag chassis -?	24
	omdiag chassis cmos	25
	omdiag chassis cpu	25
	omdiag chassis memory	25
	omdiag chassis modem	26
	omdiag chassis network	26
	omdiag chassis parallelport	28
	omdiag chassis pci	28
	omdiag chassis serialport	28
	omdiag chassis usb	29
	omdiag chassis video	29
	<b>omdiag storage</b>	<b>29</b>

omdiag storage -? . . . . .	29
omdiag storage adaptecraidctr . . . . .	29
omdiag storage lsiraidctr . . . . .	30
omdiag storage cddrive . . . . .	31
omdiag storage dvddrive . . . . .	31
omdiag storage floppy . . . . .	32
omdiag storage harddrive (Red Hat Linux only) . . . . .	32
omdiag storage idehd (Windows only) . . . . .	33
omdiag storage ideraidctr . . . . .	34
omdiag storage ideraidhd . . . . .	35
omdiag storage lsdrive . . . . .	35
omdiag storage raidhd (Windows only) . . . . .	36
omdiag storage scsictl . . . . .	37
omdiag storage scsihd (Windows only) . . . . .	37
omdiag storage smart (Red Hat Linux only) . . . . .	38
omdiag storage tapedrive (Red Hat Linux only) . . . . .	38
omdiag storage tapedrive (Windows only) . . . . .	39
omdiag storage tapeautomation (Windows only) . . . . .	39
omdiag storage lsiraidbattery . . . . .	39
omdiag storage cdrw . . . . .	40
<b>omdiag system</b> . . . . .	<b>40</b>
omdiag system -? . . . . .	40

## 4 omreport: Viewing System Status Using the Instrumentation Service

<b>Conventions for Parameter Tables</b> . . . . .	<b>41</b>
<b>omreport Command Summary</b> . . . . .	<b>41</b>
<b>Help With the omreport Command</b> . . . . .	<b>44</b>
<b>omreport about</b> . . . . .	<b>44</b>
<b>omreport chassis Commands</b> . . . . .	<b>45</b>
omreport chassis . . . . .	45
omreport chassis acswitch . . . . .	46
omreport chassis bios . . . . .	47
omreport chassis biossetup . . . . .	47
omreport chassis currents . . . . .	51
omreport chassis fans . . . . .	51

omreport chassis fancontrol . . . . .	51
omreport chassis firmware . . . . .	52
omreport chassis info . . . . .	52
omreport chassis intrusion . . . . .	53
omreport chassis leds . . . . .	53
omreport chassis memory . . . . .	53
omreport chassis nics . . . . .	54
omreport chassis ports . . . . .	55
omreport chassis powerbutton. . . . .	55
omreport chassis processors . . . . .	55
omreport chassis pwrsupplies . . . . .	57
omreport chassis slots . . . . .	58
omreport chassis temps . . . . .	58
omreport chassis volts . . . . .	58
<b>omreport system Commands . . . . .</b>	<b>59</b>
omreport system . . . . .	59
Commands for Viewing Logs. . . . .	59
omreport system alertaction . . . . .	60
omreport system assetinfo. . . . .	61
omreport system events . . . . .	61
omreport system operatingsystem . . . . .	62
omreport system recovery . . . . .	62
omreport system shutdown . . . . .	63
omreport system summary. . . . .	63
omreport system thrmshutdown . . . . .	66
omreport system version. . . . .	66

## 5 omreport: Using the Storage Reports

<b>Conventions for Parameter Tables . . . . .</b>	<b>69</b>
<b>omreport storage Command Summary . . . . .</b>	<b>69</b>
<b>omreport storage Commands . . . . .</b>	<b>70</b>
omreport storage arraydisks. . . . .	70
omreport storage arrays. . . . .	71
omreport storage enclosureinfo . . . . .	73
omreport storage enclosures . . . . .	74
omreport storage osdiskinfo . . . . .	74
omreport storage osdisks . . . . .	76

omreport storage volumes . . . . .	77
------------------------------------	----

## 6 omupdate: Using the Update Service for BIOS, Firmware, and Device Drivers

<b>omupdate Command Summary . . . . .</b>	<b>79</b>
<b>Help With the omupdate Command . . . . .</b>	<b>80</b>
<b>PERC Device Types . . . . .</b>	<b>81</b>
<b>omupdate about . . . . .</b>	<b>81</b>
<b>omupdate biosupdate . . . . .</b>	<b>82</b>
<b>omupdate drac2fwupdate . . . . .</b>	<b>82</b>
<b>omupdate fwupdate . . . . .</b>	<b>82</b>
<b>omupdate percdrupdate . . . . .</b>	<b>83</b>
<b>omupdate percfwupdate . . . . .</b>	<b>83</b>
<b>omupdate racfwupdate . . . . .</b>	<b>84</b>
<b>omupdate version . . . . .</b>	<b>84</b>

## 7 omconfig: Managing Components Using the Instrumentation Service

<b>Conventions for Parameter Tables . . . . .</b>	<b>87</b>
<b>omconfig Command Summary . . . . .</b>	<b>87</b>
<b>Help With the omconfig Command . . . . .</b>	<b>90</b>
<b>omconfig about . . . . .</b>	<b>90</b>
<b>omconfig chassis . . . . .</b>	<b>91</b>
omconfig chassis acswitch . . . . .	91
omconfig chassis biossetup . . . . .	92
omconfig chassis currents. . . . .	96
omconfig chassis fans. . . . .	97
omconfig chassis fancontrol. . . . .	98
omconfig chassis info . . . . .	99
omconfig chassis leds. . . . .	99

omconfig chassis memorymode . . . . .	100
omconfig chassis powerbutton . . . . .	101
omconfig chassis temps . . . . .	101
omconfig chassis volts . . . . .	102
<b>omconfig preferences . . . . .</b>	<b>103</b>
omconfig preferences snmp . . . . .	103
omconfig preferences useraccess . . . . .	104
omconfig preferences cdvformat . . . . .	105
<b>omconfig system . . . . .</b>	<b>105</b>
omconfig system alertaction . . . . .	105
Commands for Clearing Logs . . . . .	107
omconfig system events . . . . .	108
omconfig system webserver . . . . .	110
omconfig system recovery . . . . .	110
omconfig system shutdown . . . . .	111
omconfig system thrmsshutdown . . . . .	112

## 8 omconfig system assetinfo: Editing Cost of Ownership Values

<b>omconfig System Asset Info Overview . . . . .</b>	<b>113</b>
User Level Required for Adding Asset Information . . . . .	113
<b>Adding Acquisition Information . . . . .</b>	<b>113</b>
Example Commands for Adding Acquisition Information . . . . .	114
<b>Adding Depreciation Information . . . . .</b>	<b>115</b>
Example Commands for Adding Depreciation Information . . . . .	115
<b>Adding Extended Warranty Information . . . . .</b>	<b>116</b>
Example Command for Adding Extended Warranty Information . . . . .	116
<b>Adding Lease Information . . . . .</b>	<b>117</b>
Example Command for Adding Lease Information . . . . .	117
<b>Adding Maintenance Information . . . . .</b>	<b>118</b>
Example Command for Adding Maintenance Information . . . . .	118
<b>Adding Outsource Information . . . . .</b>	<b>119</b>
Example Command for Adding Outsource Information . . . . .	119
<b>Adding Owner Information . . . . .</b>	<b>120</b>
Example Command for Adding Owner Information . . . . .	120

<b>Adding Service Contract Information</b> . . . . .	120
Example Command for Adding Service Information . . . . .	121
<b>Adding Support Information</b> . . . . .	121
Example Command for Adding Support Information . . . . .	122
<b>Adding System Information</b> . . . . .	123
Example Command for Adding System Information . . . . .	123
<b>Adding Warranty Information</b> . . . . .	123
Example Command for Adding Warranty Information . . . . .	124
9	omreport rac: Viewing Remote Access Controller Components
<b>Conventions for Parameter Tables</b> . . . . .	125
<b>omreport rac Command Summary</b> . . . . .	125
<b>Help With the omreport rac Command</b> . . . . .	126
<b>omreport rac authentication</b> . . . . .	126
Example Command for omreport rac authentication . . . . .	127
<b>omreport rac dialinusers</b> . . . . .	127
<b>omreport rac dialoutusers</b> . . . . .	127
<b>omreport rac network</b> . . . . .	128
<b>omreport rac modem</b> . . . . .	128
<b>omreport rac remote</b> . . . . .	128
<b>omreport rac snmptraps</b> . . . . .	128
<b>omreport rac users</b> . . . . .	128
<b>omreport rac viewcertificate</b> . . . . .	129
10	omconfig rac: Managing the Remote Access Controller
<b>Conventions for Parameter Tables</b> . . . . .	131
<b>omconfig rac Command Summary</b> . . . . .	131
<b>Help With the omconfig rac Command</b> . . . . .	132
<b>omconfig rac authentication</b> . . . . .	133

Local Operating System Authentication . . . . .	133
Example Command for omconfig rac authentication. . . . .	133
<b>omconfig rac dialinusers.</b> . . . . .	<b>134</b>
Example Commands. . . . .	134
<b>omconfig rac dialoutusers</b> . . . . .	<b>135</b>
Example Commands. . . . .	136
<b>omconfig rac generatecert</b> . . . . .	<b>136</b>
<b>omconfig rac modem.</b> . . . . .	<b>137</b>
<b>omconfig rac network</b> . . . . .	<b>138</b>
Example Command . . . . .	139
<b>omconfig rac snmptraps</b> . . . . .	<b>139</b>
Example Commands. . . . .	140
<b>omconfig rac remote</b> . . . . .	<b>140</b>
Example Command . . . . .	141
<b>omconfig rac rmdialinuser</b> . . . . .	<b>141</b>
Example Command . . . . .	141
<b>omconfig rac rmdialoutuser</b> . . . . .	<b>142</b>
Example Command . . . . .	142
<b>omconfig rac rmsnmptrap</b> . . . . .	<b>142</b>
Example Command . . . . .	142
<b>omconfig rac rmuser.</b> . . . . .	<b>143</b>
Example Command . . . . .	143
<b>omconfig rac reset.</b> . . . . .	<b>143</b>
<b>omconfig rac uploadcert.</b> . . . . .	<b>143</b>
<b>omconfig rac users</b> . . . . .	<b>144</b>
Example Command . . . . .	145

## 11 Working With CLI Command Results

<b>Output Options for Command Results</b> . . . . .	<b>147</b>
Controlling Command Output Display. . . . .	147
Writing Command Output to a File . . . . .	147

Selecting a Format for Your CLI Command Output . . . . . 149

Glossary . . . . . 153

# Introduction

Whether you are using the graphical user interface (GUI) or the command line interface (CLI), Server Administrator performs essential systems management tasks.

The reporting and viewing features allow retrieval of overall health status for systems on your network. At the component level, you can view information about the voltages, temperatures, current, fan RPM, memory functioning, and many other critical component details. You see a detailed account of many relevant cost of ownership (COO) facts about your system in summary view. Version information for BIOS, firmware, operating system, and all installed software is easy to retrieve. You can also update BIOS and firmware packages and run diagnostic tests on system components.

Configuration features allow the Server Administrator to perform essential tasks described in detail in the following sections.



**NOTE:** You can use the CLI instead of the Server Administrator home page, and turn the Server Administrator Web server off if you have security concerns. The CLI does not use the Web server. Use the **omconfig system webserver action=stop** command to turn off the Web server. The Web server starts automatically after a reboot, so this command must be issued every time a system starts up. See "omconfig system webserver" for more information.

## Using CLI Commands from Windows Command Prompts

If you issue a Server Administrator CLI command from a command prompt in the Microsoft® Windows® operating system, make sure you use the 32-bit command prompt. You can access the 32-bit command prompt from the **Start** button→ **Programs**→ **Accessories**→ **Command Prompt** shortcut, or by clicking the **Start** button and selecting **Run**, then typing `cmd.exe` in the **Run** dialog box.

Avoid using the DOS command prompt launched by the `command.com` command. This command launches a 16-bit DOS command prompt and may produce unpredictable results.

## Primary CLI Commands

The commands that carry out the functions of Server Administrator are:

- `omconfig`
- `omdiag`
- `omhelp`
- `omreport`

- **omupdate**

The **omconfig** command writes values that you assign to an object's properties. You can specify values for warning thresholds on components or prescribe what action your system is to take when a certain warning or failure event occurs. You can also use the **omconfig** command to assign specific values to your system's asset information parameters, such as the purchase price of the system, the system's asset tag, or the system's location.

The **omdiag** command runs diagnostic tests against system hardware to isolate problems.

The **omhelp** command displays short text help for CLI commands. The shorthand equivalent of **omhelp** is the command for which you want help followed by `-?`. For example, to display help for the **omreport** command, type one of the following commands:

```
omhelp omreport
omreport -?
```

The **omreport** command produces reports of your system's management information.

The **omupdate** command installs the latest update packages for the system's BIOS and firmware.


 **NOTE:** For an overall summary of CLI commands, type `omhelp`.

Table 1-1 lists the primary CLI commands used by Server Administrator. This guide contains a section for each primary command.

**Table 1-1. CLI Commands and Sections in This Guide**

Primary CLI Command	Section Title	Related Sections
omconfig	omconfig: Managing Components Using the Instrumentation Service	omconfig system assetinfo: Editing Cost of Ownership Values omconfig rac: Managing the Remote Access Controller
omdiag	omdiag: Using the Diagnostic Service	
omhelp	omhelp: Getting Help With CLI Commands	
omreport	omreport: Viewing System Status Using the Instrumentation Service	omreport: Using the Storage Reports omreport rac: Viewing Remote Access Controller Components
omupdate	omupdate: Using the Update Service for BIOS, Firmware, and Device Drivers	

Additional useful topics about the CLI include:

- Working With CLI Command Results

- Glossary

## CLI Error Checking and Error Messages

The CLI checks your commands for correct syntax when you enter them. If you enter a command and the command is executed successfully, a message displays, stating that your command has been successful.

### Using the Correct Command Line

Do not type `command` into the **Run** dialog box to launch a command line window; this activates the MS-DOS® emulator `command.com`, which has environment variable limitations that can cause subtle problems with the CLI. Instead, use the Command Prompt shortcut (click the **Start** button and point to **Programs**→**Accessories**→**Command Prompt**) or type `cmd` in the **Run** dialog box to use the 32-bit command line application.

### Success Messages

For a successful `omreport` command, data about the component displays. When data for the component displays, your command is successful.

The following `omconfig` command examples show valid CLI commands and their success messages:

Command:

```
omconfig chassis temps index=0 warnthresh=default
```

Message:

```
Temperature probe warning threshold value(s) set successfully.
```

Command:

```
omconfig chassis biossetup attribute=speaker setting=on
```

Message:

```
BIOS setup configured successfully.
```

Command:

```
omconfig system assetinfo info=depreciation duration=6
```

Message:

```
Asset information set successfully.
```

### Failure Messages

CLI failure messages provide reasons why some commands do not succeed. Some common reasons why commands fail include syntax errors and components that are not present. Many error messages provide syntax information that you can use to execute the command successfully.

If you try to execute a command for a component or feature that is not present in your system configuration, the error message states that the component is not present.

Command:

```
omreport chassis currents
```

Example message:

```
Error! No current probes found on this system.
```

Command:

```
omconfig chassis volts index=3 minwarnthresh=3.3000
```

Example message:

```
Error! Number with up to 3 digits after decimal point expected,  
read 3.3000
```

The value given by the command specifies more than 3 digits after the decimal point. A valid minimum warning threshold value for volts contains up to 3 digits after the decimal point.

Type:

```
omconfig chassis volts index=3 minwarnthresh=3.300
```

When you enter the revised command with three decimal points, you receive another error message:

```
Error! This voltage probe min warning threshold must be between  
11.400 and 12.480.
```

Revised command:

```
omconfig chassis volts index=3 minwarnthresh=11.500
```

Message:

```
Voltage probe warning threshold(s) set successfully.
```

## Scripting and Comparing With the CLI

The Server Administrator CLI allows administrators to write batch programs or scripts to be executed by the operating system. For an enterprise with many systems, an administrator could write a configuration script that specified the warning thresholds for each major component of a system and also specified a set of actions that the administrator wants each system to take in case of a warning or failure event. In the most critical cases, the administrator could write a script so that the system shuts down to prevent damage. The administrator could then distribute and

execute the script to many managed systems at the same time. Such a scenario facilitates configuring any number of new systems acquired by a company and makes implementation of new system administration policies easier across many existing systems that require reconfiguration.

A similar scenario could be used to populate a large number of newly acquired systems with detailed asset information. Much of the information would be the same, such as the manufacturer or lessor of the system, whether support for the system is outsourced, name of the system's insurance company, method of depreciation, and so on. Any variable that is common to all systems could be scripted, sent to all managed systems, and executed. Asset information that is unique to a system could be scripted as a group and sent to that managed node for execution. For example, a script could specify values for all unique variables such as owner, primary user phone number, asset tag, and so on. Scripts to populate unique values would set all unique variables at once rather than one by one through the system's command line.

In many cases, the CLI allows a user with a very well-defined task in mind to retrieve information about the system rapidly. If a user wants to review a comprehensive summary of all system components and save that summary information to a file for comparison with later system states, the CLI is ideal.

Using CLI commands, administrators can write batch programs or scripts to execute at specific times. When these programs execute, they can capture reports on components of interest, such as fan RPMs during periods of high system usage compared with the same measurements at times of lowest system usage. Command results can be routed to a file for later analysis. Reports can help administrators gain information that can be used to adjust usage patterns, to justify purchasing new system resources, or to focus on the health of a problem component.

## Command Syntax Overview

Commands vary in complexity. The simplest command has only command level 1. The **omhelp** command is a simple command. When you type `omhelp`, a list of the main CLI commands is displayed.

The next level of complexity includes commands that contain command levels 1 and 2. All of the **about** commands are examples of command level 2 complexity. The **omconfig about**, **omdiag about**, **omreport about**, and **omupdate about** commands all cause a very brief summary to display. The summary shows version information for the systems management software installed on your system; for example, Server Administrator 1.x.

Some commands have command level 1 and command level 2 and one name=value pair. Consider the following example command that instructs Server Administrator to apply a specific package to update the system BIOS:

```
omupdate biosupdate path=C:\bios\2400a07.zip
```

Command level 1 is **omupdate**, command level 2 is **biosupdate**, and the name=value pair is **path=C:\bios\2400a07.zip**.

Many commands use command level 1, command level 2, and command level 3, but do not require any parameters (name=value pairs). Most **omreport** commands are of this type. For example:

```
omreport system alertaction
```

causes a list of alert actions that are configured for components on your system to be displayed.

The most complex commands have all three command levels and can have up to nine name=value pairs. An example of two name=value pairs:

```
omconfig system assetinfo info=depreciation duration=3
```

An example of nine name=value pairs:

```
omconfig system assetinfo info=acquisition
purchasecost=<n> waybill=<n> installdate=<mmdyy>
purchasedate=<mmdyy> ponum=<n> signauth=<text>
expensed=<yes | no> costcenter=<text>
```

In each section, command syntax and other information about commands is formatted with any of the following fields that apply:

```
command level 1    command level 2    command level 3    name=value pair 1    name=value pair 2
```

## omhelp: Getting Help With CLI Commands

The **omhelp** command and its equivalent, `<command> -?`, accesses the CLI's detailed help text interface. You can get help at several levels of detail.

Each fully qualified CLI command may have a variable number of distinct parts: the command (command level 1), one or more subcommands (command level 2 and command level 3, if present), and one or more name=value pair(s).

By appending `-?` (space-dash-question mark) to any command, you can get help on the command.

### Example Help Commands

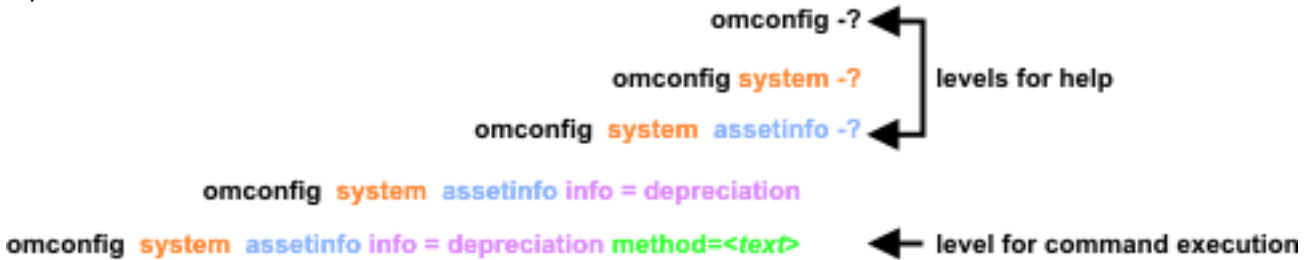
When you type `omconfig -?`, you get general help about the **omconfig** command. The help at this level lists the available subcommands for **omconfig**:

- about
- preferences
- chassis
- system

When you type `omconfig system -?`, CLI help lists all of the subcommands that are available for **omconfig system**:

- alertaction
- alertlog
- assetinfo
- cmdlog
- esmlog
- events
- recovery
- shutdown
- thrmshutdown
- webserver

Figure 2-1 shows the levels of help for a command.

**Figure 2-1. Different Levels of Help for a Command**

You can also parse the `omconfig system assetinfo` command as follows:

```
<command level 1 command level 2 command level 3> <name=value pair 1> [name=value pair 2]
```

where command levels 1, 2, and 3 are represented by `omconfig system assetinfo`, name=value pair 1 is represented by `info=depreciation`, and name=value pair 2 is represented by `method=straightline`.

To set your depreciation method to straight line, type:

```
omconfig system assetinfo info=depreciation method=
straightline
```

The CLI responds with the following message:

```
Asset information set successfully.
```

When you type `omconfig system assetinfo -?`, the help that displays provides information about assigning values for the name and option fields. Partial results for the request `omconfig system assetinfo -?` are as follows:

```
assetinfo                Set asset information.

For one info value, specify one or more optional parameter(s):

info=acquisition         purchasecost=<num> waybill=<num>
installdate=<mmddy>      purchasedate=<mmddy> ponum=<num>
signauth=<text>          expensed=<yes|no> costcenter=<text> info=
depreciation            method=<text> duration=<num> percent=<percent>
unit=<months|years|unknown>
```

You can get help for some commands that take name=value pairs, but not for all. For example, if you type:

```
omreport chassis fans index=0 -?
```

The result is:

```
fans                    Fan probe(s) properties.
```

Valid parameters are:

```
index=<number>    Displays properties for a particular fan
                   probe.
```

If you type:

```
omreport chassis biossetup attribute=numlock -?
```

The result is:

```
biossetup          BIOS setup configuration.
```


In this case, adding the name=value pair to the help query does not produce information on a particular BIOS setup parameter.





## omdiag: Using the Diagnostic Service

The **omdiag** command allows you to test system and chassis components. Examples of diagnostic capabilities include tests for components such as processors, hard drives, physical memory, communications and printer ports, network interface controllers, CMOS, and more.

Most tests described in this section take less than one minute. Tests that take longer depend on the device being tested. For example, the duration of the memory test depends on the amount of memory installed on the system. You cannot abort tests you start through the command line interface.

 **NOTICE:** If you try to abort a diagnostic test (by closing the command window or terminating the **omdiag** process) the attempt will either fail or produce unexpected results.

 **NOTE:** If the Secure Port Server is not running when you type an **omdiag** command, there will be a noticeable delay before the command executes, because the system must check the hardware to determine the diagnostic information to display.

 **NOTE:** Running an **omdiag** command while the Server Administrator Web server is running can cause the command line interface's JVM to stop. The Web server's JVM continues running (and the diagnostic completes successfully), so subsequent commands are not affected. The stopped JVM produces a log file. This issue will be fixed in a future release.


 **NOTE:** If you run **omdiag** commands from more than one command window, an **omdiag** command might complete but display no output or results. If this occurs, you can view the results of the test from the Server Administrator home page. Click the **Diagnostics** action tab and then click the **Result History** link.

Table 3-1 is a high-level summary of the **omdiag** command. The columns titled "Command level 2" and "Command level 3" list the major arguments that can be used with **omdiag**. The "Use" column provides a very general statement about the actions that can be performed using **omdiag**. More details about syntax and use of the command appear later in this section.

**Table 3-1. omdiag Command Level 1, Level 2, and Level 3**

Command level 1	Command level 2	Command level 3	Command level 4	Use
omdiag				
	about			Shows version number and properties for the Server Administrator program.
		details=true		Displays information for all of the Server Administrator programs that are installed.

**Table 3-1. omdia Command Level 1, Level 2, and Level 3 (continued)**

Command level 1	Command level 2	Command level 3	Command level 4	Use
	system	any level 3 command for chassis or storage		Runs the test for specified chassis or storage component.
			passes=<n>	Runs the test <i>n</i> times.
			mintime=<minutes>	Runs the test for at least <i>number of minutes</i> .
			maxtime=<minutes>	Runs the test no longer than <i>number of minutes</i> .
	chassis	cmos		Runs CMOS test.
		cpu		Runs microprocessor test.
		memory		Runs memory test.
		modem		Runs modem test.
		network		Runs NIC test.
		paralleport		Runs parallel port test.
		pci		Runs PCI test.
		serialport		Runs serial port test.
		usb		Runs USB test.
		video		Runs video test.
			passes=<number>	Runs the test <i>n</i> times.
			mintime=<minutes>	Runs the test for at least <i>number of minutes</i> .
			maxtime=<minutes>	Runs the test no longer than <i>number of minutes</i> .

**Table 3-1. omdia Command Level 1, Level 2, and Level 3 (continued)**

Command level 1	Command level 2	Command level 3	Command level 4	Use
	storage	adaptecraidctr		Runs Adaptec RAID controller test.
		cddrive		Runs CD drive test.
		cdrw		Runs CD-RW (read/write) drive test.
		dvddrive		Runs DVD drive test.
		floppy		Runs diskette drive test.
		harddrive		Runs hard drive test for Red Hat® Linux.
		idehd		Runs IDE hard drive test for Microsoft® Windows®.
		ideraidctr		Runs LSI Logic IDE RAID controller test.
		ideraidhd		Runs hard drive test on IDE RAID-attached disks for Microsoft Windows.
		lsdrive		Runs LS 120 or LS 240 drive test.
		lsiraidctr		Runs LSI Logic SCSI RAID controller test.
		lsiraidbattery		Runs LSI SCSI RAID controller battery diagnostics.
		raidhd		Runs hard drive test on RAID-attached disks.
		scsict		Runs SCSI controller test.
		scsihd		Runs hard drive test on SCSI-attached disks.
		smart		Runs SMART test for Linux.
		tapeautomation		Runs tape automation library diagnostics.
		tapedrive		Runs tape drive test.
			passes=<n>	Runs the test <i>n</i> times.
			mintime=<minutes>	Runs the test for at least <i>number of minutes</i> .
			maxtime=<minutes>	Runs the test no longer than <i>number of minutes</i> .

## omdiag about

Use the **omdiag about** command to learn the product name and version number of the systems management application installed on your system. The following is example output from the **omdiag about** command:

```
Product name : Server Administrator
Version      : 1.x.x
```

```
Copyright      : Copyright (C) Dell Inc.
1995-2003. All rights reserved.
```

```
Company       : Dell Inc.
```

## omdiag about details=true

Use the `omdiag about details=true` command to see information about all of the Server Administrator programs that are installed. The following is example output from the `omdiag about details=true` command:

```
Product name  : Server Administrator
Version       : 1.x.x


Copyright     : Copyright (C) Dell Inc.
1995-2003. All rights reserved.

Company      : Dell Inc.

Contains:    Instrumentation Service 4.x
             Storage Management Service 3.x.x
             Update Service 1.x.x
             Diagnostic Service 2.x.x
             Sun JRE - OEM Installed Version 3.x.x
             Secure Port Server 1.x.x
             Core Service 1.x.x
             Instrumentation Service Integration Layer 1.x.x
             Storage Management Service Integration
             Layer 1.x.x
             Server Administrator 1.x.x
```

## omdiag chassis

Use the `omdiag chassis` commands to perform tests on nonstorage components of a system, such as the processor, memory, video, NICs, PCI, and ports.

 **NOTE:** When you issue CLI commands to a server module in a modular system, chassis refers only to the server module.

### omdiag chassis -?

Use the `omdiag chassis -?` command to see a list of all chassis components on the system.

## omdiag chassis cmos

Use the **omdiag chassis cmos** command to test system configuration information in the CMOS settings. The following are the tests performed by the CMOS test:

- **Patterns** — Writes a series of characters to the CMOS memory and reads them back to see that the CMOS memory functions normally. This test first stores the original CMOS configuration pattern so that it can restore it later; it then writes a test pattern to the CMOS memory and reads it back. If the value read does not match the value written, the test logs an error and the test result is **FAILED**.
- **Checksum** — Performs a checksum test on CMOS memory to determine if any bytes are corrupt. This test scans CMOS memory and calculates a cyclic redundancy check (CRC) of the bytes read. The calculated result is compared with the results stored in the CMOS memory. If they match, the test succeeds. Otherwise, the test logs errors and the test result is **FAILED**.

## omdiag chassis cpu

Use the **omdiag chassis cpu** command to test the CPU, which executes instructions, processes data, and assigns memory addresses. The CPU test performs the following tests:

- **Register** — Tests the CPU registers using default test patterns that simulate the processing of data. This test writes available test patterns to various CPU registers, then reads the contents of each register and compares it with the original pattern. If the data read is different than the data written, this test logs an error and lists the failed registers.
- **Math** — Runs various tests on your system's math coprocessor, register stack, pointers, and commands. If this test detects errors, it lists the failed steps and commands.
- **Level 2 Cache** — Uses the system RAM to perform indirect testing of L2 cache memory by causing the RAM to move large amounts of data in and out of the L2 cache. If this test detects any failures, it indicates them according to test-block type and location.




**NOTE:** When running under Red Hat Linux, the Diagnostic Service uses the operating system to determine the number of CPUs in the system. Only CPUs that are visible to the operating system can be diagnosed. The number of CPUs listed by the Diagnostic Service equals the number of CPUs listed in the **/proc/cpuinfo** file. The Diagnostic Service lists twice the number of physical microprocessors installed in a system if that system has Hyper-Threading enabled. The Diagnostic Service utilizes the operating system to diagnose the microprocessor. The "Processors Information Page" on the Server Administrator home page lists the actual number of physical microprocessors present on the system. If your system has Hyper-Threading Technology enabled when you test all microprocessors, the Diagnostic Service runs diagnostics on each microprocessor twice.

## omdiag chassis memory

Use the **omdiag chassis memory** command to test the system's RAM.


The memory test checks your system's memory with a data patterns test. These patterns test the memory's storage integrity and its ability to store data accurately. Before running this test, ensure that all other programs are shut down. This test uses several test patterns to test memory locations. If this test detects errors, it reports the name of the DIMM that had the error (for example, DIMM\_A). The name reported corresponds to the name printed on the system board or card that contains the DIMM slots. This test also detects when ECC error events are generated. If a memory DIMM has an ECC error, the name of the DIMM that produced the error is reported.


This test checks only memory seen by the operating system on systems that have redundant memory support (spare bank or mirroring), but the status is reported for all installed DIMMS.

 **NOTE:** The memory diagnostic allocates only 2 GB of memory to perform the Memory Pattern Test. ECC events are still detected on all memory modules.

### omdiag chassis modem

Use the **omdiag chassis modem** command to send a series of AT command set commands to your modem to see if it is working. The AT command set is a series of industry-standard instructions for the modem to perform operations such as automatically dialing numbers, controlling the telephone connection, and telling the computer what it is doing.

 **NOTE:** This test is designed to run on analog communication lines (regular telephone lines) and will not test a cable or Digital Subscriber Link (DSL) modem. Currently, no test is provided for testing cable or DSL modems; you can, however, test cable or DSL Internet connections. To test an Internet connection that uses a cable or DSL modem, you must use the network test.

 **NOTE:** When you run the modem test, ensure that no other programs use the modem during the test. If other programs use the modem, the test does not run and you see a result "Cannot Run" in the **Results** window.

The modem test performs the following tests:

- **FAX command** — Sends a modem-specific command instructing the modem to send a fax. This checks if the modem can properly interpret specific commands issued for sending faxes.
- **Dialtone** — Checks that a system's modem can connect to the telephone line by initiating a dial tone and then hanging up. In order for this test to run, you must ensure that the phone is not in use, disconnected, or "off the hook." This test helps to find problems such as a faulty line connection, bad connector, or configuration error.
- **Modem** — Checks the data transfer functionality of the modem itself. If your modem supports self-test and loopback testing, then the modem test runs these tests on your modem. The modem test determines if there is a problem with the hardware, the modem driver, or the modem configuration.

### omdiag chassis network

Use the **omdiag chassis network** command to test the NIC.

The following are the tests performed by the network test:

- **LoopBack** — Reveals whether a network card is present without a driver installed. Such cards are not likely to show up on a system's list of network cards available for test. This might cause the test to return a result of "Not Applicable," meaning no network cards were found. The test checks whether the network device can transmit and receive data properly, and it also tests whether the device is configured. It tests both TCP/IP and SPX/IPX protocols; if either protocol works, the test passes.
- **Communication** — Checks if your system's network controller works and if your system properly communicates over a network. This test searches a remote system on the network and sends information in the form of several data packets from the tested system to the remote system. These data packets are then returned by the remote system to the tested system where the test checks the contents of the data packets. If too many of the data packets are not returned or are discarded because of data corruption, this test logs an error and the test result is `FAILED`.

Take note of the following special cases when using this command:

- If the managed system has a statically assigned IP address and no gateway is assigned to the system, then the network diagnostic communications test returns the following message:

```
The network device must be configured to use TCP/IP and the IP
address for the network card must be obtained through a DHCP
server or you must assign a static IP address. If the IP
address is assigned statically, a gateway must be present.
Configure the network accordingly and run this test again.
```

However, this configuration is not currently supported.

- If the Network Communication Test returns the failed result

```
Invalid Device Reference: Cannot determine the configuration of
the device. Verify the device driver is installed properly and
the device is enabled in the Operating System. The test cannot
continue.
```

check the Server Administrator home page. Click the **Network Properties** tab. If the **IP address** value is **Not obtained**, run the `ipconfig` command in Windows or the `ifconfig` command in Linux. If an IP address is assigned, then the driver is not the latest available. You must install the latest driver for the NIC from the *Server Assistant* CD before you can run diagnostics on this NIC.

- The Diagnostics Service does not support network teaming. If you set up your NICs as a team, the communications test fails when run on these NICs and the following message appears:

```
The network device is set up as part of a network team. You
cannot run the test on this network adapter.
```

### **omdiag chassis parallelport**

Use the **omdiag chassis parallelport** command to test the parallel port, which is a high-speed communications port for attaching certain devices to your computer.

The parallel port test writes a series of characters to the port and then reads it back again. If this test detects differences between the written and read character series, it logs an error message and the test result is **FAILED**.

### **omdiag chassis pci**

Use the **omdiag chassis pci** command to test the PCI bus and check all PCI devices.

The PCI test includes the boards configuration test, which checks for the presence of PCI capability and then scans all PCI devices for proper communication. This test first checks the BIOS version number for invalidity. If the version number is invalid, or the number of PCI busses is determined to be zero, an error is logged. The test then scans for PCI cards in the system. If an error is encountered reading the configuration data of a card, an error is logged. If more than 10 errors are encountered, the test stops.

### **omdiag chassis serialport**

Use the **omdiag chassis serialport** command to test the serial port.

The serial port test:

- Performs internal and loopback testing on as many as 10 serial ports.
- Places the serial port in an internal loopback mode, which allows for the return of values written to the port.
- Tests all 9-pin (AT) and 25-pin (PC, XT, and PS/2) serial ports.

The following tests are performed by the serial port test:

- Control signals — Performs an internal loopback test on the serial port control signals by writing a set of patterns to the control registers and then reading back the corresponding values through the internal loopbacks. If this test detects differences between the written and read data, it logs an error message listing the port number and the final test result is **FAILED**.
- Data send and receive — Tests a port's data send and receive capability by progressively increasing baud rates. At each baud rate, 256 bytes of data are written to the port and then read back. If the test detects differences between the written and read data, it logs an error message listing the port number and the final test result is **FAILED**.
- Internal registers — Performs an internal loopback test on the serial port register to verify that all registers contain valid values. This test then reads the registers to determine if they are set to invalid values. If the registers are set to invalid values, the test logs an error message listing the port number and the final test result is **FAILED**.

## **omdiag chassis usb**

Use the **omdiag chassis usb** command to test that the USB controller is communicating with all USB devices.

The USB test runs a status test to locate all USB controllers, hubs, and devices attached to the system and verify that the system is detecting them correctly. The devices are detected by directly accessing each physical device. If any devices are present but disabled or configured incorrectly, the test result is **FAILED**.

## **omdiag chassis video**

Use the **omdiag chassis video** command to test the video memory. The memory test fills the video memory and AGP memory with test patterns, which are designed specifically to discover memory errors. The data is then transferred back to the system memory and checked to make sure that every pixel contains the correct data. If a pixel reports different data than what the pixel is supposed to contain, the video memory test result is **FAILED**.

## **omdiag storage**

Use the **omdiag storage** commands to perform tests on storage components of a system, such as the CD drive, diskette drive, hard drive, tape drive, and SCSI or RAID controller.

### **omdiag storage -?**

Use the **omdiag storage -?** command to see a list of all storage components on the system.

### **omdiag storage adaptecraidctr**

Use the **omdiag storage adaptecraidctr** command to validate normal operations of Adaptec RAID controllers and host bus adapters. This command enumerates all the Adaptec RAID controllers present in the system and allows a user to test a specific controller.

The test retrieves and verifies the status information of the main components of the controller and performs basic and advanced operations to verify the working status of the controller. The test is nondestructive in nature; no data is written to the storage devices managed by the controller.

The Adaptec RAID controller operations test performs the following tests:

- **Pause-resume I/O** — Verifies the Pause I/O and Resume I/O functions of the controller on all of the buses.
- **Device scan** — Verifies the status of devices attached to the controller. This test takes a snapshot of the status of current attached devices, rescans for all devices, and then compares the status with the first snapshot, reporting any changes.
- **NVRAM and battery test** — Checks for the existence of a nonvolatile random access memory (NVRAM) and a battery module. If an NVRAM and a battery are present, the test verifies the normal operation of these modules.

- Global cache — Retrieves the global cache parameters and verifies the normal operation of this function.
- Task scheduler — Verifies the task scheduling functionality of the controller by scheduling a blinking task on each attached disk and verifying the task's normal operation. This test also schedules a verify task on each attached disk and verifies normal operation. It then terminates all scheduled tasks and verifies the successful termination of each task.
- SMART device — Retrieves the SMART status of all attached disks and verifies normal operation.
- Dump log — Performs a diagnostic log dump operation and verifies normal completion status.

You must stop an application that reserves the RAID controller before you attempt to run the Adaptec RAID controller diagnostic test or the hard disk diagnostic test. If you do not, the diagnostic reports a failure with the following message:

```
An application or service that manipulates RAID such as Array
Manager, FAST, or PERC Console has reserved the controller and must
be stopped before running this test. See the Server Administrator
online context-sensitive help or the "Server Administrator CLI
User's Guide" for more information.
```

To stop the Array Manager service, go to the Control Panel, select **Services**, right-click the **Disk Management Service**, and select **Stop**. To stop FAST or the PERC Console, exit the application.

### **omdiag storage lsiraidctr**

Use the **omdiag storage lsiraidctr** command to validate normal operations of LSI Logic SCSI RAID controllers and host bus adapters. This command enumerates all of the LSI Logic SCSI RAID controllers present in the system and allows a user to selectively test a specific controller.

The test retrieves and verifies status information about the main components of the controller and performs operations to verify the working status of the controller. The test is nondestructive, because it does not write data to the storage devices managed by the controller.

The LSI Logic controller test performs the following tests:

- Controller configuration — Verifies the RAID volume configuration for consistency. Reads and inspects the configuration data and compares it to the actual configuration for any discrepancies. Any format variations and configuration mismatches are reported. Failure of the configuration test does not imply that the RAID controller is defective. Failure means that the adapter's configuration has been mismatched with the data from NVRAM.
- Timer — Checks the timer sequence of the RAID controller. Any nonsupported timer sequence verifications result in a timer test failure, which causes the adapter to be marked as failed. The timer test also checks for normal timer operation. This test uses the system timer as a reference and verifies the controller's timer stepping rate.


## omdiag storage cddrive


Use the `omdiag storage cddrive` command to test CD drives.

The CD drive test runs several tests on a CD drive to make sure that the drive works properly. It determines how many CD drives are in your system and tests only those drives that support CD media. To run this test, you must place a CD such as a program disc or your system's recovery CD into the drive to be tested. You cannot use music CDs for testing.

The CD drive test performs the following tests:

- Linear seek — Moves the CD drive heads continuously, starting from the center of the disk and moving outward to the maximum track, one track at a time, until the entire disk is tested. This test checks the integrity of the CD drive mechanics.
- Random seek — Moves the CD drive heads to several hundred random locations on the disc, one track at a time. This test checks the integrity of the CD drive mechanics.
- Funnel seek — Moves the CD drive heads from the first track on the media to the last, then to the second track, then to the second to last track, then to the third track, and so on. This test checks the integrity of the CD drive mechanics.
- Surface scan (Windows only) — Reads entire tracks, beginning with the center track and moving outward to the maximum track. If any errors occur when reading a track, the test logs an error. This test scans for surface defects on the CD.

 **NOTE:** Windows may take a while to recognize a newly inserted CD disc. Therefore, it is recommended that you wait a few seconds after inserting a disc into the drive before you run the CD test.

 **NOTE:** Red Hat Linux operating systems may lock up when running the CD/DVD/CDRW diagnostics on IDE drives. When running the diagnostic through CLI, the following message may appear:  
`Serverworks OSB4 in impossible state. Disable UDMA...`  
Direct Memory Access (DMA) must be disabled to run the diagnostics successfully. Refer to the Red Hat documentation for instructions on disabling DMA.


## omdiag storage dvddrive


Use the `omdiag storage dvddrive` command to test DVD drives. The DVD test runs various read tests on DVD drives to determine if the drive is working. The test determines how many DVD drives are in your system and then tests those drives.

To run this test, you must have a DVD disc in the DVD drive. The DVD test performs the following tests:

- Linear seek — Moves the DVD drive heads continuously, starting from the center of the disc and moving outward to the maximum track, one track at a time, until the entire disc is tested. This test checks the integrity of the DVD drive mechanics.
- Random seek — Moves the DVD drive heads to several hundred random locations on the disc, one track at a time. This test checks the integrity of the DVD drive mechanics.

- Funnel seek — Moves the DVD drive heads continuously from the first track on the media to the last, then to the second track, then to the second to last track, then to the third track, and so on. This test checks the integrity of the DVD drive mechanics.
- Surface scan (Windows only) — Reads entire tracks, beginning with the center track and moving outward to the maximum track. If any errors occur when reading a track, this test logs an error. This test scans for surface defects on the media.

 **NOTE:** Microsoft Windows may take a while to recognize a newly inserted DVD disc. Therefore, it is recommended that you wait a few seconds after inserting a disc into the drive before you run the DVD test.


 **NOTE:** Red Hat Linux operating systems may lock up when running the CD/DVD/CDRW diagnostics on IDE drives. When running the diagnostic through CLI, the following message may appear:  
Serverworks OSB4 in impossible state. Disable UDMA...  
Direct Memory Access (DMA) must be disabled to run the diagnostics successfully. Refer to the Red Hat documentation for instructions on disabling DMA.

### **omdiag storage floppy**

Use the **omdiag storage floppy** command to test the diskette drive.


The test examines your diskette drive by using a series of seek and read tests to see if your drive is working correctly. You must insert a diskette into your diskette drive to run this test. The diskette test performs the following tests:

- Linear seek — Moves the diskette drive heads continuously, starting from the center of the disk and moving outward to the maximum track, one track at a time, until the entire disk is tested. This test checks the integrity of the diskette drive mechanics.
- Random seek — Moves the diskette drive heads to several hundred random locations on the disc, one track at a time. This test checks the integrity of the diskette drive mechanics.
- Funnel seek — Moves the diskette drive heads from the first track on the media to the last, then to the second track, then to the second to last track, then to the third track, and so on. This test checks the integrity of the diskette drive mechanics.
- Surface scan — Reads entire tracks, beginning with the center track and moving outward to the maximum track. If any errors occur when reading a track, the test logs an error. This test scans for surface defects on the media.

 **NOTE:** False diagnostic errors may occur when you simultaneously run the **omdiag storage floppy** command and the diskette formatting application on Windows 2000 or Windows Server 2003.

### **omdiag storage harddrive (Red Hat Linux only)**

Use the **omdiag storage harddrive** command to run a series of tests to see if your drive is working correctly.

 **NOTE:** The hard drive test takes approximately 1 minute per gigabyte of storage.

The hard drive test performs the following tests:

- Funnel seek — Moves the drive heads continuously from the first track on the media to the last, then to the second track, then to the second to last track, then to the third track, and so on. This test checks the integrity of the hard drive mechanics.
- Linear seek — Moves the hard drive heads continuously, starting from the center of the disk and moving outward to the maximum track, one track at a time, until the entire disk is tested. This test checks the integrity of the hard drive mechanics.
- Random seek — Moves the drive heads to several hundred random locations on the disk, one track at a time. This test checks the integrity of the hard drive mechanics.
- Surface scan — Reads entire tracks, beginning with the center track and moving outward to the maximum track. If any errors occur when reading a track, this test logs an error. This test scans for surface defects on the media.

The hard-drive diagnostics run as a low-priority background task to limit the effect on other disk I/O activity. It is recommended that you limit drive activity while running the hard-drive diagnostics because the diagnostics may run slowly or even halt while other drive I/O activity is running simultaneously. The diagnostics resume when the drive I/O activity has decreased.

### **omdiag storage idehd (Windows only)**

Use the **omdiag storage idehd** command to test hard drives attached to a server through a qualified integrated drive electronics (IDE) or Serial Advanced Technology Attachment (SATA) adapter and determine if the drive has failed.

The IDE Disk Test includes an extended SMART self-test. The quick version of the test runs a shortened SMART test which verifies a subset of the entire disk.

The hard-drive diagnostics run as a low-priority background task to limit the effect on other disk I/O activity. It is recommended that you limit drive activity while running the hard-drive diagnostics because the diagnostics may run slowly or even halt while other drive I/O activity is running simultaneously. The diagnostics resume when the drive I/O activity has decreased.

For the hard drive diagnostics, the hardware location of the hard drive is listed as `Port x: Master Device` or `Port x: Slave Device`.

The port number for a drive generally maps to the channel as follows:

Port 0 = Primary Channel

Port 1 = Secondary Channel

Port 2 = Tertiary Channel

Port 3 = Quaternary Channel

However, when more than two channels are present, the port number and channel may not map as shown. If you have a drive failure, try to identify the failing drive by its size and/or brand name as displayed in the diagnostic output. If you have trouble identifying which physical drive is failing,

you can remove drives from the tertiary and/or quaternary channel and run the tests again, so that the mapping is reliable. If all the drives pass, then one of the removed drives is the one that is failing; you may have to remove drives one at a time to determine the failed drive.

The following special cases can affect these tests:

- If the following message appears:

```
Device Inquiry command failed.
```

then it is likely that the hard drive is not connected properly. Check the cables to ensure that the hard drive is properly connected to the controller.

- In some configurations, IDE hard drives cannot be tested. If the IDE hard drive is connected as a slave on the IDE bus and the master is a non-Self Monitoring and Reporting Technology (SMART) device (such as a CD drive), both the standard and extended tests fail and display the following message:

```
The test could not be executed because the master device on the same channel as this device is not SMART-enabled. See the Server Administrator online context-sensitive help or "Server Administrator CLI User's Guide" for instructions on applying the fix for this issue.
```

For Windows 2000, this issue is corrected in Service Pack 3. See the Microsoft Knowledge Base Article ID: [Q304572](http://support.microsoft.com) at [support.microsoft.com](http://support.microsoft.com) to get a hotfix for this issue. You can also find the hotfix on the *Systems Management* CD at `support\Windows\Hotfix\MSFT_q304572_win2k.zip`.

### **omdiag storage ideraidctr**

Use the **omdiag storage ideraidctr** command (the LSI IDE RAID controller test) to validate normal operations of LSI integrated device electronics (IDE) redundant array of independent disks (RAID) controllers or host bus adapters. It lists all LSI IDE RAID controllers present in the system and allows a user to selectively test a specific controller. The test retrieves and verifies the status information of the main components of the controller and performs operations to verify the working status of the controller. The test is nondestructive in nature because it does not write data to the storage devices managed by the controller. The LSI IDE RAID controller test runs the following tests:

- Controller configuration — Verifies the RAID volume configuration for consistency and reads and inspects the configuration data from NVRAM. This test verifies the format and content of the configuration data and compare it to the actual configuration for any discrepancies. Any format violations and configuration mismatches are reported. Failing this test does not imply that the controller is defective. Instead, failing this test means that the adapter's configuration has been mismatched with the data from NVRAM.

- **Timer** — Checks the timer sequence of the RAID controller and the IDE RAID adapter. Any nonsupported timer sequence verifications result in a timer test failure and cause the adapter to be marked as failed.

### **omdiag storage ideraidhd**

Use the **omdiag storage ideraidhd** command to test IDE RAID-attached disks to determine if the IDE disk has failed.

The IDE test includes an extended SMART self-test. The quick version of the test runs a shortened SMART test that verifies a subset of the entire disk.

For managed systems with hard drives attached to a Dell-supported RAID controller, if the system does not list **ideraidhd** as one of the available tests when you issue an **omdiag storage -?** command, you may need to start the Server Administrator Web server with the **omconfig system webserver action=start** command to enable the **ideraidhd** test.

The hard-drive diagnostics run as a low-priority background task to limit the effect on other disk I/O activity. It is recommended that you limit drive activity while running the hard-drive diagnostics because the diagnostics may run slowly or even halt while other drive I/O activity is running simultaneously. The diagnostics resume when the drive I/O activity has decreased.


If the following message appears:

```
Device Inquiry command failed.
```


then it is likely that the hard drive is not connected properly. Check the cables to ensure that the hard drive is properly connected to the controller.

### **omdiag storage lsdrive**

Use the **omdiag storage lsdrive** command to run a series of seek tests that check whether the LS drive is working correctly. To run this test, you must have a standard 3.5-inch diskette, LS-120 diskette, or LS-240 diskette in the LS drive. The LS drive test performs the following tests:

 **NOTE:** Defective diskettes may cause LS drive test failures. If an error occurs, insert a different diskette and run the test again.

- **Linear seek** — Moves the drive heads continuously, starting from the center of the media and moving outward to the maximum track, one track at a time, until the entire diskette is tested. This test checks the integrity of the drive mechanics.
- **Random seek** — Moves the drive heads to several hundred random locations on the diskette, one track at a time. This test checks the integrity of the drive mechanics.
- **Funnel seek** — Moves the diskette drive heads continuously from the first track on the media to the last, then to the second track, then to the second to last track, then to the third track, and so on. This test checks the integrity of the drive mechanics.
- **Surface scan (Windows only)** — Reads entire tracks, beginning from the center of the media and moving outward to the maximum track. If any errors occur when reading a track, this test logs an error. This test scans for surface defects on the tested media.

 **NOTE:** Defective diskettes may cause LS-120 drive test failures. If an error occurs, insert a different diskette and run the test again.

### **omdiag storage raidhd (Windows only)**

Use the **omdiag storage raidhd** command to test RAID-attached hard drives and verify that they are functional. You can test hard drives attached to a server through either a Dell-qualified SATA or SCSI RAID adapter and determine if the drives have failed. See the *Dell OpenManage Server Administrator Compatibility Guide* for the supported RAID adapters.

You can run the following tests:

- **Elite** — Verifies a drive's ability to respond to commands, return diagnostic information, and ensure data integrity across the entire disk surface. The quick version of the test, rather than verifying data integrity across the entire disk, verifies data across only key areas of the disk, resulting in reduced test time.
- **Blink drive lights (SCSI Disks Only)** — For drives attached to RAID controllers, this test blinks the lights of a drive for 30 seconds to assist in locating the drive.

The following special cases can affect these tests:

- For managed systems with hard drives attached to a Dell-supported RAID controller, if the system does not list **raidhd** as one of the available tests when you issue an **omdiag storage -?** command, you may need to start the Server Administrator Web server with the **omconfig system webserver action=start** command to enable the **raidhd** test.
- The hard-drive diagnostics run as a low-priority background task to limit the effect on other disk I/O activity. It is recommended that you limit drive activity while running the hard-drive diagnostics because the diagnostics may run slowly or even halt while other drive I/O activity is running simultaneously. The diagnostics resume when the drive I/O activity has decreased.

- If the following message appears:

```
Device Inquiry command failed.
```

then it is likely that the hard drive is not connected properly. Check the cables to ensure that the hard drive is properly connected to the controller.

- The hard drive may also fail and display the following message:

```
Device failed a send diagnostic command: Check cable connections and termination and run this test again. If this error still occurs, it may indicate a hardware problem.
```

To avoid this message, run the diagnostic again when the system is not running heavy disk I/O activity.

- You must stop an application that reserves the RAID controller before you attempt to run the Adaptec RAID controller diagnostic test or the hard disk diagnostic test. If you do not, the diagnostic reports a failure with the following message:

An application or service that manipulates RAID such as Array Manager, FAST, or PERC Console has reserved the controller and must be stopped before running this test. See the Server Administrator online context-sensitive help or the "Server Administrator CLI User's Guide" for more information.

To stop the Array Manager service, go to the Control Panel, select **Services**, right-click the **Disk Management Service**, and select **Stop**. To stop FAST or the PERC Console, exit the application.

### **omdiag storage scsictl**

Use the **omdiag storage scsictl** command to test the SCSI, which is a standard computer interface for peripheral hardware.

The SCSI controller test performs tests on the SCSI interface and all attached SCSI devices. The SCSI's integrated self-diagnostic test performs these tests by using standard SCSI commands to detect SCSI devices. All SCSI devices are tested with the SCSI self-test function using the **SEND DIAGNOSTIC** command. These tests ensure that the SCSI subsystem is intact and that the devices are responding correctly.

### **omdiag storage scsihd (Windows only)**

Use the **omdiag storage scsihd** command to test SCSI-attached hard drives and verify that they are functional.

You can run the following test for SCSI-attached drives:

- **Elite** — Verifies a drive's ability to respond to commands, return diagnostic information, and ensure data integrity across the entire disk surface. The quick version of the test, rather than verifying data integrity across the entire disk, verifies data across only key areas of the disk, resulting in reduced test time.

The hard-drive diagnostics run as a low-priority background task to limit the effect on other disk I/O activity. It is recommended that you limit drive activity while running the hard-drive diagnostics because the diagnostics may run slowly or even halt while other drive I/O activity is running simultaneously. The diagnostics resume when the drive I/O activity has decreased.

If the following message appears:

```
Device Inquiry command failed.
```

then it is likely that the hard drive is not connected properly. Check the cables to ensure that the hard drive is properly connected to the controller.

The hard drive may also fail and display the following message:

```
Device failed a send diagnostic command: Check SCSI cable connections and termination and run this test again. If this error still occurs, it may indicate a hardware problem.
```

To avoid this message, run the diagnostic again when the system is not running heavy disk I/O activity.

### **omdiag storage smart (Red Hat Linux only)**

Use the **omdiag storage smart** command to test the SMART functionality for drives. The test scans your system for each available hard drive and determines whether your hard drives have a SMART system implemented. The SMART tests are not supported on RAID-configured systems.

After the test determines that the SMART system is functional, the test checks the drive for predictive failures. The SMART test includes the following tests:

- **Status** — Checks a SMART capable drive to see if the drive detects or predicts any imminent failures. For each SMART capable drive found, the test attempts to enable SMART. If the SMART enable fails, a message is logged and the drive is not tested. If the SMART enable is successful, this test checks the SMART status. If SMART predicts an imminent failure, this test logs an error.
- **Short self-test (IDE and SATA drives only)** — Executes the SMART drive self-test routine. The test scans the system for each available hard drive. The capabilities of each drive are then checked to see if the drive is SMART-capable. If the drive supports self-test, this test starts the short self-test on the drive and monitors the testing until completion. On encountering a failure, this test logs an error message based on the results returned by the drive.
- **Extended self-test (IDE and SATA drives only)** — Runs the SMART drive extended self-test routine. The test scans the system for each available hard drive. The capabilities of each drive are then checked to see if the drive is SMART-capable. If the drive supports self-test, this test starts the extended self-test on the drive and monitors the testing until completion. On encountering a failure, this test logs an error message based on the results returned by the drive.

### **omdiag storage tapedrive (Red Hat Linux only)**

Use the **omdiag storage tapedrive** command to test the tape drive by verifying the read, write, and seek capabilities of the drive. This test also checks the “prepare tape functions,” which include lock, unlock, and rewind.

The length of the test depends on how much data is on the tape media and if the data is compressed. Test duration may last well over 30 minutes if the tape is full and the data is compressed.




The tape drive test includes the following tests:

- **Linear seek** — Seeks sequentially, block-by-block, from the start of the tape to the end of the data. For every seek, a block of data is read into a memory variable. If this test detects seek errors, it logs them. This test requires that the tape media contain some data.
- **Backup (optional)** — Seeks to the end of the tape data and writes to and reads from the tape. The test is considered a destructive test because it writes data to the tape media. This test requires that the tape media contain some data.

## **omdiag storage tapedrive (Windows only)**


Use the **omdiag storage tapedrive** command to test the tape drive by verifying the read, write, and seek capabilities of the drive.

The tape drive test includes the following tests:

- Self-test — Verifies the communication path from the host to the tape drive. If communication can be established, the test performs a quick test of the tape drive's RAM. The drive performs the built-in RAM diagnostic.  
 **NOTE:** This test does not require a tape. The diagnostic might vary depending on the manufacturer of the tape drive.
- Data transfer test — Runs all of the components of the tape drive's self-test. After verifying that a diagnostic tape is present, the tape drive rewinds to the beginning of the tape and writes a sequence of data. After completion, the tape drive rewinds and reads the same data to check for possible data corruption. The data is then erased from the tape.  
 **NOTE:** The data transfer test requires a formatted diagnostic tape. The tape must be formatted by running the format diagnostic tape test.
- Format diagnostic tape — Erases and reformats a tape so that it can be used in the data transfer test. This test requires a scratch tape, which is a tape that contains no data. Run this test only once. After running this test, label and store the formatted diagnostic tape for future use.  
 **NOTE:** The tape can be completely erased by degaussing it. Using backup software to erase a tape might not remove all of the data from the tape. All data must be removed to create the diagnostic tape.

## **omdiag storage tapeautomation (Windows only)**

The tape automation test includes the following tests:

- Communication test — Checks the communication path between the autoloader or library and the host system. This test also runs the device's built-in self-test (when available) and requests that the device perform an inventory. A successful completion of the inventory indicates that the device is able to determine the number of available tape cartridges and their locations.
- Exercise test — Exercises the robotic components of the autoloader or library. This test performs a slot-to-slot exercise and a slot-to-drive exercise. The slot-to-slot exercise randomly moves tapes from one storage slot to another and back again. The slot-to-drive exercise randomly loads and unloads tapes to and from one or more drives.  
 **NOTE:** The slot-to-slot exercise is not supported on all devices.

## **omdiag storage lsiraidbattery**

Use the **omdiag storage lsiraidbattery** command to run diagnostics that validate normal operations of the battery on LSI SCSI RAID controllers and host bus adapters.

The LSI SCSI RAID controller battery test includes the following tests:

- Battery test — Checks for the existence of a battery module, and if one is present, performs a voltage and temperature test.

### **omdiag storage cdrw**

Use the **omdiag storage cdrw** command to ensure that your CD-RW (read/write) drive writes and reads data correctly. This test determines how many CD-RW drives are on your system and tests only those drives that support CD-RW media.



**NOTE:** Red Hat Linux operating systems may lock up when running the CD/DVD/CDRW diagnostics on IDE drives. When running the diagnostic through CLI the following message may appear:

`Serverworks OSB4 in impossible state. Disable UDMA...`

Direct Memory Access (DMA) must be disabled to run the diagnostics successfully. Refer to the Red Hat documentation for instructions on disabling DMA.

The CD-RW drive test includes the following test:

- CD-RW drive test— Verifies that the correct media is present. If a CD-RW disc is present, the test continues. The test writes a portion of data to the CD-RW disc and then reads the data to ensure that it matches the data that was written. If the data read does not match the data written, the CD-RW drive test fails.

## **omdiag system**

You can use the **omdiag system** command to test any of the components for the system, regardless of whether they are part of the chassis or the storage. For example, **omdiag system memory** tests the memory just the same as if you run **omdiag chassis memory**.

### **omdiag system -?**

Use the **omdiag system -?** command to see a list of all components on the system.

# omreport: Viewing System Status Using the Instrumentation Service

The **omreport** command allows you to see detailed information about your system components. You can retrieve summaries for many system components at one time, or you can get details about a specific component. This chapter shows you how to get reports with the level of detail that you want.

Commands documented in this chapter vary in whether they define the fields that appear in the results of a particular **omreport** command. Fields are defined only if they have a special or less familiar use.

As with all other components, you can use **omreport** to *view* component status, and **omconfig** to *manage* a component. For information on how to configure components for management, see "omconfig: Managing Components Using the Instrumentation Service."

Often you can use **omreport** commands to get information you need to execute an **omconfig** command. For example, if you want to edit the minimum temperature for a warning event on a temperature probe, you need to know the index of the probe you want to configure. You can use **omreport chassis temps** to display a list of probes and their indexes.

## Conventions for Parameter Tables

When listing the parameters that a command can take, the parameters are listed in alphabetical order instead of the order in which they appear in the command line interface.

The symbol `|`, often called *pipe*, is the logical *exclusive or* operator. For example, `enable | disable` means that you can enable or disable the component or feature, but you cannot simultaneously enable and disable the component or feature.

## omreport Command Summary



-  **NOTE:** Although this chapter lists all possible **omreport** commands, the commands available on your system depend on your system configuration. The results that display for the **omreport** command vary from one system to another. Data displays for installed components only.
-  **NOTE:** When a system includes an external chassis, the displayed results vary by operating system. For Red Hat® Linux systems, **omreport** commands display external chassis information in a separate section after the main chassis information. On Microsoft® Windows® systems, data about the external chassis does not appear in **omreport** output. Use Array Manager to get information about an external chassis attached to a Windows system; for instructions, see the *Dell OpenManage Array Manager User's Guide*.

Table 4-1 is a high-level summary of the **omreport** command. The column titled "Command level 1" shows the **omreport** command at its most general. "Command level 2" shows the major objects or components that you can view using **omreport** (about, chassis, storage, system, and rac). "Command level 3" lists the specific objects and components for which you can view reports. "User privilege required" refers to the type of privilege you need to perform the command, where U=User, P=Power User, and A=Administrator. "Use" is a very general statement about the actions that can be performed using **omreport**. More details about syntax and use of the command appear later in this section.

Table 4-1 shows the **omreport** commands available for about, system, and main system chassis. For information about viewing storage components, see "omreport: Using the Storage Reports."

**Table 4-1. omreport Command Level 1, Level 2, and Level 3**

Command level 1	Command level 2	Command level 3	User privilege required	Use
omreport				
	about		U, P, A	Shows version number and properties for the Server Administrator program.
		details=true	U, P, A	Displays information for all of the Server Administrator programs that are installed.
	chassis		U, P, A	Shows a general status for all main components.
		acswitch	U, P, A	Shows failover settings where redundant power units are installed in a system.
		bios	U, P, A	Shows BIOS facts such as manufacturer, version, date last updated.
		biossetup	U, P, A	Shows BIOS setup properties that you have configured during system boot.
		currents	U, P, A	Shows the status and thresholds for the current system sensors.
		fancontrol	U, P, A	Shows properties you have set for fan speed.
		fans	U, P, A	Shows status and thresholds for system fans.
		firmware	U, P, A	Shows firmware properties such as version, date of last update, and whether the firmware is updatable.
		info	U, P, A	Shows a status summary for main system chassis components.
		intrusion	U, P, A	Shows the status of the system's intrusion sensor(s).

**Table 4-1. omreport Command Level 1, Level 2, and Level 3 (continued)**

Command level 1	Command level 2	Command level 3	User privilege required	Use
		leds	U, P, A	Shows the properties you have set for LEDs to flash under various alert conditions.
		memory	U, P, A	Shows properties of your system's memory arrays.
		nics	U, P, A	Shows number of NICs installed in your system, NIC vendor, NIC description, IP address, and connection status.
		ports	U, P, A	Shows properties for your system's parallel and serial ports, such as I/O address, IRQ level, connector type, and maximum speed.
		powerbutton	U, P, A	Shows the power button control settings.
		processors	U, P, A	Shows properties of your system's processors, including speed, manufacturer, and processor family.
		pwrsupplies	U, P, A	Shows properties of power supplies.
		slots	U, P, A	Shows properties of your system's expansion slots and other slot types.
		temps	U, P, A	Shows the status and thresholds for the system temperature sensors.
		volts	U, P, A	Shows the status and thresholds for the system voltage sensors.
	storage		A	See "omreport: Using the Storage Reports."
	system		U, P, A	Shows a high-level summary of system components.
		alertaction	U, P, A	Shows warning and failure threshold values, as well as actions that have been configured when an essential components detects a warning or failure state.
		alertlog	U, P, A	Allows the administrator to show the alert log.
		assetinfo	U, P, A	Shows cost of ownership information for your system.
		cmdlog	U, P, A	Allows the administrator to show the command log.
		esmlog	U, P, A	Allows the administrator to show the hardware log.

**Table 4-1. omreport Command Level 1, Level 2, and Level 3 (continued)**

Command level 1	Command level 2	Command level 3	User privilege required	Use
		events	U, P, A	Shows the system's SNMP event settings.
		operatingsystem	U, P, A	Shows the name and version of your operating system.
		postlog	U, P, A	Shows your system's POST log.
		recovery	U, P, A	Shows how your system is configured to respond to a hung operating system.
		shutdown	U, P, A	Shows how the shutdown action is to be performed.
		summary	U, P, A	Shows key facts for all system components, including main system chassis, software, and storage.
		thrmshutdown	U, P, A	Shows what shutdown action, if any, is to be taken when a temperature warning or failure condition is detected.
		version	U, P, A	Shows a summary for all updatable components on your system.
	rac		U, P, A	See "omreport rac: Viewing Remote Access Controller Components."

## Help With the omreport Command

Use the `omreport -?` command to get a list of the available commands for `omreport`.

Use `omreport <command level 2> -?` to get help on the level 2 commands about, chassis, and system. The following information on `omreport system -?` applies equally to getting help for the `omreport chassis` command.

To see a list of valid commands for `omreport system`, type:

```
omreport system -? | more
```

## omreport about

Use the `omreport about` command to learn the product name and version number of the systems management application installed on your system. The following is example output from the `omreport about` command:

```
Product name : Server Administrator
Version      : 1.x.x
Copyright    : Copyright (C) Dell Inc. 1995-2003. All rights reserved.
Company      : Dell Inc.
```

For even more details about the environment for Server Administrator, type:

```
omreport about details=true
```

Server Administrator includes a number of services, each of which has a version number of its own. The **Contains** field reports version numbers for the services as well as other useful details. The output below is an example, and can change depending on your configuration and the version of Server Administrator that is installed on your system:

```
Contains:  Instrumentation Service 4.x.x
           Storage Management Service 3.x.x
           Update Service 1.x.x
           Diagnostic Service 2.x.x
           Sun JRE - OEM Installed Version 3.x.x
           Secure Port Server 1.x.x
           Core Service 1.x.x
           Instrumentation Service Integration Layer 1.x.x
           Storage Management Service Integration
           Layer 1.x.x
           Server Administrator 1.x.x
```

## omreport chassis Commands




Use **omreport chassis** commands to view details for the entire chassis or for a particular component.

### omreport chassis

When you type:

```
omreport chassis
```

Server Administrator displays a general status for your main system chassis components.

-  **NOTE:** The **omreport chassis** command does not list the health status of the Diagnostics Service. To view the health of the Diagnostics Service, see the **Properties** page for the **Main System Chassis** object on the Server Administrator home page.
-  **NOTE:** When you issue CLI commands to a server module in a modular system, chassis refers only to the server module.
-  **NOTE:** As with all output shown in this guide, the following output is an example and may vary depending on your system configuration.

```
SEVERITY      : COMPONENT
Ok           : Fans
Critical     : Intrusion
Ok          : Memory
Ok          : Power Supplies
Ok          : Temperatures
Ok          : Voltages
```

### **omreport chassis acswitch**

Use the **omreport chassis acswitch** command if your system has redundant power supplies that are configured in a failover arrangement. When you type:

```
omreport chassis acswitch
```

Server Administrator displays the following output:

```
AC Failover Switch
AC Switch Redundancy

Redundancy Status                : Full
Number of devices required for full redundancy : 2
Redundancy Mode                  :
Redundancy Configuration        : Input Source Line 1,
upon redundancy restoration, return to Line 1

AC Power Lines
Status                            : Ok
```

```

Location                : AC Power Line 1
AC Present              : Power Present
Active Source          : Active
Status                 : Ok
Location                : AC Power Line 2
AC Present              : Power Present
Active Source          : Not Active

```

Server Administrator reports values for the **Redundancy Status** and **Redundancy Mode** fields.

### omreport chassis bios

Use the **omreport chassis bios** command to view current BIOS information. When you type:

```
omreport chassis bios
```

Server Administrator displays a summary of your system's BIOS information.

### omreport chassis biossetup

Use the **omreport chassis biossetup** command to view BIOS setup parameters that are normally available only during system boot.

Type:

```
omreport chassis biossetup
```

The output from this command lists each of the available attributes and the current setting for each. Table 4-2 shows the possible settings for each parameter and whether the parameter requires the `force = true` option.

**Table 4-2. BIOS Setup Properties**

<b>Name=value pair 1 attribute=</b>	<b>Name=value pair 2 setting=</b>	<b>Description</b>
attribute=bezel	setting=enable   disable	<b>enable:</b> Enable the bezel removal intrusion check during system boot. <b>disable:</b> Disable the bezel removal intrusion check during system boot.
attribute=bootsequence	setting=diskettefirst   hdonly   devicelist   cdromfirst	Tells the BIOS which device is used to boot the system, and the order in which the boot routine is to check each device.

**Table 4-2. BIOS Setup Properties (continued)**

<b>Name=value pair 1 attribute=</b>	<b>Name=value pair 2 setting=</b>	<b>Description</b>
attribute=diskette	setting=off   auto   writeprotect	<p><b>off:</b> Disable the diskette drive during system boot.</p> <p><b>auto:</b> Auto enable the diskette drive during system boot.</p> <p><b>writeprotect:</b> Do not allow writes during system boot. Make the diskette drive read only during system boot.</p>
attribute=ide	setting=on   off	<p><b>on:</b> Enable the IDE drive during system boot.</p> <p><b>off:</b> Disable the IDE drive during system boot.</p>
attribute=intrusion	setting=enable   disable	<p><b>enable:</b> Enable the intrusion check during system boot. If the system also has bezel intrusion checking, then the intrusion option checks for removal of the back of the system.</p> <p><b>disable:</b> Disable the intrusion check during system boot.</p>
attribute=mouse	setting=on   off	<p><b>on:</b> Enable the mouse during system boot.</p> <p><b>off:</b> Disable the mouse during system boot.</p>
attribute=nic	setting=enabled   disabled   enablednonepxe	<p><b>enabled:</b> Enable the NIC during system boot (with PXE on if the system has PXE).</p> <p><b>disabled:</b> Disable the NIC during system boot.</p> <p><b>enablednonepxe:</b> Enable the NIC during system boot (with PXE off if the system has PXE).</p>

**Table 4-2. BIOS Setup Properties (continued)**

<b>Name=value pair 1 attribute=</b>	<b>Name=value pair 2 setting=</b>	<b>Description</b>
attribute=nic2	setting=enabled   disabled   enablednonepxe	<b>enabled:</b> Enable the second NIC during system boot (with PXE on if the system has PXE). <b>disabled:</b> Disable the second NIC during system boot. <b>enablednonepxe:</b> Enable the second NIC during system boot (with PXE off if the system has PXE).
attribute=numlock	setting=on   off	<b>on:</b> Use the keypad as number keys. <b>off:</b> Use the keypad as arrow keys.
attribute=ppaddress	setting=off   lpt1   lpt2   lpt3	<b>off:</b> Disable the parallel port address during system boot. <b>lpt1:</b> Locate the device on LPT1. <b>lpt2:</b> Locate the device on LPT2. <b>lpt3:</b> Locate the device on LPT3.
attribute=ppmode	setting=at   ps2	<b>at:</b> Set the parallel port mode to type AT. <b>ps2:</b> Set the parallel port mode to type PS/2.
attribute=primaryscsi	setting=on   off	<b>on:</b> Enable this device during system boot. <b>off:</b> Disable this device during system boot.
attribute=romb	setting=raid   off   scsi	<b>raid:</b> Instructs the BIOS to detect RAID-on-motherboard as a RAID device. <b>off:</b> Disable the device during system boot. <b>scsi:</b> Instructs the BIOS to detect this device as a SCSI device.
attribute=romba	setting=raid   scsi	<b>raid:</b> Instructs the BIOS to detect RAID-on-motherboard channel A as a RAID device. <b>scsi:</b> Instructs the BIOS to detect this device as a SCSI device.

**Table 4-2. BIOS Setup Properties (continued)**

<b>Name=value pair 1 attribute=</b>	<b>Name=value pair 2 setting=</b>	<b>Description</b>
attribute=rombb	setting=raid   scsi	<b>raid:</b> Instructs the BIOS to detect RAID-on-motherboard channel B as a RAID device. <b>scsi:</b> Instructs the BIOS to detect this device as a SCSI device.
attribute=secondaryscsi	setting=on   off	<b>on:</b> Enable this device during system boot. <b>off:</b> Disable this device during system boot.
attribute=serialport1	setting=off   auto   com1   com3	<b>off:</b> Disable serial port 1 during system boot. <b>auto:</b> Map serial port 1 to a COM port during system boot. <b>com1:</b> Map serial port 1 to COM port 1 during system boot. <b>com3:</b> Map serial port 1 to COM port 3 during system boot.
attribute=serialport2	setting=off   auto   com2   com4	<b>off:</b> Disable serial port 2 during system boot. <b>auto:</b> Map serial port 2 to a COM port during system boot. <b>com2:</b> Map serial port 2 to COM port 2 during system boot. <b>com4:</b> Map serial port 2 to COM port 4 during system boot.
attribute=speaker	setting=on   off	<b>on:</b> Enable the speaker during system boot. <b>off:</b> Disable the speaker during system boot.
attribute=usb	setting=enabled   disabled	<b>NOTE:</b> Only one of the two attributes <b>usb</b> and <b>usbb</b> appears, depending on your system's hardware. <b>enabled:</b> Enable the USB port(s) during system boot. <b>disabled:</b> Disable the USB port(s) during system boot.

**Table 4-2. BIOS Setup Properties (continued)**

<b>Name=value pair 1 attribute=</b>	<b>Name=value pair 2 setting=</b>	<b>Description</b>
attribute=usbb	setting=enabled   enabledwithbios   disabled	<b>enabled:</b> Enable the USB port(s) during system boot, without BIOS support. <b>enabledwithbios:</b> Enable the USB port(s) during the system boot, with BIOS support. <b>disabled:</b> Disable the USB port(s) during system boot.

### **omreport chassis currents**

Use the **omreport chassis currents** command to view current (amperage) probe status and settings. When you type:

```
omreport chassis currents index=n
```

the *index* parameter is optional. If you do not specify the index, Server Administrator displays a summary of status, readings, and thresholds set for all current probes present on your system. If you specify the index, Server Administrator displays a summary for a specific current probe.

### **omreport chassis fans**

Use the **omreport chassis fans** command to view fan probe status and settings. When you type:

```
omreport chassis fans index=n
```

the *index* parameter is optional. If you do not specify the index, Server Administrator displays a summary of status, readings, and thresholds set for any fan probes that might be present on your system. If you specify the index, Server Administrator displays a summary for a specific fan probe.

### **omreport chassis fancontrol**

Use the **omreport chassis fancontrol** command to see how fan speed is set on your system. Fan speed can be set to optimize speed for cooling or for quiet operation. Table 4-3 shows the available settings.

**Table 4-3. Fan Control Settings**

<b>Name=value pair</b>	<b>Description</b>
speed=quiet	Set fan speed for quiet operation.
speed=maxcool	Set fan speed for maximum cooling.

## omreport chassis firmware

Use the **omreport chassis firmware** command to view current firmware properties. When you type:

```
omreport chassis firmware
```

Server Administrator displays a summary of your system's firmware properties.

## omreport chassis info

Use the **omreport chassis info** command to see a summary of installed component versions. When you type:

```
omreport chassis info index=n
```

the `index` parameter specifies a chassis number and is optional. If you do not specify the index, Server Administrator displays summary chassis information for each chassis. If you specify the index, Server Administrator displays summary information for a specific chassis.

Depending on your configuration, output may resemble the following example:

```
Index : 0
Chassis Name : finance
Host Name : finance22
Embedded System Management Controller Version : 5.xx
Primary Backplane Version : 5.xx
Chassis Model : PowerEdge 8450
Chassis Lock : Present
Chassis Service Tag : 678211C
Chassis Asset Tag : FinceDept
```

If you run this command on a Dell™ PowerEdge™ 1655MC system, the following additional information displays:

- **Server Module Service Tag** — The service tag of the server module that you are currently logged into. (The Chassis Service Tag field indicates the service tag of your PowerEdge 1655MC system chassis.)
- **Server Module Asset Tag** — The asset tag of the server module that you are currently logged into.
- **Server Module Location** — A number assigned to the server module that indicates its position in the PowerEdge 1655MC system chassis.

## **omreport chassis intrusion**

Use the **omreport chassis intrusion** command to find out whether the cover to your system is open. Server Administrator tracks chassis intrusion events because intrusions may indicate an attempt to steal a system component, or to perform unauthorized maintenance on the system. Type:

```
omreport chassis intrusion
```

A message that resembles the following may display:

```
Status      : Ok
Probe Name  : Main chassis intrusion
State      : Chassis is closed
```

## **omreport chassis leds**

Use the **omreport chassis leds** command to find out whether clear hard drive fault is supported and what severity level lights up the LED. Type:

```
omreport chassis leds index=n
```

The `index` parameter is optional. If you do not specify the index, Server Administrator displays a summary of LED information for chassis 0. If you specify the index, Server Administrator displays a summary for a specific chassis.

The following is example output:

```
Clear hard drive fault          : Supported
Flash fault led on severity level : Critical
```

## **omreport chassis memory**

Use **omreport chassis memory** to see details for each memory module slot in your system. If your system supports redundant memory, this command also displays the status, state, and type of memory redundancy implemented on your system. Type:

```
omreport chassis memory index=n
```

The `index` parameter is optional. If you do not specify the index, Server Administrator displays information for all memory on your system. If you specify the index, Server Administrator displays a summary for a specific memory module.

Output for an occupied memory slot may resemble the following:

```

Index           : 1
Status          : OK
Connector Name  : DIMM_B
Type           : SDRAM-SYNCHRONOUS
Size           : 256 MB

```

An unoccupied memory slot still has a connector name. Output for an unoccupied memory slot may resemble the following:

```

Index           : 2
Status          : Unknown
Connector Name  : DIMM_D
Type           : Not Occupied
Size           : Unknown

```

If your system supports redundant memory, the redundancy output may resemble the following:

```

Memory Redundancy
Redundancy Status           : Full
Fail Over State            : Inactive
Redundancy Configuration   : SpareBank
Attributes                  : Location
Memory Array 1             : Proprietary Add-on Card
Attributes                  : Use
Memory Array 1             : Unknown
Attributes                  : Installed Capacity
Memory Array 1             : 1536 MB
Attributes                  : Maximum Capacity
Memory Array 1             : 12288 MB
Attributes                  : Slots Available
Memory Array 1             : 12

```

### **omreport chassis nics**

Use the `omreport chassis nics` command to view NIC properties. Type:

```
omreport chassis nics index=n
```

The `index` parameter is optional. If you do not specify the index, Server Administrator displays properties about all NICS on your system. If you specify the index, Server Administrator displays properties for a specific NIC.

Values display for the following fields: **Index** (number of the NIC card), **IP address**, **Vendor**, **Description**, and **Connection Status**.

### **omreport chassis ports**

Use the **omreport chassis ports** command to view properties of your system's parallel and serial ports.

Values display for the following fields: **Port Type**, **External Name**, **Base I/O Address**, **IRQ Level**, **Connector Type**, and **Maximum Speed**.

**Port Type** is the detailed type of each system port, from the more general serial, parallel, and USB ports to the names of ports by device type connected to it, for example, pointing device or keyboard.

**External Name** is the name of the port, such as serial or parallel, USB, mouse, keyboard, and so on.

**Base I/O Address** is the starting I/O address expressed in hexadecimal.

**IRQ Level** is a hardware interrupt on a system. The hardware interrupt signals the system's CPU that an event has started or ended in a peripheral component such as a modem or printer. When communicated over a peripheral component interconnect card, the **IRQ** level is a standard way to identify the type of device that is sending the interrupt request.

**Connector Type** refers to the type of plug or cable and plug that connects two devices together, in this case, the type of connector that attaches an external device to a system. There are many connector types, each designed to connect a different device type to a system. Examples include DB-9 Male, AT, Access Bus, PS/2, and so on.

**Maximum Speed** is the port speed. Port speed refers to the data transmission rate of an input/output channel, measured in numbers of bits per second. Serial ports have an average speed of 115 Kbps and USB ports have an average speed of 12 Kbps.

### **omreport chassis powerbutton**

Use this command to view power button settings. If the power button override is present on your system, you can see whether power button override is enabled or not.

### **omreport chassis processors**

Use the **omreport chassis processors** command to view properties of your system's processors.

Values display for the following fields: **Connector Name**, **Manufacturer**, **Processor Family**, **Processor Version**, **Maximum Speed**, **Current Speed**, **External Clock Speed**, **Processor Upgrade**, and **State**.

**Connector Name** refers to the name or number of the device that occupies the processor slot in the system.

**Manufacturer** is the business entity that sells the processor.

**Processor Family** refers to the type of processor made by a manufacturer such as Intel® Itanium™ or Pentium® III.

**Processor Version** refers to the model and stepping number of the processor.

**Maximum Speed** is the highest expected transmission speed that the processor can achieve in millions of cycles per second (megahertz or MHz).

**Current Speed** is the actual processor speed in MHz at system boot time.

**External Clock Speed** is the speed of the processor's external clock in MHz.

**Processor Upgrade** describes the upgrade socket or device for the processor. Options include upgrade device type unknown, there is no upgrade device type, upgrade device is on a daughter board, is in a ZIF socket, is a replacement, is in a LIF socket, is a Slot 1 processor, is a Slot 2 processor, and is a pin 370 processor.

**State** refers to whether the processor slot is enabled or disabled.

### **Cache Properties for a Specific Processor**

To learn the cache properties for a processor on a given connector, type:

```
omreport chassis processors index=n
```

The `index` parameter is optional. If you do not specify the index, Server Administrator displays properties for all processors. If you specify the index, Server Administrator displays properties for a specific processor.

The following fields are defined for a cache present on a particular microprocessor. If the cache is internal to the processor, the fields do not appear in the cache report:

- Speed
- Cache Device Supported Type
- Cache Device Current Type
- External Socket Name

### **Fields Reported for Each Cache on a Particular Processor**

**Status** reports whether a specific cache on the processor is enabled or disabled.

**Level** refers to primary or secondary cache. Primary-level cache is a memory bank built into the processor. Secondary-level cache is a staging area that feeds the primary cache. A secondary-level cache may be built into the processor or reside in a memory chip set outside the processor. The internal processor cache is referred to as a Level 1 (or L1). L2 cache is the external cache in a system with an Intel Pentium processor, and it is the second level of cache that is accessed. The names L1 and L2 are not indicative of where the cache is physically located (internal or external), but describe which cache is accessed first (L1, therefore internal).

**Speed** refers to the rate that the cache can forward data from main memory to the processor.

**Max Size** is the maximum amount of memory that the cache can hold in KB.

**Installed Size** is the actual size of the cache.

**Type** indicates whether the cache is primary or secondary.

**Location** is the location of the cache on the processor or on a chip set outside the processor.

A **Write Policy** describes how the cache deals with a write cycle. In a write-back policy, the cache acts like a buffer. When the processor starts a write cycle the cache receives the data and stops the cycle. The cache then writes the data back to main memory when the system bus is available.

In a write-through policy, the processor writes through the cache to main memory. The write cycle does not complete until the data is stored into main memory.

**Associativity** refers to the way main memory content is stored on the cache.

- A fully associative cache allows any line in main memory to be stored at any location in the cache.
- A 4-way set-associative cache directly maps four specific lines of memory to the same four lines of cache.
- A 3-way set-associative cache directly maps three specific lines of memory to the same three lines of cache.
- A 2-way set-associative cache directly maps two specific lines of memory to the same two lines of cache.
- A 1-way set-associative cache directly maps a specific line of memory in the same line of cache.

For example, line 0 of any page in memory must be stored in line 0 of cache memory.

**Cache Device Supported Type** is the type of static random access memory (SRAM) that the device can support.

**Cache Device Current Type** is the type of the currently installed SRAM that the cache is supporting.

**External Socket Name Silk Screen Name** is the name printed on the system board next to the socket.

**Error Correction Type** identifies the type of error checking and correction (ECC) that this memory can perform. Examples are single-bit ECC or multibit ECC.

This report shows cache information for each cache present on the microprocessor.

## **omreport chassis pwrsupplies**

Use the **omreport chassis pwrsupplies** command to view properties of your system's power supplies. Type:

```
omreport chassis pwrsupplies index=n
```

The `index` parameter is optional. If you do not specify the index, Server Administrator displays properties for all power supplies in your system. If you specify the index, Server Administrator displays properties for a specific processor.

For each power supply in the system, values display for the following fields: **Status**, **Location**, **Type**, **Max Wattage**, and **Online Status**.

### **omreport chassis slots**

Use the **omreport chassis slots** command to view properties of your system's power supplies. Type:

```
omreport chassis slots index=n
```

The **index** parameter is optional. If you do not specify the index, Server Administrator displays properties for all of the slots in your system. If you specify the index, Server Administrator displays properties for a specific slot.

For each power supply in the system, values display for the following fields: **Index**, **Slot ID**, **Adapter**, and **Data Bus Width**.

**Index** is the number of the slot in the system.

**Slot ID** is the silk screen name printed on your system's motherboard next to the slot. Alphanumeric text uniquely identifies each slot in the system.

**Adapter** refers to the name and or type of the card that fits into the slot, for example, a storage array controller, SCSI adapter, or HBA.

**Data bus width** is the width, in bits, of the information pathway between the components of a system. Data bus width range is 16 to 64 bits.

### **omreport chassis temps**

Use the **omreport chassis temps** command to view properties of your system's temperature probes. When you type:

```
omreport chassis temps index=n
```

The **index** parameter is optional. If you do not specify the index, Server Administrator displays a summary of status, readings, and thresholds set for any temperature probes that might be present on your system. If you specify the index, Server Administrator displays a summary for a specific temperature probe.

### **omreport chassis volts**

Use the **omreport chassis volts** command to view properties of your system's voltage probes. When you type:

```
omreport chassis volts index=n
```

The **index** parameter is optional. If you do not specify the index, Server Administrator displays a summary of status, readings, and thresholds set for any voltage probes that might be present on your system. If you specify the index, Server Administrator displays a summary for a specific voltage probe.

## omreport system Commands

Use the **omreport system** commands to view logs, to see how shutdown actions are configured, and to view threshold values, cost of ownership information, and information about how recovery actions are configured.

### omreport system

Use the **omreport system** command to see a general status for your system components. When you specify a level 3 command, such as **omreport system shutdown**, you can get detailed information for one system component rather than the high level status that you get with **omreport system**.

Type:

```
omreport system
```

If your system has both a main system chassis and at least one direct attached storage device, Server Administrator may display a summary that resembles the following example.



**NOTE:** As with all output shown in this guide, the following output is an example and may vary depending on your system configuration.

```
SEVERITY    : COMPONENT
Ok          : Main System Chassis
Critical    : Storage
```

### Commands for Viewing Logs

You can use the **omreport system** command to view logs: the alert log, the command log, the hardware, or ESM, log, and the POST log.

To view the contents of the alert log, type:

```
omreport system alertlog
```

To view the contents of the command log, type:

```
omreport system cmdlog
```

To view the contents of the ESM log, type:

```
omreport system esmlog
```

To view the contents of the POST log, type:

```
omreport system postlog
```

### ESM Log Overall Health Status

When you type `omreport system esmlog`, the Embedded Systems Management (ESM) report displays. The first line of the report reflects the overall health of the system hardware. For example, `Health: OK` means that less than 80 percent of the space allotted for the `esmlog` is occupied with messages. If 80 percent or more of the allotted space for the `esmlog` is occupied, the following caution appears:

```
Health: Non-Critical
```

If a caution appears, resolve all warning and critical severity conditions, and then clear the log.

### omreport system alertaction

Use this command to see a summary of alert actions that have been configured for warning and failure events on your system components. Alert actions determine how Server Administrator responds when a component has a warning or failure event.

The `omreport system alertaction` command is useful for *viewing* which alert actions have been specified for components. To *set* an alert action for a component, you must use the `omconfig system alertaction` command. See "omconfig: Managing Components Using the Instrumentation Service."

### Components and Events for Which You Can View Alert Actions

You can view alert action properties for the following components and the events:

- current probe warning
- current probe failure
- fan warning
- fan failure
- chassis intrusion
- memory pre-failure
- memory failure
- power supply failure
- degraded redundancy
- lost redundancy
- temperature warning
- temperature failure
- voltage warning
- voltage failure

## omreport system assetinfo

Use this command to see cost of ownership data for the system, such as acquisition, depreciation, and warranty information. To *set* any of these fields, you must use the **omconfig system assetinfo** command. See "omconfig: Managing Components Using the Instrumentation Service."

## omreport system events

Use the **omreport system events** command to view the current enabled or disabled SNMP traps. This command displays a summary of each component in your system for which events can be generated. For each component, the report shows which severities are set to be reported and which severities are set not to be reported. The following is example output for a few components:

```
omreport system events
Current SNMP Trap Configuration
-----
System
-----
Settings
Enable : Informational, Warning and Critical
Disable: None

-----
Power Supplies
-----
Settings
Enable : Informational, Warning and Critical
Disable: None

-----
Fans
-----
Settings
Enable : Critical
Disable: Informational and Warning
```

The full report lists the settings for all components in your system for which events can be generated.

To view the status for components of a specific type, use the **omreport system events type=<component name>** command. This command displays a summary of each component in your system for which events can be generated. Table 4-4 shows the events displayed for various component types.



**NOTE:** Some component types may be unavailable on your system.

**Table 4-4. System Events by Component Type**

<b>Name=value pair</b>	<b>Description</b>
type=accords	Configures events for AC power cords.
type=currents	Reports events for fan amperage probes.
type=fanenclosures	Reports events for fan enclosures.
type=fans	Reports events for fans.
type=intrusion	Reports events for chassis intrusion.
type=log	Reports events for logs.
type=memory	Reports events for memory.
type=powersupplies	Reports events for power supplies.
type=redundancy	Reports events for redundancy.
type=temps	Reports events for temperatures.
type=volts	Reports events for voltages.

**Example Command for Event Type**

When you type:

```
omreport system events type=fans
```

The following is example output:

```
-----
Fans
-----
Settings
Enable: Critical
Disable: Informational and Warning
```

**omreport system operatingsystem**

Use the `omreport system operatingsystem` command to display operating system information.

**omreport system recovery**

Use the `omreport system recovery` command to see whether there is an action configured for a hung operating system. You can also view the number of seconds that must elapse before an operating system is considered to be hung.

## omreport system shutdown

Use the `omreport system shutdown` command to view any pending shutdown actions for your system. If properties for shutdown are configured, executing this command displays them.

## omreport system summary

Use the `omreport system summary` command to view a comprehensive summary of software and hardware components currently installed on your system.

### Example Command Output

When you type:

```
omreport system summary
```

the output that appears in your CLI window depends on the systems management software, operating system, and hardware components and options that are installed on your system. The following *partial* command results are unique and may not resemble the results for your system's hardware and software configuration:

```
System Summary
-----
Software Profile
-----
System Management
Name                : Server Administrator
Version             : 1.x.x
Description          : Systems Management Software
Contains:           : Instrumentation Service 4.x.x
                   : Storage Management Service 3.x.x
                   : Update Service 1.x.x
                   : Diagnostic Service 2.x.x
                   : Sun JRE - OEM Installed Version 3.x.x
                   : Secure Port Server 1.x.x
                   : Dell OpenManage Core Service 1.x.x
                   : Instrumentation Service Integration Layer 1.x.x
                   : Storage Management Service Integration Layer 1.x.x

Operating System
```

Name : Microsoft Windows 2000 Server  
Version : Service Pack 3 (Build 2XXX)  
System Time : Fri Sep 20 18:02:52 2XXX  
System Bootup Time : Wed Sep 18 18:37:58 2XXX

The system summary hardware information includes data values for installed components of the following types that are present in your system:

### **System Attributes**

- Host name
- System location

### **Main System Chassis**

#### ***Chassis***

- Chassis model
- Chassis service tag
- Chassis lock
- Chassis asset tag

If you run this command on a PowerEdge 1655MC system, the following additional information displays:

- **Server Module Service Tag** — The service tag of the server module that you are currently logged into. (The Chassis Service Tag field indicates the service tag of your PowerEdge 1655MC system chassis.)
- **Server Module Asset Tag** — The asset tag of the server module that you are currently logged into.
- **Server Module Location** — A number assigned to the server module that indicates its position in the PowerEdge 1655MC system chassis.

#### ***Processor***

The following are listed for each processor in the system:

- Processor manufacturer
- Processor family
- Processor version
- Current speed
- Maximum speed
- External clock speed

- Voltage

### ***Memory***

- Total installed capacity
- Memory available to the operating system
- Total maximum capacity
- Memory array count

### ***Memory Array***

The following details are listed for each memory board or module in the system (for example, the system board or the memory module in a given slot number):

- Location
- Use
- Installed capacity
- Maximum capacity
- Slots available
- Slots used
- ECC type

### ***BIOS***

- Manufacturer
- BIOS version
- Release date
- BIOS firmware information
- Name
- BIOS firmware version

### ***Firmware***

- Name
- Version

### **Network Interface Card**

The following details are listed for each NIC in the system:

- IP address
- Subnet mask
- Default gateway

- MAC address

### Storage Enclosures

The following details are listed for each storage enclosure attached to the system:

- Name
- Product ID

### omreport system thrmshutdown

Use the **omreport system thrmshutdown** command to view which properties, if any, have been configured for a thermal shutdown action.

The three properties that display for thermal shutdown are disabled, warning, or failure. If the CLI displays the following message, the thermal shutdown feature has been disabled:

```
Thermal protect shutdown severity: disabled
```

If the system is configured to shutdown when a temperature probe detects a warning or failure event, one of the following messages displays:

```
Thermal protect shutdown severity: warning
```

```
Thermal protect shutdown severity: failure
```

### omreport system version

Use the **omreport system version** command to list the version numbers of the BIOS, firmware, systems management software, and operating system that are installed on your system. The command also tells you whether the listed component can be updated from the Server Administrator **omupdate** commands. Most BIOS and firmware can be updated from Server Administrator; some drivers can also be updated.

Example Command Output

When you type:

```
omreport system version
```

the output that appears in your CLI window depends on the version of the BIOS, RAID controllers, and firmware installed on your system. The following *partial* command results are unique and may not resemble the results for your system's configuration:

```
Version Report
-----
Main System Chassis
-----
Name          : BIOS
Version       : A01
Updateable    : Yes
```

Name : Embedded System Management Controller  
Version : 5.21  
Updateable : Yes

Name : Primary Backplane  
Version : 5.35  
Updateable : Yes

-----  
PERC Firmware  
-----

Name : DELL PERC 2/Si Firmware  
Version : 2.7.0.3552  
Updateable : Yes

-----  
PERC Driver  
-----

Name : Dell PERC 2/Si RAID Controller Driver  
Version : 2.7.1.4944  
Updateable : Yes



## omreport: Using the Storage Reports

Use the `omreport storage` command to view information about enclosures, volumes, arrays, and disks that are part of your storage system.

### Conventions for Parameter Tables

When listing the parameters that a command can take, the parameters are listed in alphabetical order instead of the order in which they appear in the command line interface.

The symbol `|`, often called *pipe*, is the logical *exclusive or* operator. For example, `enable | disable` means that you can enable or disable the component or feature, but you cannot simultaneously enable and disable the component or feature.

### omreport storage Command Summary


 **NOTE:** Although this section lists all possible `omreport storage` commands, the commands available on your system depend on your system configuration. The results that display for the `omreport storage` command vary from one system to another. Data displays for installed components only.

Table 5-1 is a high-level summary of the `omreport storage` command. The column titled "Command level 1" shows the `omreport` command at its most general. "Command level 2" shows the major objects or components that you can view using `omreport storage`. "Command level 3" lists the specific storage objects and components for which you can view reports. "User privilege required" refers to the type of privilege you need to perform the command, where U=User, P=Power User, and A=Administrator. "Use" is a very general statement about the actions that can be performed using `omreport storage`. More details about syntax and use of the command appear later in this section.

**Table 5-1. omreport storage Command Level 1, Level 2, and Level 3**

Command level 1	Command level 2	Command level 3	User privilege required	Use
omreport				
	storage		A	Displays a high-level status for all storage components.
		arraydisks	A	Displays a high-level status for array disks.
		arrays	A	Displays detailed information for an array disk on a particular controller.

**Table 5-1. omreport storage Command Level 1, Level 2, and Level 3 (continued)**


Command level 1	Command level 2	Command level 3	User privilege required	Use
		osdiskinfo	A	Displays detailed information for a particular operating system disk.
		osdisks	A	Displays operating system disk properties.
		volumes	A	Displays properties for all volumes.
		enclosures	A	Displays properties for all enclosures.
		enclosureinfo	A	Displays detailed information for a particular enclosure.

## omreport storage Commands

When you type:

```
omreport storage
```

Server Administrator displays a general status for storage components.

 **NOTE:** As with all output shown in this guide, the following output is an example and may vary depending on your system configuration.

```
SEVERITY      : COMPONENT
Ok            : Array Subsystems
Warning       : OS Disks
Ok           : Volumes
```

### omreport storage arraydisks

Use the **omreport storage arraydisks controller=*ID*** command (where *ID* is the ID number for the controller that controls the disks in the array) to view information for all enclosures and disks attached to a specific RAID controller. For example, if the controller's ID is "447244640307," enter the following command to see all enclosures and disks attached to that controller:

```
omreport storage arraydisks controller=47244640307
```

The report includes the following information for each enclosure in the array:

- ID — Assigned ID number for the enclosure.
- Status — Status of the enclosure.
- Name — Name of the enclosure.
- Application Version — Version of firmware installed on the enclosure.

- Product ID — Vendor-assigned ID for the enclosure.
- Asset Tag — A label that specifies either manufacturer's information or, in the case of a customer-specified asset tag, customer's information (such as inventory number, serial number, and so on).
- Service Tag — An alphanumeric code that uniquely identifies a storage device.

The report includes the following information for each physical disk in the array:

- Status — Status of the disk.
- Name — Name of the array disk. If more than one array disk comprises a virtual disk, the name may include the number of the array disk, for example, ArrayDisk0:0, ArrayDisk0:1 means the first and second array disks on virtual disk 0.
- State — Current state of the array disk.
- Type — Type of disk, such as SCSI. Also indicates the port ID and LUN for the disk.
- Product ID — Vendor-assigned ID for the physical disk.
- Rev — Revision number of the firmware on the array disk.
- Vendor — Manufacturer of the disk.
- Capacity — Amount of total storage space on the physical disk.
- Unallocated Space — Amount of usable storage space that is available.

If you want to see all disks that comprise a virtual disk, use the virtual disk ID in the command. For example, to see all disks that make up a virtual disk with the ID of "47244640361," type the following command:

```
omreport storage arraydisks vdisk=47244640361
```



**NOTE:** You can find virtual disk and controller IDs by running the **omreport storage arrays** command, which shows the properties for all of the controllers in the system.

## omreport storage arrays

Use the **omreport storage arrays** command to view detailed information about the disk controller and the storage subsystems attached to the controller. The following information is provided about the controller:

- ID — Assigned ID number for the controller.
- Name — Name of the controller.
- State — Current state of the controller.
- Firmware Version— Version of firmware installed on the controller.

For each controller, you can view the following information about the virtual disks controlled by the controller:

- ID — Assigned ID number for the virtual disk.

- Status — Status of the virtual disk.
- Name — Name of the virtual disk.
- State — Current state of the virtual disk.
- Read Cache — Read policies indicate whether or not the controller should read sequential sectors of the logical drive when seeking data. The read policies are as follows:
  - Read-Ahead — When using read-ahead policy, the controller reads sequential sectors of the logical drive when seeking data. Read-ahead policy may improve system performance if the data is actually written to sequential sectors of the logical drive.
  - No-Read-Ahead — Selecting no-read-ahead policy indicates that the controller should not use read-ahead policy.
  - Adaptive Read-Ahead — When using adaptive read-ahead policy, the controller initiates read-ahead only if the two most recent read requests accessed sequential sectors of the disk. If subsequent read requests access random sectors of the disk, the controller reverts to no-read-ahead policy. The controller continues to evaluate whether read requests are accessing sequential sectors of the disk, and can initiate read-ahead if necessary.
- Write Cache — Write policies specify whether the controller sends a write-request completion signal as soon as the data is in the cache or after it has been written to disk. The write policies are as follows:
  - Write-Back Caching — When using write-back caching, the controller sends a write-request completion signal as soon as the data is in the controller cache but has not yet been written to disk. Write-back caching may provide improved performance since subsequent read requests can more quickly retrieve data from the controller cache than they could from the disk. Write-back caching also entails a data security risk, however, since a system failure could prevent the data from being written to disk even though the controller has sent a write-request completion signal. In this case, data may be lost. Other applications may also experience problems when taking actions that assume the data is available on the disk.
  - Write-Through Caching — When using write-through caching, the controller sends a write-request completion signal only after the data is written to the disk. Write-through caching provides better data security than write-back caching, since the system assumes the data is available only after it has been safely written to the disk.
- Cache Policy — Indicates whether read cache, write cache, or both are enabled for a specific disk.

The direct I/O and cache I/O cache policies apply to reads on a specific logical drive. These settings do not affect the read-ahead policy. The cache I/O and direct I/O cache policies are as follows:

- Cache I/O — Specifies that all reads are buffered in cache memory.

- Direct I/O (default) — Specifies that reads are not buffered in cache memory. When using direct I/O, data is transferred to the controller cache and the host system simultaneously during a read request. If a subsequent read request requires data from the same data block, it can be read directly from the controller cache. The direct I/O setting does not override the cache policy settings.
- Layout — RAID level for the array. See your Array Manager documentation for more information about RAID levels.
- Size — Amount of storage on the disk in GB.

### **omreport storage enclosureinfo**

Use the **omreport storage enclosureinfo enclosure=*ID*** command (where *ID* is the ID number for the enclosure) to view information about a single enclosure. For example, if the enclosure's ID is "447244640512," enter the following command to see detailed information for that enclosure:

```
omreport storage enclosureinfo enclosure=47244640512
```



**NOTE:** You can find an enclosure ID by running the **omreport storage enclosures** command, which shows the properties for all of the enclosures in the system.

The following information displays for the enclosure:

- Fans
  - Status — Status of the fan.
  - Name — Name of the fan.
  - State — Current state of the fan.
  - Speed — Speed at which the fan is running.
- Temperature Probes
  - Status — Status of the temperature probes.
  - State — State of the temperature probes.
  - Reading — Actual temperature measured by a particular probe. Readings are always a snapshot of a device's measurements at a point in time.
  - Minimum Warning Threshold — Minimum temperature, expressed in degrees, that will activate an alarm.
  - Maximum Warning Threshold — Maximum temperature, expressed in degrees, that will activate an alarm.
  - Minimum Failure Threshold — Minimum temperature, expressed in degrees, that will cause the enclosure to fail.
  - Maximum Failure Threshold — Maximum temperature, expressed in degrees, that will cause the enclosure to fail.
  - Units — Measurement type of temperature, such as Celsius.

- Power Supplies
  - Status — Status of the power supplies.
  - Name — Name of the power supply, such as "Power Supply 1."
  - State — Current state of the power supply.

### **omreport storage enclosures**

Use the **omreport storage enclosures** command to view the enclosures that contain array disks for a particular controller. The following information displays for each enclosure on the controller:

- ID — Assigned ID number for the enclosure.
- Status — Status of the enclosure.
- Name — Name of the enclosure.
- Application Version — Version of firmware on the enclosure.
- Product ID — Identifying information for the storage enclosure, such as model and short description.
- Asset Tag — A label that specifies either manufacturer's information or, in the case of a customer-specified asset tag, customer's information (such as inventory number, serial number, and so on).
- Service Tag — An alphanumeric code that uniquely identifies a storage device.

### **omreport storage osdiskinfo**

Use the **omreport storage osdiskinfo osdisk=*ID*** command (where *ID* is the ID number for the operating system disk) to view detailed information for the operating system disks. For example, if the operating system disk's ID is "447244640714," enter the following command to see the disks that comprise the operating system disk:

```
omreport storage osdiskinfo osdisk=447244640714
```

 **NOTE:** You can find the ID by using the **omreport storage osdisks** command, which provides information for all operating system disks.

The **osdiskinfo** command provides information, as applicable, about the volumes, virtual disks, and array disks that make up an operating system disk.

**osdiskinfo** provides the following information about the volumes that contain operating system disks:

- Status — Status of the volume.
- Label — Name of the volume.
- State — State of the volume.
- File System — File system for the volume, such as NTFS or FAT.
- Size — Total space on the volume in GB.

- Free Space — Space available for creating logical drives within an extended partition, in GB.

The `osdiskinfo` command provides the following information about the virtual disk(s) that comprise the operating system disk:

- Status — Status of the virtual disk.
- Name — Name of the virtual disk.
- State — Current state of the virtual disk.
- Read Cache — Read policies indicate whether or not the controller should read sequential sectors of the logical drive when seeking data. The read policies are as follows:
  - Read-Ahead — When using read-ahead policy, the controller reads sequential sectors of the logical drive when seeking data. Read-ahead policy may improve system performance if the data is actually written to sequential sectors of the logical drive.
  - No-Read-Ahead — Selecting no-read-ahead policy indicates that the controller should not use read-ahead policy.
  - Adaptive Read-Ahead — When using adaptive read-ahead policy, the controller initiates read-ahead only if the two most recent read requests accessed sequential sectors of the disk. If subsequent read requests access random sectors of the disk, the controller reverts to no-read-ahead policy. The controller continues to evaluate whether read requests are accessing sequential sectors of the disk, and can initiate read-ahead if necessary.
- Write Cache — Write policies specify whether the controller sends a write-request completion signal as soon as the data is in the cache or after it has been written to disk. The write policies are as follows:
  - Write-Back Caching — When using write-back caching, the controller sends a write-request completion signal as soon as the data is in the controller cache but has not yet been written to disk. Write-back caching may provide improved performance since subsequent read requests can more quickly retrieve data from the controller cache than they could from the disk. Write-back caching also entails a data security risk, however, since a system failure could prevent the data from being written to disk even though the controller has sent a write-request completion signal. In this case, data may be lost. Other applications may also experience problems when taking actions that assume the data is available on the disk.
  - Write-Through Caching — When using write-through caching, the controller sends a write-request completion signal only after the data is written to the disk. Write-through caching provides better data security than write-back caching, since the system assumes the data is available only after it has been safely written to the disk.
- Cache Policy — Indicates whether the cache policy for privileges to read from and write to the disk cache is enabled or not.

The direct I/O and cache I/O cache policies apply to reads on a specific logical drive. These settings do not affect the read-ahead policy. The Cache I/O and Direct I/O cache policies are as follows:

- Cache I/O — Specifies that all reads are buffered in cache memory.
- Direct I/O (default) — Specifies that reads are not buffered in cache memory. When using direct I/O, data is transferred to the controller cache and the host system simultaneously during a read request. If a subsequent read request requires data from the same data block, it can be read directly from the controller cache. The direct I/O setting does not override the cache policy settings.
- Layout — RAID level on the virtual disk. See your Array Manager documentation for more information.
- Size — Amount of storage on the virtual disk in GB.

The **omreport storage osdiskinfo** command provides the following information about the physical array disks that comprise the operating system disk:

- Status — Status of the array disk.
- Label — Name of the array disk. If more than one array disk comprises a virtual disk, the name may include the number of the array disk, for example, ArrayDisk0:0, ArrayDisk0:1 means the first and second array disks that make ArrayDisk0.
- State — Current state of the array disk.
- Controller — Name of the RAID controller that controls the array disk.

### **omreport storage osdisks**

Use the **omreport storage osdisks** command to view information about all of your operating system disks. The following information displays for each disk that contains operating system files:

- ID — Assigned ID number for the disk. You can use this number in conjunction with the **omreport storage osdiskinfo** command to view information about a specific operating system disk. See "omreport storage osdiskinfo" for more information.
- Status — Status of the operating system disk.
- Name — Name of the operating system disk.
- State — Current state of the operating system disk.
- Type — Type of disk, such as SCSI. Also indicates the port ID and LUN for the operating system disk.
- Vendor — Manufacturer of the disk.
- Unallocated Space — Amount of usable storage space that is available.

You can view operating system disk information for a volume by entering the volume ID as part of the parameter. For example:

```
omreport storage osdisks volume=60129542154
```

You obtain a volume's ID by running the **omreport storage volumes** command. See "omreport storage volumes" for more information.

## **omreport storage volumes**

Use the **omreport storage volumes** command to view information about the volumes on your storage system. The following information displays for each volume:

- **ID** — Assigned ID number for the volume. You can use this number in conjunction with the **omreport storage osdisks** command to view information about an operating system disk on a specific volume. See "omreport storage osdisks" for more information.
- **Status** — Status of the volume.
- **Label** — Name of the volume.
- **State** — Current state of the volume.
- **File System** — File system for the volume, such as NTFS or FAT.
- **Size** — Total space on the volume in GB.
- **Free Space**— Space available for creating logical drives within an extended partition, in GB.



# omupdate: Using the Update Service for BIOS, Firmware, and Device Drivers

The **omupdate** command allows you to select an update package to update your system's BIOS, firmware, and RAID controller drivers remotely.

## omupdate Command Summary



 **NOTE:** Although this section lists all possible **omupdate** commands, the commands available on your system depend on your system configuration. If you try to get help or execute a command for a component or package that is not installed on your system, Server Administrator issues a message that the component is not "found on this system."

Table 6-1 is a high-level summary of the **omupdate** command. The column titled "Command level 2" lists the major arguments that can be used with **omupdate**. One name=value pair is needed for some commands to execute. The name=value pair contains what are often called *parameters* of a command. "User privilege required" refers to the type of privilege you need to perform the command, where U=User, P=Power User, and A=Administrator. "Use" is a very general statement about the actions that can be performed using the **omupdate** command. More details about syntax and use of the command appear later in this section.

 **NOTE:** Whenever you have a fully qualified path or filename that contains spaces, you must place double quotation marks around the string. For example, if your update package is located at **c:\update files\bios\bios.zip**, you must place the fully qualified path in double quotations because there is a space between "update" and "files." The following is an example command using this path=file string:

```
omupdate biosupdate path="c:\update files\bios\bios.zip"
```

**Table 6-1. omupdate Command**

Command level 1	Command level 2	Name=value pair	User privilege required	Use
omupdate	about		U, P, A	Shows version number and properties for the Server Administrator program.
		details=true	U, P, A	Displays information for all of the Server Administrator programs that are installed.

**Table 6-1. omupdate Command (continued)**

Command level 1	Command level 2	Name=value pair	User privilege required	Use
	biosupdate	path= <file>	A	Performs the BIOS update. You must specify the absolute path of the update package file.
	drac2fwupdate	path= <file>	A	Performs the firmware update for the DRAC II controller. You must specify the absolute path of the update package file.
	fwupdate	path= <file>	A	Performs the firmware update. You must specify the absolute path of the update package file.
	percdrupdate	path= <file> device= <type>	A	Performs an update on the RAID controller device driver. You must specify the absolute path of the update package file and the device type.
	percfwupdate	path= <file> device= <type>	A	Performs an update on the RAID controller firmware. You must specify the absolute path of the update package file and the device type.
	racfwupdate	path= <file>	A	Performs a remote access controller update. You must specify the absolute path of the update package file.
	version	N/A	U, P, A	Displays a version report of all the components you can update.

## Help With the omupdate Command

Use the `omupdate -?` command to get a list of the available commands for `omupdate`.

Use `omupdate <command level 2> -?` to get help on the level 2 commands `about`, `biosupdate`, `fwupdate`, and `version`.

To find out what happens when you run the command `omupdate version`, type:

```
omupdate version -?
```

A short description of the command's output appears:

```
version      Version report for all updateable components.
```

## PERC Device Types

PERC firmware and driver updates from the command line require you to provide a device parameter (for example, device=PERC3). The following list shows the device type that you should use for the various PERC devices.

- For PERC 3/DC, PERC 3/DCL, PERC 3/QC, and PERC 3/SC devices, use device type PERC3.
- For a PERC 4/Di device, use device type PERC4.
- For a CERC device, use device type CERC.
- For a PERC 2 device, use device type PERC2.
- For PERC 2/Si, PERC 3/Si, and PERC 3/Di devices, use device type ROMB.

## omupdate about

Use the `omupdate about` command to learn the product name and version number of the systems management application installed on your system. The following is example output from the `omupdate about` command:

```
Product name : Server Administrator
Version      : 1.x.x
Copyright    : Copyright (C) Dell Inc. 1995-2003. All rights reserved.
Company      : Dell Inc.
```

For more detail about the environment for Server Administrator, type:

```
omupdate about details=true
```

Server Administrator includes a number of services, each of which has a version number of its own. The **Contains** field reports version numbers for the services and provides other useful details. The output that follows is an example, and it can change depending on your configuration and the version of Server Administrator that is available:

```
Contains: Instrumentation Service 4.x.x
          Storage Management Service 3.x.x
          Update Service 1.x.x
          Diagnostic Service 2.x.x
          Sun JRE - OEM Installed Version 3.x.x
          Secure Port Server 1.x.x
          Core Service 1.x.x
```

```
Instrumentation Service Integration Layer 1.x.x
Storage Management Service Integration
Layer 1.x.x
Server Administrator 1.x.x
```

## omupdate biosupdate

Use the **omupdate biosupdate** command to specify the absolute path of a BIOS update package file and the device type. To run the **omupdate biosupdate** command, type:

```
omupdate biosupdate path=<file>
```

For the *<file>* variable, you must enter the fully qualified path and filename of the BIOS update package file.

## omupdate drac2fwupdate

Use the **omupdate drac2fwupdate** command to specify the absolute path of a DRAC II firmware update package file. To run the **omupdate fwupdate** command, type:

```
omupdate drac2fwupdate path=<file>
```

For the *<file>* variable, enter the fully qualified path and filename of the update package file. For example:

```
omupdate drac2fwupdate path="c:\temp\drac2.zip"
```

When you enter the path and filename of an update package, the system validates the update package file. If the update package file is valid, a message similar to the following appears:

```
The update package has successfully updated your firmware. The
DRAC II is resetting right now. Wait for a few minutes before
accessing the card.
```

## omupdate fwupdate

Use the **omupdate fwupdate** command to specify the absolute path of a firmware update package file. To run the **omupdate fwupdate** command, type:

```
omupdate fwupdate path=<file>
```

For the *<file>* variable, enter the fully qualified path and filename of the update package file.

When you enter the path and filename of an update package, the system validates the update package file. If the update package file is valid, the system reports that the update is in progress. An example message that appears when a valid update package is being applied resembles the following:

```
A firmware update is in progress. This may take a few minutes.  
Please wait.
```

When the update completes successfully, the system reports:

```
Your firmware has been successfully updated.
```

The next message prompts you to reboot your system to make the new firmware available.

## **omupdate percdrupdate**

Use the **omupdate percdrupdate** command to specify the absolute path of a RAID controller device driver update file and the device type. To run the **omupdate percdrupdate** command, type:

```
omupdate percdrupdate path=<file> device=<type>
```

For the *<file>* variable, enter the fully qualified path and filename of the update package file. For the *<type>* variable, enter *SCSI*, *PERC3*, *PERC2*, *PERC4*, *CERC*, or *ROMB* (*PERC3* is the default).

When you enter the path and filename of an update package, the system validates the update package file. If the update package file is valid, the system reports that the update is in progress. An example message that appears when a valid update package is being applied resembles the following:

```
RAID firmware/driver update is in progress. This may take a few  
minutes. Please wait.
```

When the update completes successfully, the system reports:

```
Your RAID firmware/driver has been successfully updated.  
Please reboot for the changes to take effect.
```

## **omupdate percfwupdate**

Use the **omupdate percfwupdate** command to specify the absolute path of a RAID controller firmware update file and the device type. To run the **omupdate percfwupdate** command, type:

```
omupdate percfwupdate path=<file> device=<type>
```

For the *<file>* variable, enter the fully qualified path and filename of the update package file. For the *<type>* variable, enter *SCSI*, *PERC3*, *PERC2*, *PERC4*, *CERC*, or *ROMB* (*PERC3* is the default).

When you enter the path and filename of an update package, the system validates the update package file. If the update package file is valid, the system reports that the update is in progress. An example message that appears when a valid update package is being applied resembles the following:

```
PERC firmware update is in progress. This may take a few  
minutes. Please wait.
```

When the update completes successfully, the system reports:

```
Your PERC firmware has been successfully updated.
```

The next message prompts you to reboot your system to make the new RAID firmware available.

## omupdate racfwupdate

Use the **omupdate racfwupdate** command to update the package file after you enter the path and filename. To run the **racfwupdate** command, type:

```
omupdate racfwupdate path=<file>
```

If the update package file is valid, the system reports that the update is in progress. For example:

```
rac firmware update is in progress. This may take a few
minutes. Please wait.
```

When the update is completed successfully, the system reports:

```
Your RAC firmware has been successfully updated. Your RAC card
is resetting right now.
```

The message asks you to wait while the card resets. After a minute, you can access the updated RAC.

## omupdate version

Use the **omupdate version** command to learn the name and version number of each installed BIOS, firmware, systems management, and operating system package installed on your system.

The following is example output from the **omupdate version** command:

```
Version Report
-----
Main System Chassis
-----
Name           : BIOS
Version        : A08
Updateable     : Yes

Name           : Embedded System Management Controller
Version        : 5.43
Updateable     : Yes

Name           : Primary Backplane
Version        : 5.51
Updateable     : Yes
```

-----  
Software  
-----

Name : Microsoft Windows 2000 Advanced Server  
Version : Service Pack 2 (Build 2195)  
Updateable : N/A

Name : Dell OpenManage Server Administrator  
Version : 1.x.x  
Updateable : N/A

-----  
PERC Firmware  
-----

Name : DELL CERC ATA100/4ch Firmware  
Driver Version : H661  
Updateable : Yes

Name : DELL PERC 3/DC Firmware  
Driver Version : 161N  
Updateable : Yes

Name : DELL PERC 3/QC Firmware  
Driver Version : 161N  
Updateable : Yes

Name : DELL PERC 2/Si Firmware  
Driver Version : 2.7.0.3552  
Updateable : Yes

-----  
PERC Driver  
-----

Name : DELL PERC 3/QC RAID Controller Driver  
Driver Version : 5.31.0.0  
Updateable : Yes

Name : DELL PERC 3/DC PERC 3/DCL RAID Controller  
Driver  
Driver Version : 5.31.0.0  
Updateable : Yes

Name : DELL CERC ATA100/4ch RAID Controller Driver  
Driver Version : 5.31.0.0  
Updateable : Yes

Name : Dell PERC 2/Si RAID Controller Driver  
Driver Version : 2.5.0.3070  
Updateable : N/A

# omconfig: Managing Components Using the Instrumentation Service

The **omconfig** command allows you to provide values that define warning events, configure alert actions, clear logs, and configure system shutdown, as well as allowing you to perform other systems management tasks.

Examples of **omconfig** capabilities include the administrator's privilege to clear command, alert, and hardware logs; the administrator's privilege to configure and execute system shutdown; power user and administrator's privilege to default or specify values for warning events on current probes, fans, voltage probes, and temperature probes; power user and administrator's privilege to set alert actions in the event of a warning or failure event from intrusion, current probes, fans, voltage probes, and temperature probes.

For information on how to use the **omconfig** system command to view and to manage cost of ownership information (**assetinfo**), see "omconfig system assetinfo: Editing Cost of Ownership Values."

Often you must use the **omreport** commands to get the information you need to execute an **omconfig** command. For example, if you want to edit the minimum temperature for a warning event on a temperature probe, you need to know the index of the probe you want to configure. You can use the **omreport chassis temps** command to display a list of probes and their indexes. For more information on using the **omreport** command, see "omreport: Viewing System Status Using the Instrumentation Service."

## Conventions for Parameter Tables

When listing the parameters that a command can take, the parameters are listed in alphabetical order instead of the order in which they appear in the command line interface.

The symbol |, often called *pipe*, is the logical *exclusive or* operator. For example, enable | disable means that you can enable or disable the component or feature, but you cannot simultaneously enable and disable the component or feature.

## omconfig Command Summary



**NOTE:** Although this section lists all possible **omconfig** commands, the commands available on your system depend on your system configuration. If you try to get help or execute a command for a component that is not installed on your system, Server Administrator issues a message that the component or feature is not "found on this system."


 **NOTE:** For Microsoft® Windows® systems, use Array Manager to configure an external chassis. See the *Dell OpenManage Array Manager User's Guide* for instructions.

Table 7-1 is a high-level summary of the **omconfig** command. The columns titled "Command level 2" and "Command level 3" list the major arguments that can be used with **omconfig**. "User privilege required" refers to the type of privilege you need to perform the command, where U=User, P=Power User, and A=Administrator. "Use" is a very general statement about the actions that can be performed using **omconfig**. More details about syntax and use of the command appear later in this section.

**Table 7-1. omconfig Command Level 1, Level 2, and Level 3**

Command level 1	Command level 2	Command level 3	User privilege required	Use
omconfig				
	about		U, P, A	Shows version number and properties for the Server Administrator program.
		details=true	U, P, A	Displays information for all of the Server Administrator programs that are installed.
	preferences	snmp	A	Sets the SNMP root password.
		useraccess	A	Determines whether users below the administrator level are allowed to use Server Administrator or not.
		cdvformat	A	Specifies the delimiter for separating data fields reported in custom delimited format (cdv).
	system			
		alertaction	P, A	Determines in advance what actions are to be taken for warning or failure events on intrusion, fans, temperatures, voltages, power supplies, memory, and redundancy.
		alertlog	P, A	Allows the administrator to clear the log.
		assetinfo	P, A	Enters and edits cost of ownership information for your system, including values for depreciation, lease, maintenance, service, and support.
		cmdlog	P, A	Allows the administrator to clear the log.
		esmlog	P, A	Allows the administrator to clear the log.
		events	P, A	Enables and disables SNMP traps.
		recovery	P, A	Determines in advance how your system responds to a hung operating system.

**Table 7-1. omconfig Command Level 1, Level 2, and Level 3 (continued)**

Command level 1	Command level 2	Command level 3	User privilege required	Use
		shutdown	A	Allows the administrator to select from several options when shutting down the system.
		thrmshutdown	A	Sets the severity level at which a thermal event triggers a system shutdown.
		webserver	A	Starts or stops the Web server.
	chassis			
		acswitch	P, A	Configures power cord redundancy when redundant power cords are installed.
		biossetup	A	Configures behavior of specific system components that are controlled by the BIOS.
		currents	P, A	Configures current probe warning thresholds by default or by value.
		fans	P, A	Configures fan probe warning thresholds by default or by value. <b>NOTE:</b> You cannot set warning threshold values by default on embedded server management (ESM3) systems.
		fancontrol	P, A	Allows you to optimize fan speed for maximum cooling or quiet operation.
		info	P, A	Allows you to set an initial value for, or to edit the value for, asset tag or chassis name.
		leds	P, A	Specifies when to flash a chassis fault LED or chassis identification LED, and allows you to clear the LED for the system's hard drive.
		memorymode	A	Enables or disables the spare bank and mirroring memory modes, and also specify which mode to use.
		powerbutton	A	Enables or disables power button settings.
		temps	P, A	Sets warning threshold values by default or value. <b>NOTE:</b> You cannot set warning threshold values by default on ESM3 systems.
		volts	P, A	Sets warning threshold values by default or value. <b>NOTE:</b> You cannot set warning threshold values by default on ESM3 systems.

## Help With the omconfig Command

Use the `omconfig -?` command to get a list of the available commands for `omconfig`.

Use `omconfig <command level 2> -?` to get help on the level 2 commands `about`, `chassis`, `preferences`, and `system`. The following information on `omconfig system -?` applies equally to getting help for the `omconfig chassis` command.

Use the `omconfig system -?` command to get a list of the available commands for `omconfig system`.

Use the `omconfig preferences -?` command to get a list of the available commands for `omconfig preferences`, such as `cdvformat`, which is the custom delimiter format (cdv). Type the following command to display the list of delimiter values for the cdv:

```
omconfig preferences cdvformat -?
```

Use a command of the form `omconfig system <command level 3> -?` to get a list of the parameters you must use to execute a particular `omconfig system` command. For example, the following commands produce a list of valid parameters for `omconfig system alertaction` and `omconfig system shutdown`:

```
omconfig system alertaction -?
```

```
omconfig system shutdown -?
```

In the case of the `omconfig system alertaction` command, you can use various options to prevent all of the CLI help from scrolling by before you can read it.

To scroll command output one screen at a time, type:

```
omconfig system alertaction -? | more
```

where `| more` allows you to press the spacebar to see the next screen of CLI help output.

To make a file that contains all of the help for the `omconfig system alertaction -?` command, type:

```
omconfig system alertaction -? -outa alert.txt
```

where `-outa` directs the output of the command to a file called `alert.txt`.

To read the help for the `alertaction` command on a Microsoft® Windows® or Red Hat® Linux operating system, type:

```
more alert.txt
```

## omconfig about

Use the `omconfig about` command to learn the product name and version number of the systems management application installed on your system. The following is example output from the `omconfig about` command:

```
Product name : Server Administrator
Version : 1.x.x
Copyright : Copyright (C) Dell Inc.
1995-2003. All rights reserved.
Company : Dell Inc.
```

For even more details about the environment for Server Administrator, type:

```
omconfig about details=true
```

Server Administrator includes a number of services, each of which has a version number of its own. The **Contains** field reports version numbers for the services and provides other useful details. The output that follows is an example, and it can change depending on your configuration and the version of Server Administrator that is available:

```
Contains:  Instrumentation Service 4.x.x
           Storage Management Service 3.x.x
           Update Service 1.x.x
           Diagnostic Service 2.x.x
           Sun JRE - OEM Installed Version 3.x.x
           Secure Port Server 1.x.x
           Core Service 1.x.x
           Instrumentation Service Integration Layer 1.x.x
           Storage Management Service Integration
           Layer 1.x.x
           Server Administrator 1.x.x
```

## omconfig chassis

Use the **omconfig chassis** commands to default or to set values for current, fan, voltage, and temperature probes, to configure BIOS behavior during system start up, to clear memory error counts, and to enable or disable power button control features where system configuration permits.

Use the **omconfig chassis -?** command to see a list of all **omconfig chassis** commands.



**NOTE:** When you issue CLI commands to a server module in a modular system, chassis refers only to the server module.

### omconfig chassis acswitch


Use the **omconfig chassis acswitch** command to configure how your system's power units respond to a failure in AC input. Table 7-2 shows the available configurations.


**Table 7-2. AC Switch Redundancy Configurations**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Description
omconfig	chassis	acswitch		
			mode=source1	Input source Line 1, on restoration, remain on Line 2. When power fails on power unit Line 1, switch to Line 2. Remain on Line 2 after power is restored on Line 1.
			mode=source1return	Input source Line 1, on restoration, return to Line 1. When power fails on power unit Line 1, switch to Line 2. Switch back to Line 1 after power is restored on Line 1.
			mode=source2	Input source Line 2, on restoration, remain on Line 1. When power fails on power unit Line 2, switch to Line 1. When redundancy is restored remain on Line 1.
			redunexpected=true   false	Whether power unit redundancy is configured for this system.

**omconfig chassis biossetup**

Use the `omconfig chassis biossetup` command to configure system BIOS settings that are normally available only in your system's BIOS setup boot time settings.

 **NOTICE:** Changing certain BIOS setup options might disable your system or require you to reinstall the operating system.

 **NOTE:** You must reboot your system before any changes to the BIOS setup options take effect.

 **NOTE:** Not all BIOS setup options are available on every system.

Table 7-3 shows the name=value pairs you can use with this command.

**Table 7-3. BIOS Setup**

<b>Name=value pair 1 attribute=</b>	<b>Name=value pair 2 setting=</b>	<b>Description</b>
attribute=bezel	setting=enable   disable	<b>enable:</b> Enable the bezel removal intrusion check during system boot. <b>disable:</b> Disable the bezel removal intrusion check during system boot.
attribute=bootsequence	setting=diskettefirst   hdonly   devicelist   cdromfirst	Tells the BIOS which device is used to boot the system, and the order in which the boot routine is to check each device.
attribute=diskette	setting=off   auto   writeprotect	<b>off:</b> Disable the diskette drive. <b>auto:</b> Auto enable the diskette drive. <b>writeprotect:</b> Do not allow writes. Make the diskette drive read only.
attribute=ide	setting=on   off force=true	<b>on:</b> Enable this device. <b>off:</b> Disable this device. <b>force=true:</b> Verification of setting change.
attribute=intrusion	setting=enable   disable	<b>enable:</b> Enable the intrusion check during system boot. If the system also has bezel intrusion checking, then the intrusion option checks for removal of the back of the system. <b>disable:</b> Disable the intrusion check during system boot.
attribute=mouse	setting=on   off	<b>on:</b> Enable the mouse. <b>off:</b> Disable the mouse.
attribute=nic	setting=enabled   disabled   enablednonepxe	<b>enabled:</b> Enable the NIC during system boot (with PXE on if the system has PXE). <b>disabled:</b> Disable the NIC during system boot. <b>enablednonepxe:</b> Enable the NIC during system boot (with PXE off if the system has PXE).

**Table 7-3. BIOS Setup (continued)**

<b>Name=value pair 1 attribute=</b>	<b>Name=value pair 2 setting=</b>	<b>Description</b>
attribute=nic2	setting=enabled   disabled   enablednonepxe	<p><b>enabled:</b> Enable the second NIC during system boot (with PXE on if the system has PXE).</p> <p><b>disabled:</b> Disable the second NIC during system boot.</p> <p><b>enablednonepxe:</b> Enable the second NIC during system boot (with PXE off if the system has PXE)S.</p>
attribute=numlock	setting=on   off	<p><b>on:</b> Use the keypad as number keys.</p> <p><b>off:</b> Use the keypad as arrow keys.</p>
attribute=ppaddress	setting=off   lpt1   lpt2   lpt3	<p><b>off:</b> Disable the parallel port address.</p> <p><b>lpt1:</b> Locate the device on LPT1.</p> <p><b>lpt2:</b> Locate the device onLPT2.</p> <p><b>lpt3:</b> Locate the device on LPT3.</p>
attribute=ppmode	setting=at   ps2   ecp   epp	<p><b>at:</b> Set the parallel port mode to type AT.</p> <p><b>ps2:</b> Set the parallel port mode to type PS/2.</p> <p><b>ecp:</b> Set the parallel port mode to type ECP (extended capabilities port).</p> <p><b>epp:</b> Set the parallel port mode to type EPP (enhanced parallel port).</p>
attribute=primaryscsi	setting=on   off force=true	<p><b>NOTICE:</b> If you modify the setting for <b>primary scsi, romb, romba, or rombb</b>, your system becomes inoperable until you reinstall the operating system.</p> <p><b>on:</b> Enable this device.</p> <p><b>off:</b> Disable this device.</p> <p><b>force=true:</b> Verification of setting change.</p>

**Table 7-3. BIOS Setup (continued)**

<b>Name=value pair 1 attribute=</b>	<b>Name=value pair 2 setting=</b>	<b>Description</b>
attribute=romb	setting=raid   off   scsi force=true	<p><b>raid:</b> Instructs the BIOS to detect RAID-on-motherboard as a RAID device.</p> <p><b>off:</b> Disable the device during system boot.</p> <p><b>scsi:</b> Instructs the BIOS to detect this device as a SCSI device.</p> <p><b>force=true:</b> Verification of setting change.</p>
attribute=romba	setting=raid   scsi force=true	<p><b>raid:</b> Instructs the BIOS to detect RAID-on-motherboard channel A as a RAID device.</p> <p><b>scsi:</b> Instructs the BIOS to detect this device as a SCSI device.</p> <p><b>force=true:</b> Verification of setting change.</p>
attribute=rombb	setting=raid   scsi force=true	<p><b>raid:</b> Instructs the BIOS to detect RAID-on-motherboard channel B as a RAID device.</p> <p><b>scsi:</b> Instructs the BIOS to detect this device as a SCSI device.</p> <p><b>force=true:</b> Verification of setting change.</p>
attribute=secondaryscsi	setting=on   off	<p><b>on:</b> Enable this device.</p> <p><b>off:</b> Disable this device.</p>
attribute=serialport1	setting=off   auto   com1   com3	<p><b>off:</b> Disable serial port 1.</p> <p><b>auto:</b> Map serial port 1 to a COM port.</p> <p><b>com1:</b> Map serial port 1 to COM port 1.</p> <p><b>com3:</b> Map serial port 1 to COM port 3.</p>

**Table 7-3. BIOS Setup (continued)**

<b>Name=value pair 1 attribute=</b>	<b>Name=value pair 2 setting=</b>	<b>Description</b>
attribute=serialport2	setting=off   auto   com2   com4	<b>off:</b> Disable serial port 2. <b>auto:</b> Map serial port 2 to a COM port. <b>com2:</b> Map serial port 2 to COM port 2. <b>com4:</b> Map serial port 2 to COM port 4.
attribute=speaker	setting=on   off	<b>on:</b> Enable the speaker. <b>off:</b> Disable the speaker.
attribute=usb	setting=enabled   disabled	<b>NOTE:</b> Only one of the two attributes <b>usb</b> and <b>usbb</b> is available for configuring the USB port(s), depending on your system's hardware. <b>enabled:</b> Enable the USB port(s). <b>disabled:</b> Disable the USB port(s).
attribute=usbb	setting=enabled   enabledwithbios   disabled	<b>enabled:</b> Enable the USB port(s) during system boot, without BIOS support. <b>enabledwithbios:</b> Enable the USB port(s) during the system boot, with BIOS support. <b>disabled:</b> Disable the USB port(s) during system boot.

### omconfig chassis currents

Use the `omconfig chassis currents` command to set amperage probe warning thresholds. As with other components, you can view both warning and failure threshold values, but you cannot set failure thresholds. Your system's manufacturer sets the minimum and maximum failure thresholds.




**NOTE:** Settable thresholds vary from one system configuration to another.



**NOTE:** Systems that contain embedded systems management 3 (ESM3) capabilities do not allow you to set warning threshold values to default values.

### Valid Parameters for Current Warning Thresholds

Table 7-4 shows the valid parameters for setting current warning thresholds:

 **NOTE:** The index parameter is optional. If you do not specify the index, Server Administrator displays a summary of status, readings, and thresholds set for all current probes present on your system. [Current probes are not present in all systems.] If you specify the index, Server Administrator displays a summary for a specific current probe.

**Table 7-4. omconfig chassis currents**

<b>Name=value pair</b>	<b>Description</b>
index=<n>	Number of the probe or probe index (must be specified).
warnthresh=default	Sets minimum and maximum warning thresholds to default.
minwarnthresh=<n>	Minimum warning threshold (3 decimal places).
maxwarnthresh=<n>	Maximum warning threshold (3 decimal places).

### **Default Minimum and Maximum Warning Thresholds**

If you want to set both the upper and lower current warning threshold values to the recommended default value, type:

```
omconfig chassis currents index=0 warnthresh=default
```

You cannot default one value and set another. In other words, if you default the minimum warning threshold value, you are also selecting the default value for the maximum warning threshold value.

### ***Specify a Value for Minimum and Maximum Warning Thresholds***

If you prefer to specify values for the current probe warning thresholds, you must specify the number of the probe you are configuring and the minimum and/or maximum warning threshold values. In the following example, the probe that is being configured is probe 0:

```
omconfig chassis currents index=0 minwarnthresh=3.310  
maxwarnthresh=3.381
```

When you issue the command and the system sets the values you specify, the following message appears:

```
Current probe warning threshold(s) set successfully.
```

### **omconfig chassis fans**

Use the `omconfig chassis fans` command to set fan probe warning thresholds. As with other components, you can view both warning and failure threshold values, but you cannot set failure thresholds. Your system's manufacturer sets the minimum and maximum failure thresholds.


### **Valid Parameters for Fan Warning Thresholds**

Table 7-5 shows the valid parameters for setting fan warning thresholds:

**Table 7-5. omconfig chassis fans**

Name=value pair	Description
index=<n>	Number of the probe or probe index (must be specified).
warnthresh=default	Sets minimum and maximum warning thresholds to default.
minwarnthresh=<n>	Minimum warning threshold.
maxwarnthresh=<n>	Maximum warning threshold.

### Default Minimum and Maximum Warning Thresholds

 **NOTE:** Systems that contain ESM3 capabilities do not allow you to set warning threshold values to default values.

If you want to set both the upper and lower fan warning threshold values to the recommended default value, type:

```
omconfig chassis fans index=0 warnthresh=default
```

You cannot default one value and set another. In other words, if you default the minimum warning threshold value, you are also selecting the default value for the maximum warning threshold value.

### *Specify a Value for Minimum and Maximum Warning Thresholds*

If you prefer to specify values for the fan probe warning thresholds, you must specify the number of the probe you are configuring and the minimum and/or maximum warning threshold values. In the following example, the probe that is being configured is probe 0. The first command sets only the minimum threshold; the second sets minimum and maximum thresholds:

```
omconfig chassis fans index=0 minwarnthresh=3.31
omconfig chassis fans index=0 minwarnthresh=3.32
maxwarnthresh=3.38
```

When you issue the command and the system sets the values you specify, the following message appears:

```
Fan probe warning threshold(s) set successfully.
```

### **omconfig chassis fancontrol**

Use the **omconfig chassis fancontrol** command to set fan speed. You can optimize speed for cooling or for quiet operation. Table 7-6 shows the valid parameters for the command.

**Table 7-6. omconfig chassis fancontrol**

Name=value pair	Description
speed=quiet	Sets fan speed for quiet operation.

**Table 7-6. omconfig chassis fancontrol**

Name=value pair	Description
speed=maxcool	Sets fan speed for maximum cooling.

### omconfig chassis info

Use the **omconfig chassis info** command to enter an asset tag name for your system and a chassis name for your system. If your system is a modular one, you can enter asset tag names for modular components as well. Table 7-7 shows the valid parameters for the command.

**Table 7-7. omconfig chassis info**

Name=value pair	Description
index=<n>	Number of the chassis whose asset tag or name you are setting.
tag=<text>	Asset tag in the form of alphanumeric text. Letters or numbers cannot exceed 10 characters.
name=<text>	Name of the chassis.

In the following example, the asset tag for the main system chassis is being set to **buildsys**:

```
omconfig chassis info index=0 tag=buildsys
```

Index 0 always defaults to main system chassis. The following command omits `index=n`, but accomplishes the same thing:

```
omconfig chassis info tag=buildsys
```

An acceptable command, when executed, results in the following message:

```
Chassis info set successfully.
```

For some chassis, you can assign a different name. You cannot rename the main system chassis. In the example below, the command renames chassis 2 from **storscsi1** to **storscsia**:

```
omconfig chassis info index=2 name=storscsia
```

As with other commands, the CLI issues an error message if you do not have a chassis 2 (the main chassis=0). The CLI allows you to issue commands only for the system configuration you have.

### omconfig chassis leds

Use the **omconfig chassis leds** command to specify when to flash a chassis fault LED or chassis identification LED and allow you to clear the LED for the system's hard drive. Table 7-8 shows the valid parameters for the command.

**Table 7-8. omconfig chassis leds**

Name=value pair 1	Name=value pair 2	Description
index=<n>	NA	Number of the chassis where the LED resides (defaults to chassis 0, main system chassis).
led=fault	severity=warning   critical	Select to flash the LED either when a warning event occurs or when a critical event occurs.
led=hdfault	action=clear	Sets the number of faults for the hard drive back to zero (0).
led=identify	flash=off   on time-out=<n>	Sets the chassis identification LED to off or on. Set the time-out value for the LED to flash to a number of seconds.

### omconfig chassis memorymode

Use the **omconfig chassis memorymode** command to specify the redundancy mode you want to use for your system's memory in case of memory errors.

Redundant memory enables a system to switch to other available memory modules if unacceptable errors are detected in the modules it is currently using. The **omconfig chassis memorymode command** allows you to disable redundancy; when you disable redundancy, you instruct the system not to switch to other available memory modules when the module the system is using begins to encounter errors. If you want to enable redundancy, you must choose between spare bank and mirroring.

Spare bank mode disables a bank of system memory in which a single-bit ECC error is detected, enables the spare bank, and copies all the data from the original bank to the spare bank. Spare bank requires at least three banks of identical memory; the operating system does not recognize the spare bank.

Mirroring mode switches to a redundant copy of memory when a multibit error is detected. After switching to the mirrored memory, the system does not switch back to the original system memory until the next reboot. The operating system does not recognize half of the installed system memory in this mode.

Table 7-9 shows the valid parameters for the command.

**Table 7-9. omconfig chassis memorymode**

Name=value pair 1	Description
index=<n>	Number of the chassis where the memory module resides (the default is chassis 0, the main system chassis).

**Table 7-9. omconfig chassis memorymode**

Name=value pair 1	Description
redundancy=spare   mirrored   disabled	<b>Disabled</b> indicates that the system is not to use other available memory modules if multibit memory errors are detected. <b>Spare</b> disables the memory module that has a single-bit memory error and copies the failing module's data to a spare bank. <b>Mirrored</b> switches the systems to a mirrored copy of the memory if the failing module has a multibit error. In mirrored mode, the operating system does not switch back to the original module until the system reboots.

### omconfig chassis powerbutton

Use this command to enable or to disable power button override on systems where this feature is present. Table 7-10 shows the valid parameters for the command.

**Table 7-10. omconfig chassis powerbutton**

Name=value pair 1	Description
enable=true   false	Enables or disables the power button on the system.

### omconfig chassis temps

Use the `omconfig chassis temps` command to set warning thresholds for temperature probes. As with other components, you can view both warning and failure threshold values, but you cannot set failure thresholds. Your system's manufacturer sets the minimum and maximum failure thresholds.



**NOTE:** Settable thresholds vary from one system configuration to another.


#### Valid Parameters for Temperature Warning Thresholds

Table 7-11 shows the valid parameters for setting temperature warning thresholds:

**Table 7-11. omconfig chassis temps**

Name=value pair	Description
index=<n>	Number of the probe or probe index (must be specified).
warnthresh=default	Sets minimum and maximum warning thresholds to default.
minwarnthresh=<n>	Minimum warning threshold (1 decimal place).
maxwarnthresh=<n>	Maximum warning threshold (1 decimal place).

## Default Minimum and Maximum Warning Thresholds

 **NOTE:** Systems that contain ESM3 capabilities do not allow you to set warning threshold values to default values.

If you want to set both the upper and lower temperature warning threshold values to the recommended default value, type:

```
omconfig chassis temps index=0 warnthresh=default
```

You cannot default one value and set another. In other words, if you default the minimum warning threshold value, you are also selecting the default value for the maximum warning threshold value.

## Specify a Value for Minimum and Maximum Warning Thresholds

If you prefer to specify values for the temperature probe warning thresholds, you must specify the number of the probe you are configuring and the minimum and/or maximum warning threshold value. In the following example, the probe that is being configured is probe 4:

```
omconfig chassis temps index=4 minwarnthresh=11.2
maxwarnthresh=58.7
```

When you issue the command and the system sets the values you specify, the following message appears:


```
Temperature probe warning threshold(s) set successfully.
```

## omconfig chassis volts

Use the `omconfig chassis volts` command to set voltage probe warning thresholds. As with other components, you can view both warning and failure threshold values, but you cannot set failure thresholds. Your system's manufacturer sets the minimum and maximum failure thresholds.

## Valid Parameters for Voltage Warning Thresholds


Table 7-12 shows the valid parameters for setting voltage warning thresholds.

 **NOTE:** Settable thresholds vary from one system configuration to another.

**Table 7-12. omconfig chassis volts**

Name=value pair	Description
index=<n>	Probe index (must be specified).
warnthresh=default	Sets minimum and maximum warning thresholds to default.
minwarnthresh=<n>	Minimum warning threshold (3 decimal places).
maxwarnthresh=<n>	Maximum warning threshold (3 decimal places).

## Default Minimum and Maximum Warning Thresholds

 **NOTE:** Systems that contain ESM3 capabilities do not allow you to set warning threshold values to default values.

If you want to set both the upper and lower voltage warning threshold values to the recommended default value, type:

```
omconfig chassis voltage index=2 warnthresh=default
```

You cannot default one value and set another. In other words, if you default the minimum warning threshold value, you are also selecting the default value for the maximum warning threshold value.

### *Specify a Value for Minimum and Maximum Warning Thresholds*

If you prefer to specify values for the voltage probe warning thresholds, you must specify the number of the probe you are configuring and the minimum and/or maximum warning threshold values. In the following example, the probe that is being configured is probe 0:

```
omconfig chassis volts index=0 minwarnthresh=1.900  
maxwarnthresh=2.250
```

When you issue the command and the system sets the values you specify, the following message appears:


```
Voltage probe warning threshold(s) set successfully.
```

## omconfig preferences

Use the **omconfig preferences** command to set system preferences. On the command line, you can set the SNMP root password and specify which user levels are able to access Server Administrator.

### **omconfig preferences snmp**

Setting the SNMP root password allows administrators to restrict access to SNMP set operations that allow important systems management interventions. You can configure the SNMP root password normally (by typing all of the parameters in one command line) or interactively.

 **NOTICE:** Interactive mode is the more secure method of setting the SNMP root password. In noninteractive mode, the values you enter for the **newpw** and **confirmnewpw** options appear on your system's monitor when you type them. In interactive mode, the values you type for passwords are masked.

The parameters for configuring the SNMP root password are the same whether you configure it interactively or iteratively.


 **NOTE:** If you specify **setting=rootpw** but do not specify the other name=value pair parameters, you enter interactive mode, and the command line prompts you for the remaining values.

Table 7-13 shows the valid parameters for the command.

**Table 7-13. SNMP Root Password Parameters**

Name=value pair	Description
setting=rootpw	Required.
oldpw=<oldpassword>	Enter the old SNMP root password.
newpw=<newpassword>	Sets the new SNMP root password.
confirmnewpw=<newpassword>	Confirms the new SNMP root password.

When you type `omconfig preferences snmp setting=rootpw`, the system prompts you to supply values for the required parameters.

When you type `omconfig preferences snmp`, you must supply all of the parameters in the initial command line. For example:

```
omconfig preferences snmp setting=rootpw oldpw=openmanage
newpw=serveradmin confirmnewpw=serveradmin
```

### omconfig preferences useraccess

Depending on the policies of your enterprise, you may want to restrict the access that some user levels have to Server Administrator. The **omconfig preferences useraccess** command allows you to grant or withhold the right of Users and Power Users to access Server Administrator. Table 7-14 shows the valid parameters for the command.

**Table 7-14. Enabling User Access for Administrators, Power Users, and Users**

Command	Result	Description
<code>omconfig preferences useraccess enable=user</code>	Grants Server Administrator access to Users, Power Users, and Administrators.	Least restrictive form of user access.
<code>omconfig preferences useraccess enable=poweruser</code>	Grants Server Administrator access to Power Users and Administrators.	Excludes user level access only.
<code>omconfig preferences useraccess enable=admin</code>	Grants Server Administrator access to Administrators <i>only</i> .	Most restrictive form of user access.

## **omconfig preferences cdvformat**

You can use the **omconfig preferences cdvformat** to specify the delimiters for separating data fields reported in the custom delimited format. The valid values for delimiters are: exclamation, semicolon, at, hash, dollar, percent, caret, asterisk, tilde, question, colon, comma, and pipe.

The following example shows how to set the delimiter for separating data fields to asterisk:

```
omconfig preferences cdvformat delimiter=asterisk
```

## **omconfig system**

Use the **omconfig system** commands to clear logs, determine how various shutdown actions occur, set initial values or edit values for cost of ownership information, and determine how to respond to a hung operating system.

### **omconfig system alertaction**

You can use the **omconfig system alertaction** command to determine how Server Administrator responds when a component has a warning or failure event.

#### **Defining Alert Actions**

An alert action is an action that you can specify for your system to take when specified conditions are met. Alert actions determine in advance what actions are to be taken for warning or failure events on intrusion, fans, temperatures, voltages, power supplies, memory, and redundancy.

For example, if a fan probe on your system reads a fan RPM of 300 and your minimum warning threshold value for that fan probe is 600 RPM, then your system generates a fan probe warning. Alert action settings determine how persons are notified of this event. For temperature, voltage, and current probe readings that fall within the warning or failure range, you can also configure alert actions.

#### **Syntax for Setting Alert Actions**

Setting an alert action requires two name=value pairs. The first name=value pair is the event type. The second name=value pair is the action you want to take for this event. For example, in the command:

```
omconfig system alertaction event=powersupply broadcast=true
```

the event is a power supply failure and the action is to broadcast a message to all Server Administrator users.

#### **Available Alert Actions**

Table 7-15 shows the alert actions for each component that allows you to configure an alert action.

**Table 7-15. Alert Actions You Can Set for Warning and Failure Events**

<b>Alert Action Setting</b>	<b>Description</b>
beep=true   false	<b>true:</b> Enables your system's beep speaker. When enabled, the speaker on the system from which you are running Server Administrator beeps. <b>false:</b> Disables your system's beep speaker.
alert=true   false	<b>true:</b> Enables your system's console alert. When enabled, the monitor attached to the system from which you are running Server Administrator displays a visual alert message. <b>false:</b> Disables your system's console alert.
broadcast=true   false	<b>true:</b> Enables a message or alert to be broadcast to all users that have drives mapped to the system. <b>false:</b> Disables alert broadcasts.
clearall=true	Clears all actions for this event.
defaultall =true	Sets all actions for this event to the default for events of this type.
execappath	Sets the fully qualified path and filename of the application you want to execute in case of an event for the component described in this window.
execapp=false	Disables the executable application.

### Components and Events for Which You Can Set Alert Actions

Table 7-16 lists the components and the events for which you can set alert actions. Components are listed in alphabetical order, except that warning events always precede failure events for a component.

**Table 7-16. Events for Which You Can Set Alert Actions**

<b>Event Name</b>	<b>Description</b>
event=currentwarn	Sets actions when a current probe detects a warning value.
event=currentfail	Sets actions when a current probe detects a failure value.
event=fanwarn	Sets actions when a fan probe detects a warning value.
event=fanfail	Sets actions when a fan probe detects a failure value.
event=intrusion	Sets actions when a chassis intrusion event is detected.
event=memprefail	Sets actions when a memory probe detects a prefailure value.
event=memfail	Sets actions when a memory probe detects a failure value.
event=powersupply	Sets power supply failure actions.

**Table 7-16. Events for Which You Can Set Alert Actions (continued) (continued)**

<b>Event Name</b>	<b>Description</b>
event=redundegrad	Sets actions when a redundant component becomes inoperative, resulting in less than full redundancy for that component.
event=redunlost	Sets actions when one or more redundant components become inoperative, resulting in a lost or a "no redundant components working" condition for that component.
event=tempwarn	Sets actions when a temperature probe detects a warning value.
event=tempfail	Sets actions when a temperature probe detects a failure value.
event=voltwarn	Sets actions when a voltage probe detects a warning value.
event=voltfail	Sets actions when a voltage probe detects a failure value.

### **Example Set Alert Action Commands**

The examples below are valid example commands. For each successful command issued, the following message appears:

```
Alert action(s) configured successfully.
```

### **Example Current Probe Actions**

To disable system speaker beeping if a current probe detects a warning event, type:

```
omconfig system alertaction event=currentwarn beep=false
```

To enable broadcast messages if a current probe detects a failure event, type:

```
omconfig system alertaction event=currentfail broadcast=true
```

### **Example Fan Probe Actions**

To set fan warning alert actions to default, type:

```
omconfig system alertaction event=fanwarn defaultall=true
```

To generate alerts when a fan probe detects a failure value, type:

```
omconfig system alertaction event=fanfail alert=true
```

### **Example Chassis Intrusion Actions**

To clear all alert actions for chassis intrusion, type:

```
omconfig system alertaction event=intrusion clearall=true
```

### **Commands for Clearing Logs**




**NOTE:** For more information about alert messages, see the *Dell OpenManage Server Administrator Messages Reference Guide*.

You can use the **omconfig system** command to clear three logs: the alert log, the command log, and the hardware, or ESM, log.

To clear the contents of the alert log, type:

```
omconfig system alertlog action=clear
```

 **NOTE:** Entering an invalid RAC user name may prevent the command log from displaying. Clearing the command log resolves this condition.

To clear the contents of the command log, type:


```
omconfig system cmdlog action=clear
```

To clear the contents of the ESM log, type:

```
omconfig system esmlog action=clear
```

### omconfig system events

Use the **omconfig system events** command to enable and disable SNMP traps for components on your system.

 **NOTE:** Not all event types may be present on your system.

There are four parameters in the name=value pair component of the **omconfig system events** command:

- source
- type
- severity
- index

#### Source

At present, `source=snmptraps` is a required name=value pair because SNMP is currently the only supported source of event notification for your system's components.

```
omconfig system events source=snmptraps
```

#### Type

The event type refers to the name of the component(s) involved in the event. Table 7-17 shows the valid parameters for system event types.

**Table 7-17. System Event Type Parameters**

Name=value pair	Description
type=accords	Configures events for AC power cords.
type=all	Configures events for all device types.
type=currents	Configures events for amperage.

**Table 7-17. System Event Type Parameters (continued)**

<b>Name=value pair</b>	<b>Description</b>
type=fanenclosures	Configures events for fan enclosures.
type=fans	Configures events for fans.
type=intrusion	Configures events for chassis intrusion.
type=log	Configures events for logs.
type=memory	Configures events for memory.
type=powersupplies	Configures events for power supplies.
type=redundancy	Configures events for redundancy.
type=temps	Configures events for temperatures.
type=volts	Configures events for voltages.

**Severity**

In the context of configuring events, severity determines how severe an event must be before Server Administrator notifies you of the event for a component type. When there are multiple components of the same type in the same system chassis, you can also specify whether you want to be notified for event severity according to the number of the component by using the `index=<n>` parameter. Table 7-18 shows the valid severity parameters.

**Table 7-18. System Event Severity Parameters**

<b>Command</b>	<b>Result</b>	<b>Description</b>
omconfig system events type=<component name> severity=info	Enables notification for informational, warning, and critical events.	Least restrictive form of event notification.
omconfig system events type=<component name> severity=warning	Enables notification for warning and critical events.	Omits informational event notification, for example, when a component returns to normal status.
omconfig system events type=<component name> severity=critical	Enables notification for critical events only.	Restrictive form of event notification.

**Table 7-18. System Event Severity Parameters (continued)**

Command	Result	Description
omconfig system events type=<component name> severity= none	Disables event notification.	No event notification.

**Index**

Index refers to the number of an event for a particular component. Index is an optional parameter. When you omit the index parameter, events are configured for all components of the specified type, such as all fans. When a system contains more than one fan, for example, you can enable or disable event notification for a particular fan. An example command is as follows:

```
omconfig system events type=fan index=0 severity=critical
```

As a result of the example command, Server Administrator will send an SNMP trap only when the first fan in the system chassis (index 0) has reached critical fan RPMs.

**omconfig system webserver**

Use the `omconfig system webserver` command to start or stop the Web server. Table 7-19 shows the valid parameters for the command.

**Table 7-19. Web Server Configuration Parameters**

Name=value pair	Description
action=start	Starts the Web server.
action=stop	Stops the Web server.
action=restart	Restarts the Web server.

**omconfig system recovery**

Use the `omconfig system recovery` command to set the action that is to be taken when the operating system has hung or crashed. You can also set the number of seconds that must pass before the system is considered to have a hung operating system. Table 7-20 shows the valid parameters for the command.



**NOTE:** Upper and lower limits for the timer are dependent on your system model and configuration.

**Table 7-20. Recovery Parameters**

Name=value pair	Description
action=none	Takes no action when the operating system is hung or has crashed.
action=reboot	Shuts down the operating system and initiates system startup, performing BIOS checks and reloading the operating system.
action=poweroff	Turns off electrical power to the system.

**Table 7-20. Recovery Parameters (continued)**

<code>action=powercycle</code>	Turns off electrical power to the system, pauses, turns the power on, and reboots the system. Power cycling is useful when you want to reinitialize system components such as hard drives.
<code>timer=&lt;n&gt;</code>	Number of seconds that must pass before a system is considered to have a hung operating system (from 20 seconds to 480 seconds).

---

### Example Recovery Commands

To set the action on hung operating system detection to `powercycle`, type:

```
omconfig system recovery action=powercycle
```

To set the amount of time that the system must be hung before a recovery action is initiated to 120 seconds, type:

```
omconfig system recovery timer=120
```

### omconfig system shutdown

Use the `omconfig system shutdown` command to determine how the system shuts down. During system shutdown, the default is to shut down the operating system before powering off the system. Shutting down the operating system first closes down the file system before powering the system down. If you do not want to shut down the operating system first, you can use the parameter `osfirst=false`. Table 7-21 shows the valid parameters for the command.

**Table 7-21. Shutdown Parameters**

Name=value pair	Description
<code>action=reboot</code>	Shuts down the operating system and initiates system startup, performing BIOS checks and reloading the operating system.
<code>action=poweroff</code>	Turns the electrical power to the system off.
<code>action=powercycle</code>	Turns the electrical power to the system off, pauses, turns the power on, and reboots the system. Power cycling is useful when you want to reinitialize system components such as hard drives.
<code>osfirst=true   false</code>	Closes the file system and exits the operating system before shutting down the system.

---

### Example Shutdown Commands

To set the shutdown action to `reboot`, type:

```
omconfig system shutdown action=reboot
```

To bypass operating system shutdown before the system is powered off, type:

```
omconfig system shutdown action=reboot osfirst=false
```

## omconfig system thrmshutdown

Use the `omconfig system thrmshutdown` command to configure a thermal shutdown action. A thermal shutdown can be configured to occur when a temperature probe detects a temperature probe warning or failure event. Table 7-22 shows the valid parameters for the command.

**Table 7-22. Thermal Shutdown Parameters**

Name=value pair	Description
severity=disabled   warning   failure	<p><b>disabled:</b> Disable thermal shutdown. An administrator must intervene.</p> <p><b>warning:</b> Perform a shutdown when a temperature warning event is detected. A warning event occurs when any temperature probe inside a chassis reads a temperature (in degrees Celsius) which exceeds the maximum temperature warning threshold.</p> <p><b>failure:</b> Perform a shutdown when a temperature failure event is detected.</p>

### Example Thermal Shutdown Commands

To trigger a thermal shutdown when a temperature probe detects a failure event, type:

```
omconfig system thrmshutdown severity=failure
```

To disable thermal shutdown so that an administrator has to initiate an `omconfig system shutdown`, type:

```
omconfig system thrmshutdown severity=disabled
```

# omconfig system assetinfo: Editing Cost of Ownership Values

## omconfig System Asset Info Overview

The `omconfig system assetinfo` command helps you to edit a comprehensive set of parameters that make up your system's total cost of ownership. This section explains the parameters that can be reported and configured under the `omconfig system assetinfo` command.

Using the `omconfig system assetinfo` command, you can set governing values for configurable objects. Examples of `assetinfo` configuration capabilities include setting values for system owner, purchase price, details of any lease that is in effect, depreciation methods and rates, and location of the system, warranty and extended warranty duration, outsourcing details, and service level agreement.

### User Level Required for Adding Asset Information

Power Users and Administrators can add and edit asset information.

## Adding Acquisition Information

Acquisition refers to the facts about a business entity's purchase or lease of a system. Use the `omconfig system assetinfo info=acquisition` command to add detailed information about the purchase or lease of a system. Table 8-1 shows the valid parameters for the command.

**Table 8-1. omconfig system assetinfo info=acquisition**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
omconfig	system	assetinfo	info=acquisition	costcenter=<text>	The name or code for the business entity that acquired the system.

**Table 8-1. omconfig system assetinfo info=acquisition (continued)**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
				expensed=yes   no	Whether the system is charged to a specific purpose or department such as research and development or sales.
				installdate=<mmddy>	Date the system was put into service.
				ponum=<n>	Number of the document that authorized payment for the system.
				purchasecost=<n>	Price the owner paid for the system.
				purchasedate=<mmddy>	Date the owner purchased the system.
				signauth=<text>	Name of the person who approved the purchase or the service call on the system.
				waybill=<n>	Receipt from the carrier for the goods received.

### Example Commands for Adding Acquisition Information

To provide a value for an acquisition parameter, type a command of the form: **omconfig system assetinfo info=acquisition <name=value pair 2>**. For example, type:

```
omconfig system assetinfo info=acquisition purchasedate=122101
```

The following message appears:

```
Asset information set successfully.
```

You can enter more than one **omconfig system assetinfo** command at the same time, as long as all of the parameters for name=value pair 2 belong to the same name=value pair 1. For example, if you want to enter more than one parameter value for **info=acquisition**, use the following example as a syntax guide:

```
omconfig system assetinfo info=acquisition purchasecost=5000
waybill=123456 installdate=120501 purchasedate=050601 ponum=
9999 signauth="John Smith" expensed=yes costcenter=finance
```

The following message appears:

```
Asset information set successfully.
```

## Adding Depreciation Information

Depreciation is a set of methods for computing the devaluation of your asset over time. For example, the depreciation of a system that is expected to have a useful life of 5 years would be 20 percent. Use the `omconfig system assetinfo=depreciation` command to add details about how your system's depreciation is to be computed. Table 8-2 shows the valid parameters for the command.

**Table 8-2.** `omconfig system assetinfo info=depreciation`

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
<code>omconfig</code>	<code>system</code>	<code>assetinfo</code>	<code>info=depreciation</code>	<code>duration=&lt;n&gt;</code>	The length of time over which a system is depreciated. Enter the number of months or years.
				<code>method=&lt;text&gt;</code>	Steps and assumptions used to compute the system's depreciation.
				<code>percent=&lt;n&gt;</code>	Portion of 100 that an asset is devalued or depreciated.
				<code>unit=months   years</code>	Unit is months or years.

### Example Commands for Adding Depreciation Information

To provide a value for a depreciation parameter, type a command of the form: `omconfig system assetinfo info=depreciation <name=value pair 2>`. For example, type:

```
omconfig system assetinfo info=depreciation method=
straightline
```

The following message appears:

```
Asset information set successfully.
```

You can enter more than one `omconfig system assetinfo` command at the same time, as long as all of the parameters for `name=value pair 2` belong to the same `name=value pair 1`. For an example, see "Example Commands for Adding Acquisition Information."

## Adding Extended Warranty Information

Use the `omconfig system extwarranty` command to assign values for extended warranty information. A warranty is a contract between the manufacturer or dealer and the purchaser of a system. The warranty identifies the components that are covered for repair or replacement for a specified length of time or usage. The extended warranty comes into force after the original warranty expires. For details on how to edit warranty values, see "Adding Warranty Information."

Table 8-3 shows the valid parameters for the command.

**Table 8-3. omconfig system assetinfo info=extwarranty**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
omconfig					
	system				
		assetinfo			
			info=extwarranty		
				cost=<cost>	Cost of the extended warranty service.
				enddate=<enddate>	Date the extended warranty agreement ends.
				provider=<provider>	Business entity that provides the extended warranty service.
				startdate=<startdate>	Date the extended warranty service begins.

### Example Command for Adding Extended Warranty Information

To provide a value for an extended warranty parameter, type a command of the form: `omconfig system assetinfo info=extwarranty <name=value pair 2>`. For example, type:

```
omconfig system assetinfo info=extwarranty enddate=012503
```

The following message appears:

```
Asset information set successfully.
```

You can enter more than one `omconfig system assetinfo` command at the same time, as long as all of the parameters for name=value pair 2 belong to the same name=value pair 1. For an example, see "Example Commands for Adding Acquisition Information."

## Adding Lease Information

A lease is an agreement to pay for the use of a system for a specified period of time. The lessor retains ownership of the system. Table 8-4 shows the valid parameters for the command.

**Table 8-4. omconfig system assetinfo info=lease**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
omconfig	system	assetinfo	info=lease	buyout= <amount>	Amount of money paid to purchase a system from a lessor.
				lessor= <lessor>	Business entity that is leasing the system out.
				multischedule= =true   false	Whether cost of leasing the system is computed by more than one rate schedule.
				ratefactor= <factor>	Factor used to calculate the lease payment.
				value= <residual>	Fair market value of the system at the end of the lease period.

### Example Command for Adding Lease Information

To provide a value for a lease parameter, type a command of the form: `omconfig system assetinfo info=lease <name=value pair 2>`. For example, type:

```
omconfig system assetinfo info=lease value=4500
```

The following message appears:

```
Asset information set successfully.
```

You can enter more than one **omconfig system assetinfo** command at the same time, as long as all of the parameters for name=value pair 2 belong to the same name=value pair 1. For an example, see "Example Commands for Adding Acquisition Information."

## Adding Maintenance Information

Maintenance refers to activities required to keep the system in good working order. Table 8-5 shows the valid parameters for adding maintenance information.

**Table 8-5. omconfig system assetinfo info=maintenance**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
omconfig	system	assetinfo	info=maintenance	enddate= <enddate>	Date the extended warranty agreement ends.
				provider= <provider>	Business entity providing the maintenance service.
				startdate= <startdate>	Date the maintenance begins.
				restrictions= <string>	Activities not covered by the maintenance contract.

### Example Command for Adding Maintenance Information

To provide a value for a maintenance parameter, type a command of the form: **omconfig system assetinfo info=maintenance <name=value pair 2>**. For example, type:

```
omconfig system assetinfo info=maintenance startdate=012504
```

The following message appears:

```
Asset information set successfully.
```

You can enter more than one **omconfig system assetinfo** command at the same time, as long as all of the parameters for name=value pair 2 belong to the same name=value pair 1. For an example, see "Example Commands for Adding Acquisition Information."

## Adding Outsource Information

Outsourcing is the practice of contracting with another business to maintain the system in good working order. Table 8-6 shows the valid parameters for adding outsource information.

**Table 8-6. omconfig system assetinfo info=outsourcing**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
omconfig	system	assetinfo	info=outsourcing		
				levels=<n>	Levels of service offered by the provider.
				problemcomponent=<component>	System component that requires maintenance.
				providerfee=<providerfee>	Amount of money charged for maintenance.
				servicefee=<servicefee>	Amount of money charged for service.
				signauth=<name>	Person who signed or authorized the service.

### Example Command for Adding Outsource Information

To provide a value for an outsource parameter, type a command of the form: **omconfig system assetinfo info=outsourcing <name=value pair 2>**. For example, type:

```
omconfig system assetinfo info=outsourcing providerfee=75
```

The following message appears:

```
Asset information set successfully.
```

You can enter more than one **omconfig system assetinfo** command at the same time, as long as all of the parameters for name=value pair 2 belong to the same name=value pair 1. For an example, see "Example Commands for Adding Acquisition Information."

## Adding Owner Information

The owner is the party that holds legal property title to the system. Table 8-7 shows the valid parameters for adding owner information.

**Table 8-7. omconfig system assetinfo info=owner**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
omconfig	system	assetinfo	info=owner	insuranceco= <company>	Name of the insurance company that insures the system.
				ownername= <business>	Business entity that owns the system.
				type=owned   leased   rented	Whether the user of the system owns, leases, or rents the system.

### Example Command for Adding Owner Information

To provide a value for an owner parameter, type a command of the form: **omconfig system assetinfo info=owner <name=value pair 2>**. For example, type:

```
omconfig system assetinfo info=owner type=rented
```

The following message appears:

```
Asset information set successfully.
```

You can enter more than one **omconfig system assetinfo** command at the same time, as long as all of the parameters for name=value pair 2 belong to the same name=value pair 1. For an example, see "Example Commands for Adding Acquisition Information."

## Adding Service Contract Information

A service contract is an agreement that specifies fees for preventive maintenance and repair of the system. Table 8-8 shows the valid parameters for adding contract information.

**Table 8-8. omconfig system assetinfo info=service**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
omconfig	system	assetinfo	info=service	renewed=true   false	Whether the service agreement has been renewed.
				type= <string>	Type of service covered by the contract.
				vendor= <business>	Business entity that offers service on the system.

### Example Command for Adding Service Information

To provide a value for a service parameter, type a command of the form: **omconfig system assetinfo info=service <name=value pair 2>**. For example, type:

```
omconfig system assetinfo info=service vendor=fixsystemco
```

The following message appears:

```
Asset information set successfully.
```

You can enter more than one **omconfig system assetinfo** command at the same time, as long as all of the parameters for name=value pair 2 belong to the same name=value pair 1. For an example, see "Example Commands for Adding Acquisition Information."

## Adding Support Information

Support refers to technical assistance that the system user can seek when the user desires guidance on the proper use of a system to perform tasks. Table 8-9 shows the valid parameters for adding support information.

**Table 8-9. omconfig system assetinfo info=support**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
omconfig					
	system				
		assetinfo			
			info=support		
				automaticfix= <programname>	Name of any application used to fix a problem automatically.
				helpdesk= <text>	The help desk name or contact information such as a phone number, e-mail address, or web site address.
				outsourced=true   false	Whether an external business entity provides technical support or the system owner's employees provide technical support.
				type=network   storage	Whether support is for network attached devices or for storage devices.

### Example Command for Adding Support Information

To provide a value for a support parameter, type a command of the form:  
**omconfig system assetinfo info=support <name=value pair 2>**. For example, type:

```
omconfig system assetinfo info=support outsourced=true
```

The following message appears:

```
Asset information set successfully.
```

You can enter more than one **omconfig system assetinfo** command at the same time, as long as all of the parameters for name=value pair 2 belong to the same name=value pair 1. For an example, see "Example Commands for Adding Acquisition Information."

## Adding System Information

System information includes the primary user of the system, the phone number for the primary user, and the system location. Table 8-10 shows the valid parameters for adding system information.

**Table 8-10.** `omconfig system assetinfo info=system`

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
omconfig	system	assetinfo	info=system		
				location= <text>	Location of the system.
				primaryphone= <n>	Phone number of the system's primary user.
				primaryuser= <user>	Primary user of the system.

### Example Command for Adding System Information

To provide a value for a system parameter, type a command of the form: `omconfig system assetinfo info=system <name=value pair 2>`. For example, type:

```
omconfig system assetinfo info=system location=firstfloor
```

The following message appears:

```
Asset information set successfully.
```

You can enter more than one `omconfig system assetinfo` command at the same time, as long as all of the parameters for name=value pair 2 belong to the same name=value pair 1. For an example, see "Example Commands for Adding Acquisition Information."

## Adding Warranty Information

Use the `omconfig system warranty` command to assign values for warranty information. A warranty is a contract between the manufacturer or dealer and the purchaser of a system. The warranty identifies the components that are covered for repair or replacement for a specified length of time or usage. For details on how to edit extended warranty values, see "Adding Extended Warranty Information." Table 8-11 shows the valid parameters for adding warranty information.

**Table 8-11. omconfig system assetinfo info=warranty**

Command level 1	Command level 2	Command level 3	Name=value pair 1	Name=value pair 2	Use
omconfig	system	assetinfo	info=warranty		
				cost = <cost>	Cost of the warranty service.
				duration = <duration>	Number of days or months that the warranty is in force.
				enddate = <enddate>	Date the warranty agreement ends.
				unit = days   months	Whether the number for duration refers to days or months.

### Example Command for Adding Warranty Information

To provide a value for a warranty parameter, type a command of the form: **omconfig system assetinfo info=warranty <name=value pair 2>**. For example, type:

```
omconfig system assetinfo info=warranty unit=days
```


The following message appears:

```
Asset information set successfully.
```

You can enter more than one **omconfig system assetinfo** command at the same time, as long as all of the parameters for name=value pair 2 belong to the same name=value pair 1. For an example, see "Example Commands for Adding Acquisition Information."

## omreport rac: Viewing Remote Access Controller Components

The remote access controller (RAC) is a system component that provides a full set of system management capabilities. Server Administrator integrates the RAC features into its interface, allowing users to view and manage the controller from within Server Administrator and IT Assistant.

 **NOTE:** Some features documented may not be available on your system's RAC. For example, dial-up modem use is supported only on DRAC III.

The `omreport rac` command enables Server Administrator to display reports on RAC components.

### Conventions for Parameter Tables

Parameter tables list input parameters for a command in the order in which they appear in the command line interface. In "omreport rac: Viewing Remote Access Controller Components," the parameters are listed in the order in which you must configure them.

The symbol `|`, often called *pipe*, is the logical *exclusive or* operator. For example, `enable | disable` means that you can enable or disable the component or feature, but you cannot simultaneously enable and disable the component or feature.

### omreport rac Command Summary


 **NOTE:** Although this section lists all possible `omreport rac` commands, the commands available on your system depend on your system configuration. If you try to get help or execute a command for a component that is not installed on your system, Server Administrator issues a message that the component or feature is not "found on this system."

Table 9-1 is a high-level summary of the `omreport rac` command. The column titled "Command level 3" lists the major arguments that can be used with `omreport rac`. "User privilege required" refers to the type of privilege you need to perform the command, where U=User, P=Power User, and A=Administrator. "Use" is a very general statement about the actions that can be performed using the `omreport rac` command. More details about syntax and use of the command appear later in this section.

**Table 9-1. omreport rac Command Level 1, Level 2, and Level 3**

Command level 1	Command level 2	Command level 3	User privilege required	Use
omreport				
	rac			
		authentication	U, P, A	Enables or disables user access to the RAC based on how the Administrator has set up each user's local operating system user account privileges.
		dialinusers	U, P, A	Displays the dial-in user properties.
		dialoutusers	U, P, A	Displays the dial-out user properties.
		network	U, P, A	Displays the onboard NIC properties.
		modem	U, P, A	Displays the onboard modem properties.
		remote	U, P, A	Displays the remote features properties.
		snmptraps	U, P, A	Displays the SNMP trap properties.
		users	U, P, A	Displays the user name properties.
		viewcertificate	U, P, A	Displays the server or CA certificate.

## Help With the omreport rac Command

Use the `omreport rac -?` command to get a list of the available commands for `omreport rac`.

### omreport rac authentication

Use the `omreport rac authentication` command to determine whether local operating system authentication of users is enabled or disabled for the RAC.

The RAC has two methods of authenticating user access: RAC authentication and local operating system authentication. RAC authentication is always *enabled*. Administrators can set up specific user accounts and passwords that allow access to the RAC.

Operating systems also require administrators to define different levels of users and user accounts; each user level has different privileges. Local operating system authentication on the RAC is an option for administrators who do not want to define one set of privileges for users in the operating system and a separate set of users and accounts for the RAC. If you enable local operating system authentication for the RAC, you enable any user with Administrator status on the operating system to log into the RAC.

## Example Command for omreport rac authentication

When you type:

```
omreport rac authentication
```

the results that display show whether authentication of users for access to the RAC using the operating system user access definitions is disabled or enabled. For example:

```
omreport rac authentication
localauthenable=true
```

## omreport rac dialinusers

Use the `omreport rac dialinusers` command to display the dial-in user property values. Table 9-2 displays the valid parameters for the command.

**Table 9-2. omreport rac dialinusers**

Name=value pair	Description
username= <text>	Displays the dial-in user entry whose user name is specified by <text>.
index= <n>	Displays the dial-in user entry whose index is equal to <i>n</i> . The index is usually 0–15, and specifies one of the 16 user "positions" on the RAC.

## omreport rac dialoutusers

The `omreport rac dialoutusers` command displays the demand dial-out user property values. Table 9-3 displays the valid parameters for the command.

**Table 9-3. omreport rac dialoutusers**

Name=value pair	Description
ipaddr= <text>	Displays the demand dial-out user entry whose IP address is specified by <text>. This address is the IP address that the RAC calls back after being contacted by a demand dial-out user.
index= <n>	Displays the demand dial-out user entry whose index is equal to <i>n</i> . The index is usually 0 to 15 and specifies one of the 16 user "positions" on the RAC.

## omreport rac network

Use the `omreport rac network` command to display the NIC property values.

## omreport rac modem

Use the `omreport rac modem` command to display the onboard modem property values.

## omreport rac remote

Use the `omreport rac remote` command to display the remote features property values.

## omreport rac snmptraps

Use the `omreport rac snmptraps` command to display the SNMP trap property values. Table 9-4 displays the valid parameters for the command.

**Table 9-4. omreport rac snmptraps**

Name=value pair	Description
<code>ipaddr= &lt;text&gt;</code>	Displays the trap entry whose IP address is specified by <code>&lt;text&gt;</code> .
<code>index= &lt;n&gt;</code>	Displays the trap entry whose index is equal to <code>n</code> . The index is usually 0 to 15 and specifies one of the 16 trap "positions" on the RAC.

## omreport rac users

Use the `omreport rac users` command to display the RAC user name properties. Table 9-5 displays the valid parameters for the command.

**Table 9-5. omreport rac users**

Name=value pair	Description
<code>username= &lt;text&gt;</code>	Displays the RAC user entry whose user name is specified by <code>&lt;text&gt;</code> .
<code>index= &lt;n&gt;</code>	Displays the RAC user entry whose index is equal to <code>n</code> . The index is usually 0 to 15 and specifies one of the 16 user "positions" on the RAC.

## omreport rac viewcertificate

Use the `omreport rac viewcertificate` command to view the server or certificate authority (CA) certificate on the RAC. The only parameter you must specify is whether the certificate you want to view is a CA certificate or a server certificate. Table 9-6 displays the valid parameters for the command.

**Table 9-6. omconfig rac viewcertificate**

Name=value pair	Description
type=server   ca	Indicates whether the certificate you are viewing is a server certificate or a CA certificate.

In the sample output that follows, the subject is the company or organization that is requesting the certificate signature. The issuer is the organization that is granting the certificate. For the definition of the fields, see `omconfig rac generatecert` in "omconfig rac: Managing the Remote Access Controller."

The following example is sample output from the command `omreport rac viewcertificate type=ca:`


```
Type CA Certificate
Serial 100
Keysize 1024
Valid From DSU+15:34:31
Valid To DSU+15:34:31
Subject CN=test, O=test, OU=test, L=Austin, ST=Texas, C=US,
E=name@company.com

Issuer CN=Thawte Test CA Root, O=Thawte Certification,
OU=TEST TEST TEST, L=San Jose, ST=CA, C=US,
E=name@thawte.com
```



# omconfig rac: Managing the Remote Access Controller

The **omconfig rac** command enables you to configure the operational components of the Remote Access Service (RAS). The CLI command **omconfig rac** uses the remote access controller (RAC) software interface to configure these operational components.

 **NOTE:** Some features documented may not be available on your system's RAC. For example, dial-up modem use is supported only on DRAC III.

For information on how to use Server Administrator to configure other system and main system chassis components, see "omconfig: Managing Components Using the Instrumentation Service." For information on how to use the **omconfig** system command to view and to manage cost of ownership information (**assetinfo**), see "omconfig system assetinfo: Editing Cost of Ownership Values."


Often you must use **omreport rac** commands to get information you need to execute an **omconfig rac** command. For information about the **omreport rac** command, see "omconfig rac: Managing the Remote Access Controller."

## Conventions for Parameter Tables

Parameter tables list input parameters for a command in the order in which you must configure them instead of the order in which they appear in the command line interface.

The symbol |, often called *pipe*, is the logical *exclusive or* operator. For example, enable | disable means that you can enable or disable the component or feature, but you cannot simultaneously enable and disable the component or feature.

## omconfig rac Command Summary

 **NOTE:** You must reset the remote access controller after execution of each **omconfig rac** command. After resetting the remote access controller, you must also wait approximately one minute before executing a subsequent **omconfig rac** command.


 **NOTE:** Although this section lists all possible **omconfig rac** commands, the commands available on your system depend on your system configuration. If you try to get help or execute a command for a component that is not installed on your system, Server Administrator issues a message that the component or feature is not found on this system.

Table 10-1 is a high-level summary of the `omconfig rac` command. The column titled "Command level 3" lists the major arguments that can be used with `omconfig rac`. "User privilege required" refers to the type of privilege you need to execute the command, where U=User, P=Power User, and A=Administrator. "Use" is a very general statement about the actions that can be performed using `omconfig rac`. More details about syntax and use of the command appear later in this section.

**Table 10-1. Command Level 1, Command Level 2, and Command Level 3 Options for omconfig rac**

Command level 1	Command level 2	Command level 3	User privilege required	Use
omconfig	rac			
		authentication	A	Sets authentication properties.
		dialinusers	A	Sets dial-in user properties.
		dialoutusers	A	Sets dial-out user properties.
		generatecert	A	Generates an certificate signing request (CSR).
		modem	A	Configures modem properties.
		network	A	Configures network properties.
		snmptraps	A	Sets SNMP trap properties.
		remote	A	Configures remote features properties.
		rmdialinuser	A	Removes the dial-in user.
		rmdialoutuser	A	Removes the dial-out user.
		rmsnmptrap	A	Removes the SNMP trap.
		rmuser	A	Removes the user.
		reset	A	Resets the RAC.
		uploadcert	A	Uploads a server or CA certificate.
		users	A	Sets user properties.

## Help With the omconfig rac Command

Use the `omconfig rac -?` command to get a list of the available commands for `omconfig rac`.

Use `omconfig rac <command level 3> -?` to see a list of name=value pairs that you may need to use with `dialinusers`, `dialoutusers`, `modem`, `network`, `remote`, and so on.

Type:

```
omconfig rac dialinusers -?
```

The following is an excerpt of the Server Administrator response:

```
dialinusers Set dial-in user properties.  
  
Valid parameters are:  
  
username=<text:Reqd>  
  
index=<number:0-15>  
  
password=<text>  
  
callbacknumber=<number>  
  
callbacktype=<text>
```

## omconfig rac authentication

Use the **omconfig rac authentication** command to specify whether you want to enable local operating system authentication of a system that is seeking to use the remote access interface. To enable local operating system authentication, type:

```
omconfig rac authentication localauthenable=true
```

To disable local operating system authentication, type:

```
omconfig rac authentication localauthenable=false
```

### Local Operating System Authentication

Use the **omconfig rac authentication** command to determine whether local operating system authentication of users is enabled or disabled for the remote access controller.

The RAC has two methods of authenticating user access: RAC authentication and local operating system authentication. RAC authentication is always *enabled*. Administrators can set up specific user accounts and passwords that allow access to the RAC.

Operating systems also require administrators to define different levels of users and user accounts; each user level has different privileges. Local operating system authentication on the RAC is an option for administrators who do not want to define one set of privileges for users in the operating system and a separate set of users and accounts for the RAC. If you enable local operating system authentication for the RAC, you enable any user with Administrator status on the operating system to log into the RAC.

### Example Command for omconfig rac authentication

When you type:

```
omconfig rac authentication localauthenable=true
```


you have configured the RAC to allow access to any user who has Administrator privileges on the operating system.

When you type:

```
omconfig rac authentication localauthenable=false
```

you have configured the RAC to allow access only to users with user names and passwords that are defined by the RAC administrator.

## omconfig rac dialinusers

 **NOTE:** Some features documented may not be available on your system's RAC. For example, dial-up modem use is supported only on DRAC III.

Use the `omconfig rac dialinusers` command to specify requirements for each user who is to have dial-in privileges. The administrator can specify values for a user name, password, and other properties for each user. Table 10-2 shows the valid parameters for the command.

**Table 10-2. omconfig rac dialinusers**

Name=value pair	Description
username= <text>	Sets the user name for the point-to-point protocol (PPP) user.
index= <number:0-15>	Sets the dial-in user index to populate with user name, password, and so on. The index specifies one of the 16 user "positions" on the RAC.  If an index is not specified for an <code>omconfig rac</code> command, the entry is added to the next available position on the RAC.  If an index is specified for an <code>omconfig rac</code> command and another entry exists for that position, the key field parameter is used to decide if the command should be executed. If the key field supplied by the user matches the key field of the entry on that specific position of the RAC, the RAC entry is edited. Otherwise, the command fails.
password= <text>	Sets the password for this PPP user.
callbacknumber= <n>	Sets the callback number.
callbacktype=none   preset   usr-specified	Sets the type of call back.

### Example Commands

The following example sets one name=value pair. Type:

```
omconfig rac dialinusers username=jdoe
```

The next example supplies values for all command parameters that you can use with the **omconfig rac dialinusers** command. Type:

```
omconfig rac dialinusers username=jdoe index=0 password=
steven70 callbacknumber=4441022 callbacktype=preset
```

The following message appears:

```
Command Successful. Please reset RAC card!
```

## omconfig rac dialoutusers

Use the **omconfig rac dialoutusers** command to specify requirements for each user who is to have dial-out privileges. The administrator can specify values for a surname, password, IP address, and other properties for each dial-out user. Table 10-3 shows the valid parameters for the command.

**Table 10-3. omconfig rac dialoutusers**

Name=value pair	Description
ipaddr= <text>	Sets the IP address, which must be specified in dotted-decimal notation.
index= <number:0-15>	Sets the dial-out user index to populate with user name, password, and so on. The index specifies one of the 16 user "positions" on the RAC.  If an index is not specified for an <b>omconfig rac</b> command, the entry is added to the next available position on the RAC.  If an index is specified for an <b>omconfig rac</b> command and another entry exists for that position, the key field parameter is used to decide if the command should be executed. If the key field supplied by the user matches the key field of the entry on that specific position of the RAC, the RAC entry is edited. Otherwise, the command fails.
username= <text>	Sets the user name for the point-to-point protocol (PPP) dial-out user.
password= <text>	Sets the password for this PPP user.
phonenum= <n>	Sets the number where you can reach the PPP user.
authtype=any   encrypted	Sets the type of authentication required for this user.

## Example Commands

The following example sets one name=value pair. Type:

```
omconfig rac dialoutusers ipaddr=14.16.53.18
```

The following message appears:

```
Command Successful. Please reset RAC card!
```

The next example supplies values for all command parameters that you can use with the **omconfig rac dialoutusers** command. Type:

```
omconfig rac dialoutusers ipaddr=14.16.53.18 index=1
username=sustein password=74chaunu phonenumber=4021027
authtype=any
```


The following message appears:

```
Command Successful. Please reset RAC card!
```

## omconfig rac generatecert

Use the **omconfig rac generatecert** command to generate the certificate signing request (CSR) that you send to a certificate authority (CA). A certificate authority is a business entity that is recognized in the IT industry for meeting high standards of reliable screening, identification, and other important security criteria. Examples of CAs include Thawte and VeriSign. After the CA receives your CSR, they review and verify the information the CSR contains. If the applicant meets the CA's security standards, the CA issues a certificate to the applicant that uniquely identifies that applicant for transactions over networks and on the Internet.

For the purposes of the RAC, you can use the **omconfig rac generatecert** command to generate a CSR. Then you send the CSR in your application to the CA; the CA approves the CSR and sends you a certificate. Then use the **omconfig rac uploadcert** command to upload the certificate to the RAC. Uploading your new certificate replaces the default RAC certificate that you received with your RAC.

 **NOTE:** Whenever you have a fully qualified pathname or filename that contains spaces, you must place double quotation marks around the string. For example, if your update package is located at **c:\security files\certificates\sslcert.cer**, you must place the fully qualified path in double quotations because there is a space between "security" and "files." The following is an example command using the fully qualified path and filename enclosed in quotation marks.

```
omconfig rac generatecert file="c:\security
files\certificates\sslcert.cer"
```


 **NOTE:** Except for the two-letter country code, all other parameter values are strings. Parameters are required only if indicated (required).

Table 10-4 shows required and optional parameters that are used to generate your CSR.

**Table 10-4. omconfig rac generatecert**

Name=value pair	Description
commonname= <text>	Enter a unique text string that distinguishes your system from others for which you may be requesting certificates (required).
countrycode= <text>	Two-letter code representing the country where your system is located. See ISO Standard 3166 (required).
emailaddress= <text>	The e-mail address of your system.
file= <text>	The absolute pathname or filename (with extension) of the CSR to be generated (required). If you provide only a filename, the CSR file is placed in your current working directory.
locality= <text>	City name or other location name where your system is located.
orgname= <text>	Name of your organization (required).
orgunit= <text>	Name of the sub-unit or department in your organization that is applying for the certificate (required).
state= <text>	Name of your state or province.

Once you have generated the CSR, you can upload the certificate to the RAC using the **omconfig rac uploadcert** command.

## omconfig rac modem

Use the **omconfig rac modem** command to configure properties for your RAC's modem, if present. Table 10-5 shows the valid parameters for the command.

**Table 10-5. omconfig rac modem**

Name=value pair	Description
baudrate= <n>	The modem speed in bits per second. The default baud rate is 38400.
initstring= <text>	The required initialization string for your RAC.
dialtype= tone   pulse	Specifies whether the dial type for your modem is tone or pulse.
countrycode= <two-letter country code>	Specifies the code for the country where your system is located.

Use the `omconfig rac modem` command with the `countrycode` parameter to specify the code for the country where your system is located, for example:

```
omconfig rac modem countrycode=US
```

Table 10-6 shows the country codes that you must use to set this parameter.

**Table 10-6. Country Codes for countrycode Parameter of omconfig rac modem**

Country	Country Code	Country	Country Code
Australia	AU	Japan	JA
Austria	AS	Korea	KO
Belgium	BE	Luxembourg	LU
Bulgaria	BU	Mexico	ME
Canada	CA	Netherlands	NE
China	CH	New Zealand	NW
Czech and Slovak Republic	CZ	Norway	NO
Denmark	DE	Philippines	PH
Finland	FI	Poland	PO
France	FR	Portugal	PR
Germany	GE	Russia	RU
Greece	GR	Singapore	SI
Hong Kong	HO	Spain	SP
Hungary	HU	Sweden	SW
India	IN	Switzerland	SZ
Ireland	IR	Taiwan	TA
Israel	IS	United Kingdom	UK
Italy	IT	United States	US

## omconfig rac network

Use the `omconfig rac network` command to specify network parameter values. Table 10-7 shows the valid parameters for the command.

**Table 10-7. omconfig rac network**

<b>Name=value pair</b>	<b>Description</b>
ipaddr= <text>	Sets the IP address, which must be specified in dotted-decimal notation.
subnetmask= <text>	Sets the subtext mask, which must be specified in dotted-decimal notation.
gateway= <text>	Sets the gateway, which must be specified in dotted-decimal notation.
nicenable=true   false	Enables the NIC.
dhcpenable=true   false	Enables the DHCP.
smtpaddr= <text>	Sets the SMTP address, which must be specified in dotted-decimal notation.
smtpenable=true   false	Enables the SMTP.
dialinenable=true   false	Enables the dial-in communications.
dialindhcpenable=true   false	Enables the dial-in dynamic host configuration protocol (DHCP).
dialinipaddr= <text>	Sets the base IP address, which must be specified in dotted-decimal notation.
dialinauthtype=any   encrypted	Sets the type of authentication required.

### Example Command

The following example sets one name=value pair. Type:

```
omconfig rac network ipaddr=123.169.555.216
```

The following message appears:

```
Command Successful. Please reset RAC card!
```

## omconfig rac snmptraps

Use the `omconfig rac snmptraps` command to specify the SNMP trap property values. Table 10-8 shows the valid parameters for the command.

**Table 10-8. omconfig rac snmptraps**

<b>Name=value pair</b>	<b>Description</b>
ipaddr= <text>	Sets the IP address, which must be specified in dotted-decimal notation.

**Table 10-8. omconfig rac snmptraps (continued)**

Name=value pair	Description
index= <number:0-15>	<p>Sets the SNMP trap index. The index specifies one of the 16 trap "positions" on the RAC.</p> <p>If an index is not specified for an <b>omconfig rac</b> command, the entry is added to the next available position on the RAC.</p> <p>If an index is specified for an <b>omconfig rac</b> command and another entry exists for that position, the key field parameter is used to decide if the command should be executed. If the key field supplied by the user matches the key field of the entry on that specific position of the RAC, the RAC entry is edited. Otherwise, the command fails.</p>
trapsenable=true   false	Enables SNMP traps.
community= <text>	Sets the community.

### Example Commands

The following example sets one name=value pair. Type:

```
omconfig rac snmptraps ipaddr=123.166.555.216 index=1
community=dell
```

The following message appears:

```
Command Successful. Please reset RAC card!
```

The next example supplies values for all command parameters that you can use with the **omconfig rac snmptraps** command. Type:

```
omconfig rac snmptraps ipaddr=123.166.555.216 index=0
trapsenable=true community=dell
```

The following message appears:

```
Command Successful. Please reset RAC card!
```

## omconfig rac remote

Use the **omconfig rac remote** command to specify the remote features property values. Table 10-9 shows the valid parameters for the command.

**Table 10-9. omconfig rac remote**

Name=value pair	Description
floppyftpenable=true   false	Enables remote boot.
floppyftpipaddr= <text>	Sets the floppy TFTP address.
floppyftppath= <text>	Sets the floppy TFTP path.
fwupdateftpipaddr= <text>	Sets the firmware TFTP address.
fwupdateftppath= <text>	Sets the directory path on the TFTP server where the firmware update images reside.

**Example Command**

The following example sets one name=value pair. Type:

```
omconfig rac remote floppyftpenable=true
```

The following message appears:

```
Command Successful. Please reset RAC card!
```

**omconfig rac rmdialinuser**

Use the `omconfig rac rmdialinuser` command to remove a dial-in user. Table 10-10 shows the valid parameters for the command.

**Table 10-10. omconfig rac rmdialinuser**

Name=value pair	Description
username= <text>	Specifies the user name of entry which is to be deleted. If no user name is specified, an index must be specified.
index= <n>	Specifies the index of the entry which is to be deleted. If no index is specified, a user name must be specified.

**Example Command**

The following example sets one name=value pair. Type:

```
omconfig rac rmdialinuser username=jdoe
```

The following message appears:

```
Command Successful. Please reset RAC card!
```

## omconfig rac rmdialoutuser

Use the `omconfig rac rmdialoutuser` command to remove a dial-out user. Table 10-11 shows the valid parameters for the command.

**Table 10-11. omconfig rac rmdialoutuser**

Name=value pair	Description
username= <text>	Specifies the user name of entry which is to be deleted. If no user name is specified, an index must be specified.
index= <n>	Specifies the index of the entry which is to be deleted. If no index is specified, a user name must be specified.

### Example Command

The following example sets one name=value pair. Type:

```
omconfig rac rmdialoutuser username=jdoe
```

The following message appears:

```
Command Successful. Please reset RAC card!
```

## omconfig rac rmsnmptrap

Use the `omconfig rac rmsnmptrap` command to remove an SNMP trap. Table 10-12 shows the valid parameters for the command.

**Table 10-12. omconfig rac rmsnmptrap**

Name=value pair	Description
ipaddr= <text>	Specifies the IP address of entry which is to be deleted. This value must be specified in dotted-decimal notation. If no IP address is specified, an index must be specified.
index= <n>	Specifies the index of the entry which is to be deleted. If no index is specified, an IP address must be specified.

### Example Command

The following example sets one name=value pair. Type:

```
omconfig rac rmsnmptrap ipaddr=123.199.152.216
```

The following message appears:

```
Command Successful. Please reset RAC card!
```

## omconfig rac rmuser

Use the `omconfig rac rmuser` command to remove a user. Table 10-13 shows the valid parameters for the command.

**Table 10-13. omconfig rac rmuser**

Name=value pair	Description
username=<text>	Specifies the user name of entry which is to be deleted. If no user name is specified, an index must be specified.
index=<n>	Specifies the index of the entry which is to be deleted. If no index is specified, a user name must be specified.

### Example Command

The following example sets one name=value pair. Type:

```
omconfig rac rmuser username=jdoe
```

The following message appears:

```
Command Successful. Please reset RAC card!
```

## omconfig rac reset

Use the `omconfig rac reset` command to reset the RAC.

## omconfig rac uploadcert

Use the `omconfig rac uploadcert` command to upload the server or CA certificate to the RAC. You must enter the fully qualified pathname of the certificate and select the type of certificate to upload. The two types of certificate that you can upload are a server certificate, or a certificate that you can obtain from a certificate authority (CA). Examples of certificate authorities are Thawte Server CA or VeriSign, Inc. Table 10-14 shows the valid parameters for the command.

**Table 10-14. omconfig rac uploadcert**

Name=value pair	Description
file=<text>	The absolute pathname (including filename and extension) of the certificate to be uploaded to the RAC (required).

**Table 10-14. omconfig rac uploadcert**

Name=value pair	Description
type=server   ca	Indicates whether the certificate you are uploading is a server certificate or a CA certificate.

## omconfig rac users

Use the `omconfig rac users` command to specify user property values. Table 10-15 shows the valid parameters for the command.

**Table 10-15. omconfig rac users**

Name=value pair	Description
username= <text>	Sets the user name.
index= <number:0–15>	Specifies the index of the entry. The index specifies one of the 16 user "positions" on the RAC.  If an index is not specified for an <code>omconfig rac</code> command, the entry is added to the next available position on the RAC.  If an index is specified for an <code>omconfig rac</code> command and another entry exists for that position, the key field parameter is used to decide if the command should be executed. If the key field supplied by the user matches the key field of the entry on that specific position of the RAC, the RAC entry is edited. Otherwise, the command fails.
userpassword= <text>	Sets the password.
numericpagingenable=true   false	Enables numeric paging.
numericpagenumber= <n>	Sets the numeric pager number.
numericpagemsg= <text>	Sets the numeric pager message.
emailpagingenable=true   false	Enables e-mail paging.
emailaddress= <text>	Sets the e-mail address.
emailmsg= <text>	Set the e-mail message.
alphapagingenable=true   false	Enables the alpha paging.
alphanumber= <n>	Sets the alpha number.
alphaprotocol=8N1   7E0	Sets the alpha protocol.

**Table 10-15. omconfig rac users (continued)**

<b>Name=value pair</b>	<b>Description</b>
alphabaudrate=<n>	Sets the alpha baud rate.
alphapagerid=<n>	Sets the alpha pager ID.
apphacustommsg=<text>	Sets the alpha custom message.
alphapagerpassword=<text>	Sets the alpha pager password.

### **Example Command**

The following example sets one name=value pair. Type:

```
omconfig rac users username=jdoe
```

The following message appears:

```
Command Successful. Please reset RAC card!
```



## Working With CLI Command Results

Server Administrator Command Line Interface (CLI) users can use command output in various ways. This section explains how to save command output to a file and how to select a format for your command results that fits different objectives.

### Output Options for Command Results

CLI command output displays to standard output on your system in a command window, in an X-terminal, or on a screen, depending on your operating system type.

You can redirect command results to a file instead of displaying them to standard output. Saving command output to a file allows you to use the command output for later analysis or comparison.

Whether you display command results to standard output or have the command results written to a file, you can format the results. The format you select determines the way the command output is displayed and the way the command output is written to a file.

### Controlling Command Output Display

Each operating system provides a means of controlling the way that command results display to standard output. The following is a useful command for ensuring that command results do not scroll by before you can view them. The same command syntax works for both the Microsoft® Windows® command prompt and the Red Hat® Linux terminal. To display command output with control over scrolling, type the CLI command and append the pipe symbol followed by `more`. For example, type:

```
omreport system summary | more
```

The multiscreen system summary displays the first screen. When you want to see the next screen of command output, press the spacebar.

In the Novell® NetWare®, you can use the `inetcfg` command to view console messages that have scrolled past.

### Writing Command Output to a File

When redirecting command results to a file, you can specify a filename (and a directory path if necessary) to which you want the command results to be written. When specifying the path to which you want your file to be written, use the appropriate syntax for your operating system.

You can save command results in two ways. You can overwrite any file that has the same name as the output file you specify, or you can keep adding results of commands to a file of the same name.

### Save Command Results to a File That Can Be Overwritten

Use the `-outc` option when you want to overwrite data that is stored in previously written files. For example, at 11:00 A.M. you capture fan probe RPM readings for fan probe 0 on your system and write the results to a file called `fans.txt`. You type:

```
omreport chassis fans index=0 -outc fans.txt
```

Partial results written to the file are:

```
Index                : 0
Status               : OK
Probe Name           : System Fan
Reading              : 2380
Minimum Warning Threshold : 600
Maximum Warning Threshold : 5700
Minimum Failure Threshold : 500
Maximum Failure Threshold : 6000
```

Four hours later, you repeat the command. You have no interest in the 11:00 A.M. snapshot as written to `fans.txt`. You type the same command:

```
omreport chassis fans index=0 -outc fans.txt
```

The 3:00 P.M. data overwrites the 11:00 A.M. data in the `fans.txt` file.

`Fans.txt` now reads as follows:

```
Index                : 0
Status               : OK
Probe Name           : System Fan
Reading              : 3001
Minimum Warning Threshold : 700
Maximum Warning Threshold : 5500
Minimum Failure Threshold : 500
Maximum Failure Threshold : 6000
```

You cannot refer to the previous command results to compare the earlier fan probe 0 output with the present output because in using the `-outc` option, you overwrote the `fans.txt` file.

### Append Command Results to an Existing File

Use the `-outa` option when you want to append new command results to data stored in a previously written file. For example, at 11:00 A.M. you capture fan probe RPM readings for fan probe 0 on your system and write the results to a file called `fans.txt`. If you want to compare these results with output for the same probe obtained four hours later, you can use the `-outa` command to append the new output to `fans.txt`. Type:

```
omreport chassis fans index=0 -outa fans.txt
```

**Fans.txt** now reads as follows:


```
Index                : 0
Status               : OK
Probe Name           : System Fan
Reading              : 2380
Minimum Warning Threshold : 600
Maximum Warning Threshold : 5700
Minimum Failure Threshold : 500
Maximum Failure Threshold : 6000
```

```
Index                : 0
Status               : OK
Probe Name           : System Fan
Reading              : 3001
Minimum Warning Threshold : 700
Maximum Warning Threshold : 5500
Minimum Failure Threshold : 500
Maximum Failure Threshold : 6000
```

You can use a text editor to insert the time that each block of data was captured. In comparing the two snapshots for fan probe 0, you can see that the second report shows several changes. The reading of fan RPM has increased by 621 RPM but is still within normal range. Someone has raised the minimum warning threshold by 200 RPM and has decreased the maximum warning threshold by 2000 RPM.

## Selecting a Format for Your CLI Command Output

You can specify a format for your CLI command results. The format determines how the command output is displayed. If the command results are directed to a file, the format is captured by the file to which you write your command results.

 **NOTE:** The **omconfig** command ignores most output format options and returns plain text messages. However, if you use the **xml** option, the **omconfig** command returns XML code.

The available formats include:

- List (lst)
- Semicolon-separated values (ssv)
- Table (tbl)
- Raw xml (xml)
- Custom delimited format (cdv)

Syntax for the formatting option is:

```
<command> -fmt <format option>
```

For example, type:

```
omreport system summary -fmt tbl
```

where **-fmt tbl** specifies table format.

You can combine the formatting option with the option to direct output to a file. For example, type:

```
omreport system summary -fmt tbl -outa summary.txt
```

where **-fmt tbl** specifies table format and **-outa** specifies that you append the command results to a file called **summary.txt**.

### List (lst)

The default format is **lst** or list format. Use this format when you want to optimize output for simple readability. You need to specify a format for your command output only if you want a format other than **lst** format.

To see the following example command output in **lst** format, type:

```
omreport system summary
```

No special formatting option is required because list format is the default display format. The network data part of the example system summary appears as follows:

```
-----
Network Data
-----

Network Interface Card 0 Data
IP Address       : 143.166.152.108
Subnet Mask      : 255.255.255.0
Default Gateway  : 143.166.152.1
MAC Address      : 00-02-b3-23-d2-ca
```

### Table (tbl)

Use the **tbl** or table formatting option to have your data formatted in table rows and columns. To see the following example command output in table format, type:

```
omreport system summary -fmt tbl
```

The example output displays as follows:

```
-----
Network Interface Card 0 Data
-----
```

ATTRIBUTE	VALUE
IP Address	143.166.152.108
Subnet Mask	255.255.255.0
Default Gateway	143.166.152.1
MAC Address	00-02-b3-23-d2-ca

### Semicolon-separated Values (ssv)

Use the `ssv` formatting option to deliver output formatted in semicolon-separated Value format. This format also allows you to import your command output results into a spreadsheet program such as Microsoft Excel, or into a database program. To see the following example command output in semicolon-separated value format, type:

```
omreport system summary -fmt ssv
```

The example output displays as follows:

```
-----
Network Data
-----

Network Interface Card 0 Data
IP Address;143.166.152.108
Subnet Mask;255.255.255.0
Default Gateway;143.166.152.1
MAC Address;00-02-b3-23-d2-ca
```

### Raw XML (xml)

Use the `xml` formatting option to produce output suitable for use by systems management applications or for input into other applications that use xml. To see the following example command output in raw xml format, type:

```
omreport system summary -fmt xml
```

The example output displays as follows:

```
<NICStatus>1</NICStatus><IPAddress>143.166.152.108</IPAddress>
<SubnetMask>255.255.255.0</SubnetMask><DefaultGateway>143.166.
152.1</DefaultGateway><MACAddr>00-02-b3-23-d2-ca</MACAddr>
```

### Custom Delimited Format (cdv)

Use the `cdv` formatting option to report exported data in custom delimited format. You can specify this option with any `omreport` command. For example, to generate a system summary in custom delimited format, type:

```
omreport system summary -fmt cdv
```

You can also set preferences for the custom delimited format with the `omconfig` command. The valid values for delimiters are: exclamation, semicolon, at, hash, dollar, percent, caret, asterisk, tilde, question, colon, comma, and pipe.

The following example shows how to set the delimiter for separating data fields to asterisk:

```
omconfig preferences cdvformat delimiter=asterisk
```

# Glossary

The following list defines or identifies technical terms, abbreviations, and acronyms used in Dell user documents.

## **A**

Abbreviation for ampere(s).

## **AC**

Abbreviation for alternating current.

### **AC power switch**

A switch with two AC power inputs that provides AC power redundancy by failing over to a standby AC input in the event of a failure to the primary AC input.

### **access**

Refers to the actions a user can take on a variable value. Examples include read-only and read-write.

### **adapter card**

An expansion card that plugs into an expansion-card connector on the computer's system board. An adapter card adds some specialized function to the computer by providing an interface between the expansion bus and a peripheral device. Examples of adapter cards include network cards, sound cards, and SCSI adapters.

## **ADB**

Abbreviation for assign database.

## **AGP**

Abbreviation for accelerated graphics port. A high performance graphics interface becoming available for Intel® Pentium® Pro systems.

## **ASCII**

Acronym for American Standard Code for Information Interchange. A text file containing only characters from the ASCII character set (usually created with a text editor, such as Notepad in Microsoft® Windows®) is called an ASCII file.

## **ASIC**

Acronym for application-specific integrated circuit.

## **ASPI**

Advanced SCSI programming interface.

### **asset tag code**

An individual code assigned to a computer, usually by a system administrator, for security or tracking purposes.

### **attribute**

As it relates to an attribute is a piece of information related to a component. Attributes can be combined to form groups. If an attribute is defined as read-write, it may be defined by a management application.

### **authentication**

The Server Administrator remote access controller has two methods of authenticating user access: RAC authentication and local operating system authentication. RAC authentication is always enabled. Administrators can set up specific user accounts and passwords that allow access to the RAC.

Operating systems also require administrators to define different levels of users and user accounts; each user level has different privileges. Local operating system authentication on the RAC is an option for administrators who do not want define one set of privileges for users in the operating system and a separate set of users and accounts for the RAC. If you enable local operating system authentication for the RAC, you enable any user with Administrator status on the operating system to log into the RAC.

### **autoexec.bat file**

The **autoexec.bat** file is executed when you boot your computer (after executing any commands in the

**config.sys** file). This start-up file contains commands that define the characteristics of each device connected to your computer, and it finds and executes programs stored in locations other than the active directory.

### **backup**

A copy of a program or data file. As a precaution, you should back up your computer's hard drive on a regular basis. Before making a change to the configuration of your computer, you should back up important start-up files from your operating system.

### **baud rate**

A measurement of data transmission speed. For example, modems are designed to transmit data at one or more specified baud rate(s) through the COM (serial) port of a computer.

### **beep code**

A diagnostic message in the form of a pattern of beeps from your computer's speaker. For example, one beep, followed by a second beep, and then a burst of three beeps is beep code 1-1-3.

### **BGA**

Abbreviation for Ball Grid Array, an IC package that uses an array of solder balls, instead of pins, to connect to a PC board.

### **binary**

A base-2 numbering system that uses 0 and 1 to represent information. The computer performs operations based on the ordering and calculation of these numbers.

### **BIOS**

Acronym for basic input/output system. Your computer's BIOS contains programs stored on a flash memory chip. The BIOS controls the following:

- Communications between the microprocessor and peripheral devices, such as the keyboard and the video adapter
- Miscellaneous functions, such as system messages

### **bit**

The smallest unit of information interpreted by your computer.

### **boot routine**

When you start your computer, it clears all memory, initializes devices, and loads the operating system. Unless the operating system fails to respond, you can reboot (also called *warm boot*) your computer by pressing <Ctrl><Alt><Del>; otherwise, you must perform a cold boot by pressing the reset button or by turning the computer off and then back on.

### **bootable diskette**

You can start your computer from a diskette. To make a bootable diskette, insert a diskette in the diskette drive, type `sys a:` at the command line prompt, and press <Enter>. Use this bootable diskette if your computer will not boot from the hard drive.

### **bpi**

Abbreviation for bits per inch.

### **bps**

Abbreviation for bits per second.

### **BTU**

Abbreviation for British thermal unit.

### **bus**

An information pathway between the components of a computer. Your computer contains an expansion bus that allows the microprocessor to communicate with controllers for all the various peripheral devices connected to the computer. Your computer also contains an address bus and a data bus for communications between the microprocessor and RAM.

### **byte**

Eight contiguous bits of information, the basic data unit used by your computer.

## **C**

Abbreviation for Celsius.

### **CA**

Abbreviation for certificate authority.

### **cache**

A fast storage area that keeps a copy of data or instructions for quicker data retrieval. For example, your computer's BIOS may cache ROM code in faster RAM. Or, a disk-cache utility may reserve RAM in which to store frequently accessed information from your computer's disk drives; when a program makes a request to a disk drive for data that is in the cache, the disk-cache utility can retrieve the data from RAM faster than from the disk drive.

### **capability**

Refers to the actions that an object can perform, or actions that can be taken on a managed object. For example, if a card is hot-pluggable, it is capable of being replaced while the system power is ON.

### **CDRAM**

Abbreviation for cached DRAM, which is a high-speed DRAM memory chip developed by Mitsubishi that includes a small SRAM cache.

### **CD-ROM**

Abbreviation for compact disc read-only memory. CD drives use optical technology to read data from CDs. CDs are read-only storage devices; you cannot write new data to a CD with standard CD drives.

### **certificate authority**

A certificate authority is an industry-recognized entity that verifies the identity of an organizations requesting credentials to identify them to other systems over networks or the Internet. Before issuing a certificate to an applicant, the certificate authority requires proof of identity and other security information.

### **chip**

A set of microminiaturized, electronic circuits that are designed for use as processors and memory in computers. Small chips can hold from a handful to tens of thousands of transistors. They look like tiny chips of aluminum, no more than 1/16" square by 1/30" thick, which is where the term "chip" came from. Large chips, which can be more than a half inch square, hold millions of transistors. It is actually only the top one thousandth of an inch of a chip's surface that holds the circuits. The rest of it is just a base.

### **CIM**

Acronym for Common Information Model, which is a model for describing management information from the DMTF. CIM is implementation independent, allowing different management applications to collect the required data from a variety of sources. CIM includes schemas for systems, networks, applications and devices, and new schemas will be added. It provides mapping techniques for interchange of CIM data with MIB data from SNMP agents and MIF data from DMI-compliant systems.

### **CIMOM**

Acronym for common information model object manager.

### **CI/O**

Acronym for comprehensive input/output.

### **cm**

Abbreviation for centimeter(s).

### **CMOS**

Acronym for complementary metal-oxide semiconductor. In computers, CMOS memory chips are often used for NVRAM storage.

### **COM //**

The device names for the first through fourth serial ports on your computer are COM1, COM2, COM3, and COM4. The default interrupt for COM1 and COM3 is IRQ4, and the default interrupt for COM2 and COM4 is IRQ3. Therefore, you must be careful

when configuring software that runs a serial device so that you don't create an interrupt conflict.

### **component**

As they relate to DMI, manageable components are operating systems, computer systems, expansion cards, or peripherals that are compatible with DMI. Each component is made up of groups and attributes that are defined as relevant to that component.

### **config.sys file**

The `config.sys` file is executed when you boot your computer (before running any commands in the `autoexec.bat` file). This start-up file contains commands that specify which devices to install and which drivers to use. This file also contains commands that determine how the operating system uses memory and controls files.

### **controller**

A chip that controls the transfer of data between the microprocessor and memory or between the microprocessor and a peripheral device such as a disk drive or the keyboard.

### **control panel**

The part of the computer that contains indicators and controls, such as the power switch, hard drive access indicator, and power indicator.

### **conventional memory**

The first 640 KB of RAM. Conventional memory is found in all computers. Unless they are specially designed, MS-DOS® programs are limited to running in conventional memory.

### **COO**

Acronym for cost of ownership.

### **cooling unit**

Sets of fans or other cooling devices in a system chassis.

### **coprocessor**

A chip that relieves the computer's microprocessor of specific processing tasks. A math coprocessor, for example, handles numeric processing. A graphics coprocessor handles video rendering. The Intel Pentium microprocessor for example, includes a built-in math coprocessor.

### **cpi**

Abbreviation for characters per inch.

### **CPU**

Abbreviation for central processing unit. See also *microprocessor*.

### **CRC**

Abbreviation for cyclic redundancy code, which is a number derived from, and stored or transmitted with, a block of data in order to detect corruption. By recalculating the CRC and comparing it to the value originally transmitted, the receiver can detect some types of transmission errors.

### **CSR**

Abbreviation for certificate signing request. A complex text file generated by a Web server to identify and authenticate systems that seek connections to other systems. The digital signature that is present in every CSR contributes to secure identification of systems.

When a remote access controller is present on a system running Server Administrator, the CSR that comes with the remote access controller belongs to Dell. If your company wants to generate its own CSR, you can request a unique CSR from a certificate authority and overwrite the Dell CSR.

### **cursor**

A marker, such as a block, underscore, or pointer that represents the position at which the next keyboard or mouse action will occur.

### **DAT**

Acronym for digital audio tape.

**dB**

Abbreviation for decibel(s).

**dBa**

Abbreviation for adjusted decibel(s).

**DC**

Abbreviation for direct current.

**device driver**

A program that allows the operating system or some other program to interface correctly with a peripheral device, such as a printer. Some device drivers—such as network drivers—must be loaded from the `config.sys` file (with a `device=` statement) or as memory-resident programs (usually, from the `autoexec.bat` file). Others—such as video drivers—must load when you start the program for which they were designed.

**DHCP**

Acronym for dynamic host configuration protocol. A method of configuring a network in which IP addresses are issued by a server, rather than statically assigned to each system.

**DIMM**

Acronym for dual in-line memory module. A small circuit board containing DRAM chips that connects to the system board.

**DIN**

Acronym for *Deutsche Industrie Norm* which is the standards-setting organization for Germany.

A DIN connector is a connector that conforms to one of the many standards defined by DIN. DIN connectors are used widely in personal computers. For example, the keyboard connector for PCs is a DIN connector.

**DIP**

Acronym for dual in-line package. A circuit board, such as a system board or expansion card, may contain DIP switches for configuring the circuit board. DIP switches

are always toggle switches, with an ON position and an OFF position.

**directory**

Directories help keep related files organized on a disk in a hierarchical, “inverted tree” structure. Each disk has a “root” directory; for example, a `c:\>` prompt normally indicates that you are at the root directory of hard drive C. Additional directories that branch off of the root directory are called *subdirectories*.

Subdirectories may contain additional directories branching off of them.

**display adapter**

See video adapter.

**DMA**

Abbreviation for direct memory access. A DMA channel allows certain types of data transfer between RAM and a device to bypass the microprocessor.

**DMI**

Abbreviation for Desktop Management Interface. DMI enables the management of your computer system's software and hardware. DMI collects information about the system's components, such as the operating system, memory, peripherals, expansion cards, and asset tag. Information about the system's components is displayed as a MIF file.

**DMTF**

Abbreviation for Distributed Management Task Force, a consortium of companies representing hardware and software providers, of which Dell is a member.

**dpi**

Abbreviation for dots per inch.

**DPMS**

Abbreviation for Display Power Management Signaling. A standard developed by the Video Electronics Standards Association (VESA<sup>®</sup>) that defines the hardware signals sent by a video controller to activate power management states in a monitor. A

monitor is said to be DPMS-compliant when it is designed to enter a power management state after receiving the appropriate signal from a computer's video controller.

### **DRAC**

Refers to a remote management capability. See RAC.

### **DRAM**

Acronym for dynamic random-access memory. A computer's RAM is usually made up entirely of DRAM chips. Because DRAM chips cannot store an electrical charge indefinitely, your computer continually refreshes each DRAM chip in the computer.

### **drive-type number**

Your computer can recognize a number of specific hard drives. Each is assigned a drive-type number that is stored in NVRAM. The hard drive(s) specified in your computer's System Setup program must match the actual drive(s) installed in the computer. The System Setup program also allows you to specify physical parameters (logical cylinders, logical heads, cylinder number, and logical sectors per pack) for drives not included in the table of drive types stored in NVRAM.

### **DTE**

Abbreviation for data terminal equipment. Any device, such as a computer system, that can send data in digital form by means of a cable or communications line. The DTE is connected to the cable or communications line through a data communications equipment (DCE) device, such as a modem.

### **ECC**

Abbreviation for error checking and correction.

### **ECP**

Abbreviation for Extended Capabilities Port.

### **EDO**

Acronym for extended data output dynamic random access memory which is a type of DRAM that is faster than conventional DRAM. EDO RAM can start

fetching the next block of memory at the same time that it sends the previous block to the CPU.

### **EEPROM**

Acronym for electrically erasable programmable read-only memory.

### **EIDE**

Abbreviation for enhanced integrated drive electronics. EIDE devices add one or more of the following enhancements to the traditional IDE standard:

- Data transfer rates of up to 16 MB/sec
- Support for drives other than just hard drives, such as CD and tape drives
- Support for hard drives with capacities greater than 528 MB
- Support for up to two controllers, each with up to two devices attached

### **EISA**

Acronym for Extended Industry-Standard Architecture, a 32-bit expansion-bus design. The expansion-card connectors in an EISA computer are also compatible with 8- or 16-bit ISA expansion cards.

To avoid a configuration conflict when installing an EISA expansion card, you must use the EISA Configuration Utility. This utility allows you to specify which expansion slot contains the card and obtains information about the card's required system resources from a corresponding EISA configuration file.

### **EMC**

Abbreviation for Electromagnetic Compatibility.

### **EMI**

Abbreviation for electromagnetic interference.

### **EMM**

Abbreviation for expanded memory manager. A utility that uses extended memory to emulate expanded memory on computers with an Intel386™ or higher microprocessor.

**EMS**

Abbreviation for Expanded Memory Specification.

**EPP**

Abbreviation for Enhanced Parallel Port which provides improved bidirectional data transmission. Many devices are designed to take advantage of the EPP standard, especially devices, such as network or SCSI adapters that connect to the parallel port of a portable computer.

**EPROM**

Acronym for erasable programmable read-only memory.

**ERA**

Acronym for embedded remote access.

**ERA/O**

Acronym for embedded remote access option.

**ESD**

Abbreviation for electrostatic discharge.

**ESM**

Acronym for embedded server management.

**expanded memory**

A technique for accessing RAM above 1 MB. To enable expanded memory on your computer, you must use an EMM. You should configure your system to support expanded memory only if you run application programs that can use (or require) expanded memory.

**expansion bus**

Your computer contains an expansion bus that allows the microprocessor to communicate with controllers for peripheral devices, such as a network card or an internal modem.

**expansion-card connector**

A connector on the computer's system board or riser board for plugging in an expansion card.

**extended memory**

RAM above 1 MB. Most software that can use it, such as the Windows operating system, requires that extended memory be under the control of an XMM.

**external cache memory**

A RAM cache using SRAM chips. Because SRAM chips operate at several times the speed of DRAM chips, the microprocessor can retrieve data and instructions faster from external cache memory than from RAM.

**F**

Abbreviation for Fahrenheit.

**FAT**

Acronym for file allocation table. The file system structure used by MS-DOS<sup>®</sup> to organize and keep track of file storage. The Windows NT<sup>®</sup> operating systems (and later Windows versions) can optionally use a FAT file system structure.

**FCC**

Abbreviation for Federal Communications Commission.

**EEPROM**

Acronym for Flash Erasable Programmable Read-Only Memory. Flash memory is a kind of non-volatile storage device similar to EEPROM, but the erasing is done only in blocks or the entire chip.

**flash bios**

A PC BIOS that is stored in flash memory rather than in a ROM. A flash BIOS chip can be updated in place, whereas a ROM BIOS must be replaced with a newer chip.

**flash memory**

A type of EEPROM chip that can be reprogrammed from a utility on diskette while still installed in a computer; most EEPROM chips can only be rewritten with special programming equipment.

**format**

To prepare a hard drive or diskette for storing files. An unconditional format deletes all data stored on the disk.

**FPBGA**

Acronym for field programmable gate array, a programmable logic chip (PLD) with a high density of gates.

**FRU**

Acronym for field replaceable unit.

**ft**

Abbreviation for feet.

**FTP**

Abbreviation for file transfer protocol.

**g**

Abbreviation for gram(s).

**G**

Abbreviation for gravities.

**GB**

Abbreviation for gigabyte(s). A gigabyte equals 1,024 megabytes or 1,073,741,824 bytes.

**graphics coprocessor**

See coprocessor.

**graphics mode**

A video mode that can be defined as x horizontal by y vertical pixels by z colors.

**group**

As it relates to DMI, a group is a data structure that defines common information, or attributes, about a manageable component.

**GUI**

Acronym for graphical user interface.

**h**

Abbreviation for hexadecimal. A base-16 numbering system, often used in programming to identify addresses in the computer's RAM and I/O memory addresses for devices. The sequence of decimal numbers from 0 through 16, for example, is expressed in hexadecimal notation as: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F, 10. In text, hexadecimal numbers are often followed by *h*.

**heat sink**

A metal plate with metal pegs or ribs that help dissipate heat. Most microprocessors include a heat sink.

**HIP**

Abbreviation for Dell OpenManage™ Hardware Instrumentation Package.

**HMA**

Abbreviation for high memory area. The first 64 KB of extended memory above 1 MB. A memory manager that conforms to the XMS can make the HMA a direct extension of conventional memory. See also *upper memory area* and *XMM*.

**host adapter**

A host adapter implements communication between the computer's bus and the controller for a peripheral device. (Hard drive controller subsystems include integrated host adapter circuitry.) To add a SCSI expansion bus to your system, you must install or connect the appropriate host adapter.

**hot plug**

The ability to remove and replace a redundant part while the system is being used. Also called a "hot spare."

**HPFS**

Abbreviation for the High Performance File System option in the Windows NT and later Windows operating systems.

**Hz**

Abbreviation for hertz.

**ICES**

Abbreviation for Interface-Causing Equipment Standard (in Canada).

**ICU**

Abbreviation for ISA Configuration Utility.

**IDE**

Abbreviation for Integrated Device Electronics. IDE is a computer system interface, used primarily for hard drives and CDs.

**I/O**

Abbreviation for input/output. The keyboard is an input device, and a printer is an output device. In general, I/O activity can be differentiated from computational activity. For example, when a program sends a document to the printer, it is engaging in output activity; when the program sorts a list of terms, it is engaging in computational activity.

**ID**

Abbreviation for identification.

**IHV**

Acronym for independent hardware vendor. IHVs often develop their own MIBs for components that they manufacture.

**interlacing**

A technique for increasing video resolution by only updating alternate horizontal lines on the screen. Because interlacing can result in noticeable screen flicker, most users prefer noninterlaced video adapter resolutions.

**internal microprocessor cache**

An instruction and data cache built in to the microprocessor. The Intel Pentium microprocessor includes a 16-KB internal cache, which is set up as an 8-KB read-only instruction cache and an 8-KB read/write data cache.

**IPX**

Acronym for internetwork packet exchange.

**IRQ**

Abbreviation for interrupt request. A signal that data is about to be sent to or received by a peripheral device travels by an IRQ line to the microprocessor. Each peripheral connection must be assigned an IRQ number. For example, the first serial port in your computer (COM1) is assigned to IRQ4 by default. Two devices can share the same IRQ assignment, but you cannot operate both devices simultaneously.

**ISA**

Acronym for Industry-Standard Architecture. A 16-bit expansion bus design. The expansion-card connectors in an ISA computer are also compatible with 8-bit ISA expansion cards.

**ITE**

Abbreviation for information technology equipment.

**jumper**

Jumpers are small blocks on a circuit board with two or more pins emerging from them. Plastic plugs containing a wire fit down over the pins. The wire connects the pins and creates a circuit. Jumpers provide a simple and reversible method of changing the circuitry in a printed circuit board.

**JVM**

Acronym for Java virtual machine.

**K**

Abbreviation for kilo-, indicating 1,000.

**KB**

Abbreviation for kilobyte(s), 1,024 bytes.

**KB/sec**

Abbreviation for kilobyte(s) per second.

**Kbit(s)**

Abbreviation for kilobit(s), 1,024 bits.

**Kbit(s)/sec**

Abbreviation for kilobit(s) per second.

**key combination**

A command requiring you to press multiple keys at the same time. For example, you can reboot your computer by pressing the <Ctrl><Alt><Del> key combination.

**kg**

Abbreviation for kilogram(s), 1,000 grams.

**kHz**

Abbreviation for kilohertz, 1,000 hertz.

**LAN**

Acronym for local area network. A LAN system is usually confined to the same building or a few nearby buildings, with all equipment linked by wiring dedicated specifically to the LAN.

**lb**

Abbreviation for pound(s).

**LCC**

Acronym for leaded or leadless chip carrier.

**LIF**

Acronym for low insertion force. Some computers use LIF sockets and connectors to allow devices, such as the microprocessor chip, to be installed or removed with minimal stress to the device.

**LED**

Abbreviation for light-emitting diode. An electronic device that lights up when a current is passed through it.

**local bus**

On a computer with local-bus expansion capability, certain peripheral devices (such as the video adapter circuitry) can be designed to run much faster than they would with a traditional expansion bus. Some local-bus designs allow peripherals to run at the same speed and

with the same width data path as the computer's microprocessor.

**LPT*n***

The device names for the first through third parallel printer ports on your computer are LPT1, LPT2, and LPT3.

**LRA**

Acronym for local response agent.

**LS drive**

A drive that uses laser servo technology to read LS 120 diskettes that hold up to 120 MB of data as well as standard 3.5-inch diskettes.

**LSI**

Acronym for large-scale integration.

**LUN**

Acronym for logical unit number, a code used to select a specific device among several that share a SCSI ID.

**mA**

Abbreviation for milliamper(e)s.

**mAh**

Abbreviation for milliamper(e)-hour(s).

**math coprocessor**

See *coprocessor*.

**Mb**

Abbreviation for megabit.

**MB**

Abbreviation for megabyte(s). The term *megabyte* means 1,048,576 bytes; however, when referring to hard drive storage, the term is often rounded to mean 1,000,000 bytes.

**MB/sec**

Abbreviation for megabytes per second.

**Mbps**

Abbreviation for megabits per second.

**MBR**

Abbreviation for master boot record.

**MCA**

Abbreviation for Micro Channel Architecture, which is designed for multiprocessing. MCA eliminates potential conflicts that arise when installing new peripheral devices. MCA is not compatible with either EISA or XT bus architecture, so older cards cannot be used with it.

**memory**

A computer can contain several different forms of memory, such as RAM, ROM, and video memory. Frequently, the word *memory* is used as a synonym for RAM; for example, an unqualified statement such as “a computer with 16 MB of memory” refers to a computer with 16 MB of RAM.

**memory address**

A specific location, usually expressed as a hexadecimal number, in the computer's RAM.

**memory manager**

A utility that controls the implementation of memory in addition to conventional memory, such as extended or expanded memory.

**memory module**

A small circuit board containing DRAM chips that connects to the system board.

**MHz**

Abbreviation for megahertz.

**MIB**

Acronym for management information base. MIB is used to send detailed status/commands from or to an SNMP managed device.

**microprocessor**

The primary computational chip inside the computer that controls the interpretation and execution of arithmetic and logic functions. Software written for one microprocessor must usually be revised to run on another microprocessor. *CPU* is a synonym for microprocessor.

**MIDI**

Abbreviation for musical instrument digital interface.

**MIF**

Acronym for management information format. A MIF file contains information, status, and links to component instrumentation. MIF files are installed into the MIF database by the DMI service layer. The content of a MIF is defined by a DTMF working committee and is published in the form of a MIF definition document. This document identifies the groups and attributes that are relevant to DMI-manageable components.

**mm**

Abbreviation for millimeter(s).

**modem**

A device that allows your computer to communicate with other computers over telephone lines.

**MOF**

Acronym for managed object format, which is an ASCII file that contains the formal definition of a CIM schema.

**mouse**

A pointing device that controls the movement of the cursor on a screen. Mouse-aware software allows you to activate commands by clicking a mouse button while pointing at objects displayed on the screen.

**MPEG**

Acronym for Motion Picture Experts Group. MPEG is a digital video file format.

**ms**

Abbreviation for millisecond(s).

**MS-DOS**

Abbreviation for Microsoft Disk Operating System.

**MTBF**

Abbreviation for mean time between failures.

**multifrequency monitor**

A monitor that supports several video standards. A multifrequency monitor can adjust to the frequency range of the signal from a variety of video adapters.

**mV**

Abbreviation for millivolt(s).

**name**

The name of an object or variable is the exact string that identifies it in an SNMP Management Information Base (MIB) file, or in a DMI Management Information Format (MIF) file, or in a CIM Management Object File (MOF).

**NDIS**

Abbreviation for Network Driver Interface Specification.

**NIC**

Acronym for network interface controller.

**NIF**

Acronym for network interface function. This term is equivalent to NIC.

**NLM**

Abbreviation for NetWare® Loadable Module.

**NMI**

Abbreviation for nonmaskable interrupt. A device sends an NMI to signal the microprocessor about hardware errors, such as a parity error.

**noninterlaced**

A technique for decreasing screen flicker by sequentially refreshing each horizontal line on the screen.

**ns**

Abbreviation for nanosecond(s), one billionth of a second.

**NTFS**

Abbreviation for the NT File System option in the Windows NT operating system and later Windows operating systems.

**NuBus**

Proprietary expansion bus used on Apple Macintosh personal computers.

**NVRAM**

Acronym for nonvolatile random-access memory. Memory that does not lose its contents when you turn off your computer. NVRAM is used for maintaining the date, time, and system configuration information.

**OID**

Abbreviation for object identifier. An implementation-specific integer or pointer that uniquely identifies an object.

**online access service**

A service that typically provides access to the Internet, e-mail, bulletin boards, chat rooms, and file libraries.

**OTP**

Abbreviation for one-time programmable.

**parallel port**

An I/O port used most often to connect a parallel printer to your computer. You can usually identify a parallel port on your computer by its 25-hole connector.

**parameter**

A value or option that you specify to a program. A parameter is sometimes called a *switch* or an *argument*.

**partition**

You can divide a hard drive into multiple physical sections called *partitions* with the **fdisk** command. Each partition can contain multiple logical drives.

After partitioning the hard drive, you must format each logical drive with the **format** command.

**PCI**

Abbreviation for Peripheral Component Interconnect. A standard for local-bus implementation developed by Intel Corporation.

**PCMCIA**

Personal Computer Memory Card International Association. An international trade association that has developed standards for devices, such as modems and external hard drives, that can be plugged into portable computers.

**PERC**

Acronym for PowerEdge® Expandable RAID controller.

**peripheral device**

An internal or external device—such as a printer, a disk drive, or a keyboard—connected to a computer.

**PGA**

Abbreviation for pin grid array, a type of microprocessor socket that allows you to remove the microprocessor chip.

**physical memory array**

The physical memory array is the entire physical memory of a system. Variables for physical memory array include maximum size, total number of memory slots on the motherboard, and total number of slots in use.

**physical memory array mapped**

The physical memory array mapped refers to the way physical memory is divided. For example, one mapped area may have 640 KB and the other mapped area may have between 1 megabyte and 127 megabytes.

**PIC**

Acronym for programmable interrupt controller.

**PIP**

Acronym for peripheral interchange program. A CP/M utility program that was used to copy files.

**pixel**

A single point on a video display. Pixels are arranged in rows and columns to create an image. A video resolution, such as 640 x 480, is expressed as the number of pixels across by the number of pixels up and down.

**PLCC**

Acronym for plastic leaded chip carrier.

**Plug and Play**

An industry-standard specification that makes it easier to add hardware devices to personal computers. Plug and Play provides automatic installation and configuration, compatibility with existing hardware, and dynamic support of mobile computing environments.

**PME**

Abbreviation for Power Management Event. A PME is a pin on a peripheral component interconnect that allows a PCI device to assert a wake event.

**POST**

Acronym for power-on self-test. Before the operating system loads when you turn on your computer, the POST tests various system components such as RAM, the disk drives, and the keyboard.

**power supply**

An electrical system that converts AC current from the wall outlet into the DC currents required by the computer circuitry. The power supply in a personal computer typically generates multiple voltages.

**power unit**

A set of power supplies in a system chassis.

**ppm**

Abbreviation for pages per minute.

**PQFP**

Abbreviation for plastic quad flat pack, a type of microprocessor socket in which the microprocessor chip is permanently mounted.

**probe**

An electronic sensor for measuring a quantity or determining system state at a particular point within a system. Server Administrator can monitor temperature, voltage, fan, memory, current and chassis intrusion probes. The probes provide a snapshot of the measured quantity (such as the temperature at a particular place and time) or state (a chassis intrusion has or has not occurred).

**program diskette set**

The set of diskettes from which you can perform a complete installation of an operating system or application program. When you reconfigure a program, you often need its program diskette set.

**protected mode**

An operating mode supported by 80286 or higher microprocessors, protected mode allows operating systems to implement:

- A memory address space of 16 MB (80286 microprocessor) to 4 GB (Intel386 or higher microprocessor)
- Multitasking
- Virtual memory, a method for increasing addressable memory by using the hard drive

The Windows NT, Windows 2000, Windows XP, OS/2®, and UNIX® 32-bit operating systems run in protected mode. MS-DOS cannot run in protected mode; however, some programs that you can start from MS-DOS, such as the Windows operating system, are able to put the computer into protected mode.

**provider**

A provider is an extension of a CIM schema that communicates with managed objects and accesses data and event notifications from a variety of sources. Providers forward this information to the CIM Object Manager for integration and interpretation.

**PS/2**

Abbreviation for Personal System/2.

**PXE**

Abbreviation for Pre-boot eXecution Environment.

**QFP**

Acronym for quad flat pack.

**RAC**

Acronym for remote access controller. Dell OpenManage Server Administrator supports all RACs. These include the DRAC II, DRAC III, DRAC III/XT, ERA, and ERA/O.

**RAID**

Acronym for redundant array of independent drives.

**RAM**

Acronym for random-access memory. The computer's primary temporary storage area for program instructions and data. Each location in RAM is identified by a number called a *memory address*. Any information stored in RAM is lost when you turn off your computer.

**RAMBUS**

Acronym for Rambus DRAM, a type of memory (DRAM) developed by Rambus, Inc.

**RAMDAC**

Acronym for random-access memory digital-to-analog converter.

**RAW**

Unprocessed. The term refers to data that is passed along to an I/O device without being interpreted. In

contrast, *cooked* refers to data that is processed before being passed to the I/O device.

It often refers to uncompressed text that is not stored in any proprietary format. The term comes from UNIX, which supports cooked and raw modes for data output to a terminal.

### **RDRAM**

Acronym for Rambus DRAM. A dynamic RAM chip technology from Rambus, Inc. Direct RDRAMs are used in computers. Direct RDRAM chips are housed in RIMM modules, which are similar to DIMMs but have different pin settings. The chips can be built with dual channels, doubling the transfer rate to 3.2 GB/sec.

### **read-only file**

A read-only file is one that you are prohibited from editing or deleting. A file can have read-only status if:

- Its read-only attribute is enabled.
- It resides on a physically write-protected diskette or on a diskette in a write-protected drive.
- It is located on a network in a directory to which the system administrator has assigned read-only rights to you.

### **readme file**

A text file included with a software package or hardware product that contains information supplementing or updating the documentation for the software or hardware. Typically, readme files provide installation information, describe new product enhancements or corrections that have not yet been documented, and list known problems or other things you need to be aware of as you use the software or hardware.

### **real mode**

An operating mode supported by 80286 or higher microprocessors, real mode imitates the architecture of an 8086 microprocessor.

### **refresh rate**

The rate at which the monitor redraws the video image on the monitor screen. More precisely, the refresh rate

is the frequency, measured in Hz, at which the screen's horizontal lines are recharged (sometimes also referred to as its *vertical frequency*). The higher the refresh rate, the less video flicker can be seen by the human eye. The higher refresh rates are also noninterlaced.

### **RFI**

Abbreviation for radio frequency interference.

### **RGB**

Abbreviation for red/green/blue.

### **RIMM**

Acronym for Rambus In-line Memory Module, which is the Rambus equivalent of a DIMM module.

### **ROM**

Acronym for read-only memory. Your computer contains some programs essential to its operation in ROM code. Unlike RAM, a ROM chip retains its contents even after you turn off your computer. Examples of code in ROM include the program that initiates your computer's boot routine and the POST.

### **ROMB**

Acronym for RAID on motherboard. When a RAID controller is integrated into a computer's system board, the system has ROMB technology.

### **RPM**

Abbreviation for revolutions per minute.

### **RTC**

Abbreviation for real-time clock. Battery-powered clock circuitry inside the computer that keeps the date and time after you turn off the computer.

### **SCA**

Acronym for single connector attachment.

### **schema**

A collection of class definitions that describes managed objects in a particular environment. A CIM schema is a collection of class definitions used to represent

managed objects that are common to every management environment, which is why CIM is called the Common Information Model.

### **SCSI**

Acronym for small computer system interface. An I/O bus interface with faster data transmission rates than standard ports. You can connect up to seven devices (15 for some newer SCSI types) to one SCSI interface.

### **SDMS**

Abbreviation for SCSI device management system.

### **sec**

Abbreviation for second(s).

### **SEC**

Abbreviation for single-edge contact.

### **serial port**

An I/O port used most often to connect a modem to your computer. You can usually identify a serial port on your computer by its 9-pin connector.

### **settings**

Settings are conditions of a manageable object help to determine what happens when a certain value is detected in a component. For example, a user can set the upper critical threshold of a temperature probe to 75 degrees Celsius. If the probe reaches that temperature, the setting results in an alert being sent to the management console so that user intervention can be taken. Some settings, when reached, can trigger a system shutdown or other response that can prevent damage to the system.

### **service tag number**

A bar code label on the computer that identifies it when you call Dell for customer or technical support.

### **SGRAM**

Acronym for synchronous graphics RAM.

### **shadowing**

A computer's system and video BIOS code is usually stored on ROM chips. Shadowing refers to the performance-enhancement technique that copies BIOS code to faster RAM chips in the upper memory area (above 640 KB) during the boot routine.

### **SIMD**

Abbreviation for Single Instruction Multiple Data.

### **SIMM**

Acronym for single in-line memory module. A small circuit board containing DRAM chips that connects to the system board.

### **SIP**

Acronym for single in-line package, which is a type of housing for electronic components in which the connecting pins protrude from one side. A SIP is also called a Single In-line Pin Package (SIPP).

### **SKU**

Acronym for stock keeping unit.

### **SMART**

Acronym for Self-Monitoring Analysis Reporting Technology. A technology that allows hard drives to report errors and failures to the system BIOS, which then displays an error message on the screen. To take advantage of this technology, you must have a SMART-compliant hard drive and the proper support in the system BIOS.

### **SMBIOS**

Acronym for system management BIOS.

### **SMD**

Acronym for surface mount device.

### **SMTP**

Acronym for Simple Mail Transfer Protocol, a method for exchanging e-mail over the internet.

**SNMP**

Abbreviation for Simple Network Management Protocol. SNMP is an industry-standard interface that allows a network manager to remotely monitor and manage workstations.

**SODIMM**

Acronym for small outline-DIMM. A DIMM module with a thinner profile due to the use of TSOP chip packages. SODIMMs are commonly used in laptop computers.

**SRAM**

Abbreviation for static random-access memory. Because SRAM chips do not require continual refreshing, they are substantially faster than DRAM chips.

**state**

Refers to the condition of an object that can have more than one condition. For example, an object may be in the “not ready” state.

**status**

Refers to the health or functioning of an object. For example, a temperature probe can have the status normal if the probe is measuring acceptable temperatures. When the probe begins reading temperatures that exceed limits set by the user, it reports a critical status.

**SVGA**

Abbreviation for super video graphics array. VGA and SVGA are video standards for video adapters with greater resolution and color display capabilities than previous standards.

To display a program at a specific resolution, you must install the appropriate video drivers and your monitor must support the resolution. Similarly, the number of colors that a program can display depends on the capabilities of the monitor, the video driver, and the amount of video memory installed in the computer.

**switch**

On a computer system board, switches control various circuits or functions in your computer system. These switches are known as *DIP* switches; they are normally packaged in groups of two or more switches in a plastic case. Two common DIP switches are used on system boards: *slide* switches and *rocker* switches. The names of the switches are based on how the settings (on and off) of the switches are changed.

**syntax**

The rules that dictate how you must type a command or instruction so that the computer understands it. A variable's syntax indicates its data type.

**system board**

As the main circuit board, the system board usually contains most of your computer's integral components, such as the following:

- Microprocessor
- RAM
- Controllers for standard peripheral devices, such as the keyboard
- Various ROM chips

Frequently used synonyms for system board are *motherboard* and *logic board*.

**system configuration information**

Data stored in memory that tells a computer what hardware is installed and how the computer should be configured for operation.

**system diskette**

System diskette is a synonym for *bootable diskette*.

**system memory**

System memory is a synonym for *RAM*.

**System Setup program**

A BIOS-based program that allows you to configure your computer's hardware and customize the computer's operation by setting such features as password protection and energy management. Some

options in the System Setup program require that you reboot the computer (or the computer may reboot automatically) in order to make a hardware configuration change. Because the System Setup program is stored in NVRAM, any settings remain in effect until you change them again.

#### **system.ini file**

A start-up file for the Windows operating system. When you start Windows, it consults the **system.ini** file to determine a variety of options for the Windows operating environment. Among other things, the **system.ini** file records which video, mouse, and keyboard drivers are installed for Windows.

Running the Control Panel or Windows Setup program may change options in the **system.ini** file. On other occasions, you may need to change or add options to the **system.ini** file manually with a text editor, such as Notepad.

#### **table**

In SNMP MIBs, a table is a two dimensional array that describes the variables that make up a managed object.

#### **termination**

Some devices (such as the last device at each end of a SCSI cable) must be terminated to prevent reflections and spurious signals in the cable. When such devices are connected in a series, you may need to enable or disable the termination on these devices by changing jumper or switch settings on the devices or by changing settings in the configuration software for the devices.

#### **text editor**

An application program for editing text files consisting exclusively of ASCII characters. Windows Notepad is a text editor, for example. Most word processors use proprietary file formats containing binary characters, although some can read and write text files.

#### **text mode**

A video mode that can be defined as  $x$  columns by  $y$  rows of characters.

#### **threshold values**

Systems are normally equipped with various sensors that monitor temperature, voltage, current, and fan speed. The sensor's threshold values specify the ranges (min and max values) for determining whether the sensor is operating under normal, noncritical, critical or fatal conditions. Dell-supported threshold values are:

- UpperThresholdFatal
- UpperThresholdCritical
- UpperThresholdNon-critical
- Normal
- LowerThresholdNon-critical
- LowerThresholdCritical
- LowerThresholdFatal

#### **time-out**

A specified period of system inactivity that must occur before an energy conservation feature is activated.

#### **tpi**

Abbreviation for tracks per inch.

#### **TQFP**

Acronym for thin quad flat pack.

#### **TSR**

Abbreviation for terminate-and-stay-resident. A TSR program runs "in the background." Most TSR programs implement a predefined key combination (sometimes referred to as a *hot key*) that allows you to activate the TSR program's interface while running another program. When you finish using the TSR program, you can return to the other application program and leave the TSR program resident in memory for later use.

TSR programs can sometimes cause memory conflicts. When troubleshooting, rule out the possibility of such a conflict by rebooting your computer without starting any TSR programs.

**UART**

Acronym for universal asynchronous receiver transmitter, the electronic circuit that makes up the serial port.

**UDP**

Acronym for user datagram protocol.

**UL**

Abbreviation for Underwriters Laboratories.

**UMB**

Abbreviation for upper memory blocks.

**unicode**

A fixed width, 16-bit world wide character encoding, developed and maintained by the Unicode Consortium.

**upper memory area**

The 384 KB of RAM located between 640 KB and 1 MB. If the computer has an Intel386 or higher microprocessor, a utility called a *memory manager* can create UMBs in the upper memory area, in which you can load device drivers and memory-resident programs.

**UPS**

Abbreviation for uninterruptible power supply. A battery-powered unit that automatically supplies power to your computer in the event of an electrical failure.

**USB**

Abbreviation for Universal Serial Bus. A USB connector provides a single connection point for multiple USB-compliant devices, such as mice, keyboards, printers, and computer speakers. USB devices can also be connected and disconnected while the system is running.

**utility**

A program used to manage system resources—memory, disk drives, or printers, for example.

**UTP**

Abbreviation for unshielded twisted pair.

**UUID**

Acronym for Universal Unique Identification.

**V**

Abbreviation for volt(s).

**VAC**

Abbreviation for volt(s) alternating current.

**varbind**

An algorithm used to assign an object identifier or OID. The varbind gives rules for arriving at the decimal prefix that uniquely identifies an enterprise, as well as the formula for specifying a unique identifier for the objects defined in that enterprise's MIB.

**variable**

A component of a managed object. A temperature probe, for example, has a variable to describe its capabilities, its health or status, and certain indexes that you can use to help you in locating the right temperature probe.

**VCCI**

Abbreviation for Voluntary Control Council for Interference.

**VCR**

Abbreviation for video cassette recorder.

**VDC**

Abbreviation for volt(s) direct current.

**VESA**

Acronym for Video Electronics Standards Association.

**VGA**

Abbreviation for video graphics array. VGA and SVGA are video standards for video adapters with greater resolution and color display capabilities than previous standards. To display a program at a specific resolution,

you must install the appropriate video drivers and your monitor must support the resolution. Similarly, the number of colors that a program can display depends on the capabilities of the monitor, the video driver, and the amount of video memory installed for the video adapter.

### **VGA feature connector**

On some systems with a built-in VGA video adapter, a VGA feature connector allows you to add an enhancement adapter, such as a video accelerator, to your computer. A VGA feature connector can also be called a VGA pass-through connector.

### **video adapter**

The logical circuitry that provides—in combination with the monitor—your computer's video capabilities. A video adapter may support more or fewer features than a specific monitor offers. Typically, a video adapter comes with video drivers for displaying popular application programs and operating systems in a variety of video modes.

On some Dell computers, a video adapter is integrated into the system board. Also available are many video adapter cards that plug into an expansion-card connector.

Video adapters often include memory separate from RAM on the system board. The amount of video memory, along with the adapter's video drivers, may affect the number of colors that can be simultaneously displayed. Video adapters can also include their own coprocessor for faster graphics rendering.

### **video driver**

A program that allows graphics-mode application programs and operating systems to display at a chosen resolution with the desired number of colors. A software package may include some “generic” video drivers. Any additional video drivers may need to match the video adapter installed in the computer.

### **video memory**

Most VGA and SVGA video adapters include memory chips in addition to your computer's RAM. The amount

of video memory installed primarily influences the number of colors that a program can display (with the appropriate video drivers and monitor capabilities).

### **video mode**

Video adapters normally support multiple text and graphics display modes. Character-based software displays in text modes that can be defined as  $x$  columns by  $y$  rows of characters. Graphics-based software displays in graphics modes that can be defined as  $x$  horizontal by  $y$  vertical pixels by  $z$  colors.

### **video resolution**

Video resolution—800 x 600, for example—is expressed as the number of pixels across by the number of pixels up and down. To display a program at a specific graphics resolution, you must install the appropriate video drivers and your monitor must support the resolution.

### **virtual memory**

A method for increasing addressable RAM by using the hard drive. For example, in a computer with 16 MB of RAM and 16 MB of virtual memory set up on the hard drive, the operating system would manage the system as though it had 32 MB of physical RAM.

### **virus**

A self-starting program designed to inconvenience you. Virus programs have been known to corrupt the files stored on a hard drive or to replicate themselves until a computer or network runs out of memory.

The most common way that virus programs move from one computer to another is via “infected” diskettes, from which they copy themselves to the hard drive. To guard against virus programs, you should do the following:

- Periodically run a virus-checking utility on your computer's hard drive
- Always run a virus-checking utility on any diskettes (including commercially sold software) before using them

**VLSI**

Abbreviation for very-large-scale integration.

**VLVESA**

Acronym for very low voltage enterprise system architecture.

**vpp**

Abbreviation for peak-point voltage.

**VRAM**

Acronym for video random-access memory. Some video adapters use VRAM chips (or a combination of VRAM and DRAM) to improve video performance. VRAM is dual-ported, allowing the video adapter to update the screen and receive new image data at the same time.

**W**

Abbreviation for watt(s).

**Wakeup on LAN**

The ability for the power in a client station to be turned on by the network. Remote wake-up enables software upgrading and other management tasks to be performed on users' machines after the work day is over. It also enables remote users to gain access to machines that have been turned off. Intel calls remote wake-up "Wake-on-LAN."

**WH**

Abbreviation for watt-hour(s).

**win.ini file**

A start-up file for the Windows operating system. When you start Windows, it consults the **win.ini** file to determine a variety of options for the Windows operating environment. Among other things, the **win.ini** file records what printer(s) and fonts are installed for Windows. The **win.ini** file also usually includes sections that contain optional settings for

Windows application programs that are installed on the hard drive.

Running the Control Panel or Windows Setup program may change options in the **win.ini** file. On other occasions, you may need to change or add options to the **win.ini** file manually with a text editor such as Notepad.

**write-protected**

Read-only files are said to be *write-protected*. You can write-protect a 3.5-inch diskette by sliding its write-protect tab to the open position or by setting the write-protect feature in the System Setup program.

**XMM**

Abbreviation for extended memory manager, a utility that allows application programs and operating systems to use extended memory in accordance with the XMS.

**XMS**

Abbreviation for eXtended Memory Specification.

**ZIF**

Acronym for zero insertion force. Some computers use ZIF sockets and connectors to allow devices such as the microprocessor chip to be installed or removed with no stress applied to the device.

**ZIP**

A 3.5-inch removable disk drive from Iomega. Originally, it provided a 100-MB removable cartridges. The drive is bundled with software that can catalog the disks and lock the files for security.

A 250-MB version of the Zip drive also reads and writes the 100-MB Zip cartridges.

