
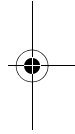
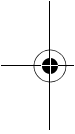


Upgrading From Dell™ PERC 3 to PERC 4

This document describes the procedure to upgrade from the Dell™ PERC 3 (PowerEdge™ Expandable RAID Controller) on your Dell System to a PERC 4.

 **NOTE:** It is recommended that you back up the data on your system before upgrading the storage controller.

- 1 Turn off the system.
- 2 Uninstall the PERC 3 and install the PERC 4. For more information about replacing parts, see your *Hardware Owner's Manual*.
- 3 Ensure that all the required disks are connected and verify that all the cables are connected properly.
- 4 Turn on the system.
- 5 Press <Ctrl+M> to enter the **PERC/CERC BIOS Configuration Utility** menu.
- 6 Select **Objects**→**Adapter**→**PERC 4/DC** to choose the PERC 4 from the list of available adapters.
- 7 In the **PERC/CERC BIOS Configuration Utility** menu, select **Configure**→**View Configuration**→**View Disk Configuration** as shown in Figure 1-1.



February 2008




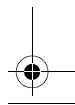 


Figure 1-1. The PERC/CERC BIOS Configuration Utility Menu

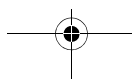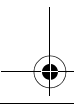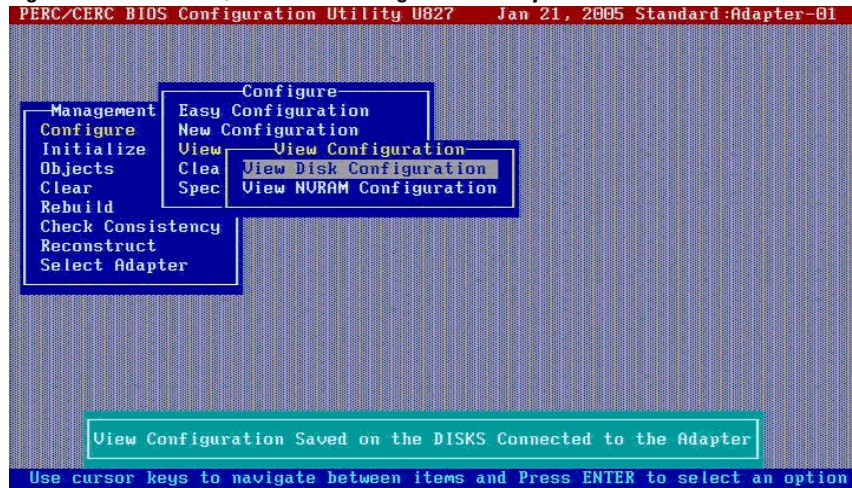

- 8 The existing RAID configuration is displayed in the **Logical Drives Configured** screen. Verify and save the RAID configuration.
- ➔ **NOTICE:** Do not initialize the RAID volumes.
- 9 Reboot the system. The system is now ready for use.

**Information in this document is subject to change without notice.
© 2008 Dell Inc. All rights reserved.**

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, and *PowerEdge* are trademarks of Dell Inc.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

February 2008 Rev. A00