



Index

A

- alert log messages, 3-14
- assistance
 - technical, 10-1
 - telephone numbers, 10-7
 - warranty repair or credit, 10-4
- AutoTech service, 10-3
- avoiding interrupt assignment
 - software, 4-3

B

- back-panel
 - connectors, 2-3
- battery
 - removing, 8-14
 - replacing, 8-14
- beep codes, 3-9

C

- calling Dell, 10-7
- connections and switches
 - troubleshooting, 2-2
- connectors
 - back-panel, 2-3
- cooling fans
 - removal and replacement, 7-11

- troubleshooting, 7-11

- cover
 - opening, 7-3

D

- Dell Diagnostics
 - Device Groups menu, 5-3
 - features, 5-1
 - using, 5-2
- diagnosing problems, 10-1
- Diagnostics Checklist, 10-6
- diagnostics. *See* Dell Diagnostics
- DIMMs
 - configurations, 8-8
 - installing, 8-7
 - removing, 8-10
 - supported types, 8-7
- diskette drive
 - troubleshooting, 7-18

E

- error messages
 - software, 4-2
- expansion card
 - installing, 8-3
- expansion cards
 - illustrated, 8-2

- installing, 8-2
- removing, 8-5
- troubleshooting, 7-13

F

- fixing problems, 10-1
- forgotten password
 - disabling, A-5
- front bezel
 - removal and replacement, 7-2

G

- getting help, 10-1

H

- hard-disk drives
 - indicator codes, 3-14
 - installation, 9-2
 - partitioning and formatting, 9-1
 - preparation for installation, 9-1
 - troubleshooting, 7-21
- help tools
 - AutoTech service, 10-3
 - Internet, 10-2
 - TechFax service, 10-3

I

- I/O
 - connections, 2-3
- input errors
 - software, 4-2
- installing
 - DIMMs, 8-7
 - expansion card, 8-3
 - hard-disk drives, 9-2
 - microprocessor, 8-10

- PERC host adapter card, 8-5
- installing and configuring software, 4-1
- Internet help tools, 10-2
- IRQ lines, 4-3

J

- jumpers
 - about, A-1
 - illustrated, A-2
 - settings (table), A-2

K

- keyboard
 - connector, 2-3

M

- memory, 7-15
 - installing, 8-9
 - removing, 8-10
- messages
 - alert log (PowerEdge 1550 only), 3-14
 - beep codes, 3-9
 - hard-disk drive indicator codes, 3-14
 - system, 3-1
 - system diagnostics, 3-14
 - warning, 3-13
- microprocessor
 - removing, 8-12
 - upgrading, 8-10
- mouse
 - connector, 2-3

N

- NIC
 - connector, 2-3

P

- partitioning and formatting
 - hard-disk drives, 9-1
- password
 - disabling, A-5
- PERC host adapter card
 - installing, 8-5
- power supply
 - removal, 7-9
 - replacing, 7-10
 - troubleshooting, 7-8
- problems
 - help tools, 10-1
 - with your order, 10-3
- product information, 10-4
- program conflicts
 - software, 4-2

R

- removing and replacing
 - battery, 8-14
 - cooling fans, 7-11
 - front bezel, 7-2
 - microprocessor, 8-12
 - power supply, 7-9
 - riser board, 7-13
- returns, 10-4
- riser board
 - removal and replacement, 7-13

S

- safety precautions, 7-1
- Safety, Regulatory, and Warranty Information, 1-1
- SCSI
 - connector, 2-3
- SCSI backplane board

- connectors, A-4
 - illustrated, A-4
- SCSI hard-disk drives
 - troubleshooting, 7-21
- serial port
 - connectors, 2-3
- service, 10-1
- software
 - analyzing problems, 4-1
 - avoiding interrupt assignment, 4-3
 - configuring, 4-1
 - error messages, 4-2
 - input errors, 4-2
 - installing, 4-1
 - program conflicts, 4-2
- support
 - technical, 10-1
- system
 - front bezel, 7-2
 - interior layout, 7-4
- system battery
 - replacing, 8-14
 - troubleshooting, 7-7
- system board
 - connectors, A-3
 - illustrated, 8-2
 - jumpers, A-2
 - troubleshooting, 7-17
- system memory
 - troubleshooting, 7-15
- system messages, 3-1
- System Setup program, 2-8

T

- TechFax service, 10-3
- technical assistance
 - obtaining, 10-1
 - warranty repair or credit, 10-4
- Troubleshooting, 6-3

- troubleshooting, 7-15
 - basic I/O functions, 6-3
 - basic problems, 2-1
 - connections and switches, 2-2
 - cooling fans, 7-11
 - Diagnostics Checklist, 10-6
 - diskette drive, 7-18
 - expansion cards, 7-13
 - integrated NIC, 6-6
 - Internet tools, 10-2
 - keyboard, 6-2
 - monitor, 6-1
 - power supply, 7-8
 - safety precautions, 7-1
 - SCSI hard-disk drives, 7-21
 - serial I/O devices, 6-4
 - system battery, 7-7
 - system board, 7-17
 - system memory, 7-15
 - USB devices, 6-5
 - video subsystem, 7-16
 - wet computer, 7-6

- water damage, 7-6
- World Wide Web help tools, 10-2

U

- upgrade options
 - DIMMs, 8-7
 - microprocessors, 8-10
- USB
 - connector, 2-3

V

- video
 - connector, 2-3
- video subsystem
 - troubleshooting, 7-16

W

- warning messages, 3-13
- warranty repair or credit, 10-4