



# Contents

<b>Chapter 1</b>	<b><i>Introduction</i></b> . . . . .	<b>1-1</b>
	Safety, Regulatory, and Warranty Information . . . . .	1-1
<b>Chapter 2</b>	<b><i>Checking the Basics</i></b> . . . . .	<b>2-1</b>
	Backing Up Files . . . . .	2-1
	Basic Checks . . . . .	2-1
	Checking Connections and Switches . . . . .	2-2
	Look and Listen . . . . .	2-4
	The System Setup Program . . . . .	2-8
<b>Chapter 3</b>	<b><i>Messages and Codes</i></b> . . . . .	<b>3-1</b>
	<b>System Messages</b> . . . . .	<b>3-1</b>
	<b>System Beep Codes</b> . . . . .	<b>3-9</b>
	Warning Messages . . . . .	3-13
	Diagnostics Messages . . . . .	3-14
	Alert Log Messages From the Dell OpenManage Server Agent . . . . .	3-14
	SCSI Hard-Disk Drive Indicator Codes . . . . .	3-14
<b>Chapter 4</b>	<b><i>Finding Software Solutions</i></b> . . . . .	<b>4-1</b>
	Installing and Configuring Software . . . . .	4-1
	Using Software . . . . .	4-2
	Error Messages . . . . .	4-2
	Input Errors . . . . .	4-2
	Program Conflicts . . . . .	4-2
	Avoiding Interrupt Assignment Conflicts . . . . .	4-3
<b>Chapter 5</b>	<b><i>Running the Dell Diagnostics</i></b> . . . . .	<b>5-1</b>

Features of the Dell Diagnostics . . . . .	5-1
When to Use the Dell Diagnostics . . . . .	5-1
Starting the Dell Diagnostics . . . . .	5-2
For PowerApp Systems . . . . .	5-2
For PowerEdge Systems . . . . .	5-2
How to Use the Dell Diagnostics . . . . .	5-2
How to Use the Device Groups Menu . . . . .	5-3
Device Groups Menu Options . . . . .	5-3
Run Tests . . . . .	5-4
Devices . . . . .	5-4
Select . . . . .	5-5
Config. . . . .	5-5
Error Messages . . . . .	5-6

**Chapter 6      *Checking the Equipment* . . . . . 6-1**

Troubleshooting the Monitor . . . . .	6-1
Troubleshooting the Keyboard . . . . .	6-2
Troubleshooting the Basic I/O Functions . . . . .	6-3
Troubleshooting a Serial I/O Device . . . . .	6-4
Troubleshooting a USB Device . . . . .	6-5
Troubleshooting the Integrated NICs . . . . .	6-6

**Chapter 7      *Checking Inside the Computer* . . . . . 7-1**

Safety First—For You and Your Computer . . . . .	7-1
Removing and Replacing the Optional Front Bezel . . . . .	7-2
Removing the Optional Front Bezel . . . . .	7-2
Replacing the Optional Front Bezel . . . . .	7-2
Opening the Computer Cover . . . . .	7-3
<b>Inside the Chassis . . . . . 7-4</b>	
Troubleshooting a Wet Computer . . . . .	7-6
Troubleshooting a Damaged System . . . . .	7-6
Troubleshooting the Battery . . . . .	7-7
Troubleshooting the Power Supply . . . . .	7-8
Removing a Power Supply . . . . .	7-9
Replacing a Power Supply . . . . .	7-10
<b>Troubleshooting a Cooling Fan . . . . . 7-11</b>	
Removing and Replacing the Riser Board . . . . .	7-13
Removing the Riser Board . . . . .	7-13
Replacing the Riser Board . . . . .	7-13
<b>Troubleshooting Expansion Cards . . . . . 7-13</b>	
<b>Troubleshooting System Memory . . . . . 7-15</b>	
Troubleshooting the Video Subsystem . . . . .	7-16

Troubleshooting the System Board . . . . .	7-17
<b>Troubleshooting the Diskette Drive Subsystem . . . . .</b>	<b>7-18</b>
Troubleshooting an External SCSI Tape Drive . . . . .	7-19
<b>Troubleshooting SCSI Hard-Disk Drives . . . . .</b>	<b>7-21</b>
Troubleshooting a RAID Controller . . . . .	7-24

**Chapter 8**

***Installing System Board Options . . . . . 8-1***

Expansion Cards . . . . .	8-2
Installing an Expansion Card . . . . .	8-3
Removing an Expansion Card . . . . .	8-5
Installing a RAID Controller . . . . .	8-5
Adding Memory . . . . .	8-7
Memory Upgrade Kits . . . . .	8-7
DIMM Installation Guidelines . . . . .	8-7
Performing a Memory Upgrade . . . . .	8-8
Installing DIMMs . . . . .	8-9
Removing DIMMs . . . . .	8-10
<b>Upgrading the Microprocessor or Installing a Secondary Microprocessor . . . . .</b>	<b>8-10</b>
Removing a Terminator Module . . . . .	8-11
Installing a Terminator Module . . . . .	8-11
Removing the Microprocessor and Heat Sink . . . . .	8-12
Replacing the Microprocessor and Heat Sink . . . . .	8-12
Replacing the Battery . . . . .	8-14

**Chapter 9**

***Installing Hard-Disk Drives . . . . . 9-1***

<b>Preparing SCSI Hard-Disk Drives for Installation . . . . .</b>	<b>9-1</b>
<b>SCSI Hard-Disk Drive Configuration . . . . .</b>	<b>9-1</b>
<b>Partitioning and Formatting SCSI Hard-Disk Drives . . . . .</b>	<b>9-1</b>
Installing SCSI Hard-Disk Drives . . . . .	9-2
Replacing a CD-ROM Drive . . . . .	9-3
Replacing a Diskette Drive . . . . .	9-4
<b>Configuring the Boot Device . . . . .</b>	<b>9-5</b>

**Chapter 10**

***Getting Help . . . . . 10-1***

Technical Assistance . . . . .	10-1
Help Tools . . . . .	10-2
World Wide Web . . . . .	10-2
AutoTech Service . . . . .	10-3
TechFax Service . . . . .	10-3
Automated Order-Status System . . . . .	10-3
Technical Support Service . . . . .	10-3
Problems With Your Order . . . . .	10-3

Product Information . . . . .	10-4
Returning Items for Warranty Repair or Credit . . . . .	10-4
Before You Call . . . . .	10-4
Dell Contact Numbers . . . . .	10-7

<b>Appendix A</b>	<b><i>Jumpers and Connectors . . . . .</i></b>	<b><i>A-1</i></b>
	<b>Jumpers—A General Explanation . . . . .</b>	<b>A-1</b>
	<b>Jumpers . . . . .</b>	<b>A-1</b>
	<b>System Board Jumpers . . . . .</b>	<b>A-2</b>
	<b>System Board Connectors . . . . .</b>	<b>A-3</b>
	<b>SCSI Backplane Board Connectors . . . . .</b>	<b>A-4</b>
	<b>Disabling a Forgotten Password . . . . .</b>	<b>A-5</b>
	<b><i>Abbreviations and Acronyms . . . . .</i></b>	<b><i>1</i></b>
	<b><i>Index . . . . .</i></b>	<b><i>1</i></b>

<b>Figures</b>	Figure 2-1. Back-Panel Connectors . . . . .	2-3
	Figure 2-2. Front-Panel Connectors and LED Indicators . . . . .	2-5
	Figure 3-1. Hard-Disk Drive Indicators . . . . .	3-15
	Figure 6-1. NIC LEDs . . . . .	6-6
	Figure 7-1. Removing the Computer Bezel . . . . .	7-3
	Figure 7-2. Opening the Computer Cover . . . . .	7-4
	Figure 7-3. Inside the System . . . . .	7-5
	Figure 7-4. System Power Status Indicator . . . . .	7-9
	Figure 7-5. Power Supply Features and Removal . . . . .	7-10
	Figure 7-6. Removing a Cooling Fan . . . . .	7-12
	Figure 8-1. System Board Features . . . . .	8-2
	Figure 8-2. Installing an Expansion Card . . . . .	8-3
	Figure 8-3. Installing a Full-Length Expansion Card . . . . .	8-4
	Figure 8-4. DIMM Sockets . . . . .	8-7
	Figure 8-5. Installing a DIMM . . . . .	8-9
	Figure 8-6. Removing a DIMM . . . . .	8-10
	Figure 8-7. Removing a Terminator Module . . . . .	8-11
	Figure 8-8. Replacing a Microprocessor and Heat Sink . . . . .	8-13
	Figure 8-9. Installing the Battery . . . . .	8-15
	Figure 9-1. SCSI Hard-Disk Drive Carrier . . . . .	9-2

Figure 9-2.	Replacing a CD-ROM Drive . . . . .	9-3
Figure 9-3.	Replacing a Diskette Drive . . . . .	9-4
Figure 10-1.	Diagnostics Checklist . . . . .	10-6
Figure A-1.	System Board Jumpers . . . . .	A-2
Figure A-2.	Connectors on the SCSI Backplane Board . . . . .	A-4

## ***Tables***

Table 2-1.	Front-Panel LED Indicators . . . . .	2-6
Table 2-2.	Boot Routine Indications . . . . .	2-7
Table 3-1.	System Messages . . . . .	3-2
Table 3-2.	System Beep Codes . . . . .	3-9
Table 3-3.	SCSI Hard-Disk Drive Indicator Patterns . . . . .	3-15
Table 4-1.	IRQ Line Assignment Defaults . . . . .	4-3
Table 5-1.	Devices Options . . . . .	5-4
Table 5-2.	Parameters Options . . . . .	5-5
Table 8-1.	Sample DIMM Configurations . . . . .	8-8
Table 10-1.	International Dialing Codes . . . . .	10-8
Table 10-2.	Dell Contact Numbers . . . . .	10-9
Table A-1.	System-Board Jumper Settings . . . . .	A-2
Table A-2.	System Board Connectors and Sockets . . . . .	A-3
Table A-3.	SCSI Backplane Board Connectors . . . . .	A-4

